

Industrial L3 Managed Ethernet Switch User Manual KN-LGIPR38-28AD

Content

Overview	4
Basic Settings	
System	10
IPv4 (VLAN IP)	11
IPv6 (VLAN IP)	14
System Time	16
Precision Time Protocol (PTP)	19
Redundancy	
Spanning Tree	27
ERPS	38
MRP	45
Management	
SNMP	50
DHCP	55
PoE	63
Industrial Protocols.....	69
UPnP	86
L2 Switching	
Port Management.....	87
IGMP Snooping	97
802.1Q VLAN.....	102
Quality of Service.....	107
Port Trunk	111
L3 Routing	
Static Route	114
OSPFv2	121
OSPFv3	131
RIPv1/v2.....	135
RIPng	146
VRRP	149
PIM-SM	152
Security	

Storm Control.....	157
802.1X.....	158
Service Control.....	163
Access Control List.....	165
SSH.....	168
Diagnostics	
Port Mirroring.....	171
Ping.....	173
Cable Diagnostic.....	176
Monitoring	
LLDP.....	177
System Warning.....	179
Data Collection.....	186
MAC Table.....	192
Maintenance	
Authorization.....	195
Firmware Upgrade.....	199
Config Backup.....	204
Config Restore.....	206
USB Auto-Load & Auto-Backup.....	207
SFTP File Access.....	208
Command Line Interface	
Connect to CLI via Console Port.....	209
Connect to CLI via Telnet.....	211
PIM-SM	
.....	152

Overview

CONFIGURATION VIA WEB CONSOLE

1. Open the web browser. We recommend using "**Google Chrome**".


Note: If the web browser is not supported, the warning message will be showed up.




2. Enter the **IP Address** in the **URL** field to connect to the switch and click "Enter" key.

Note: The default IP Address is "**192.168.10.1**".

The **Login Page** is displayed.

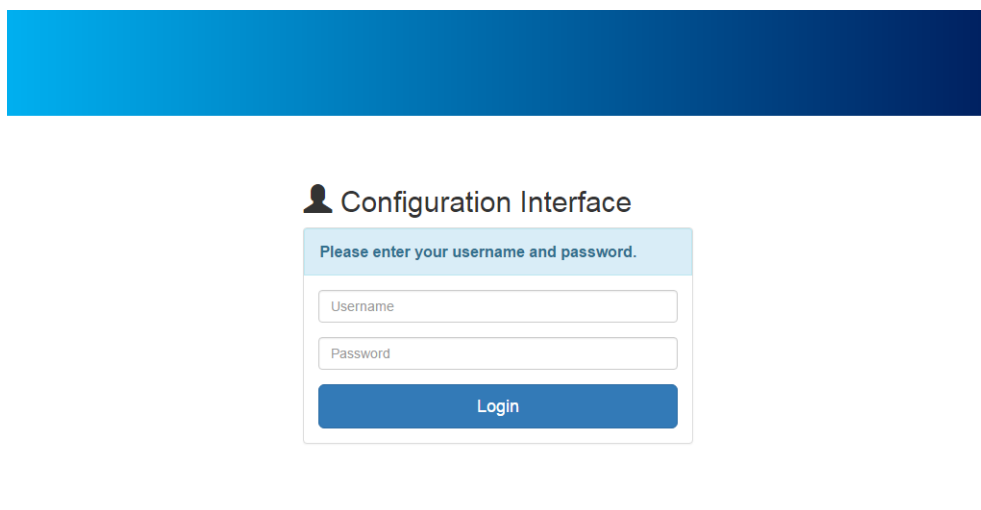

3. Enter the **Username** and **Password**, and click "**Login**" Button to login to the system.
- Note: The default Username and Password is **admin / admin**.
- After logging into the system, the "**Overview**" page is displayed.

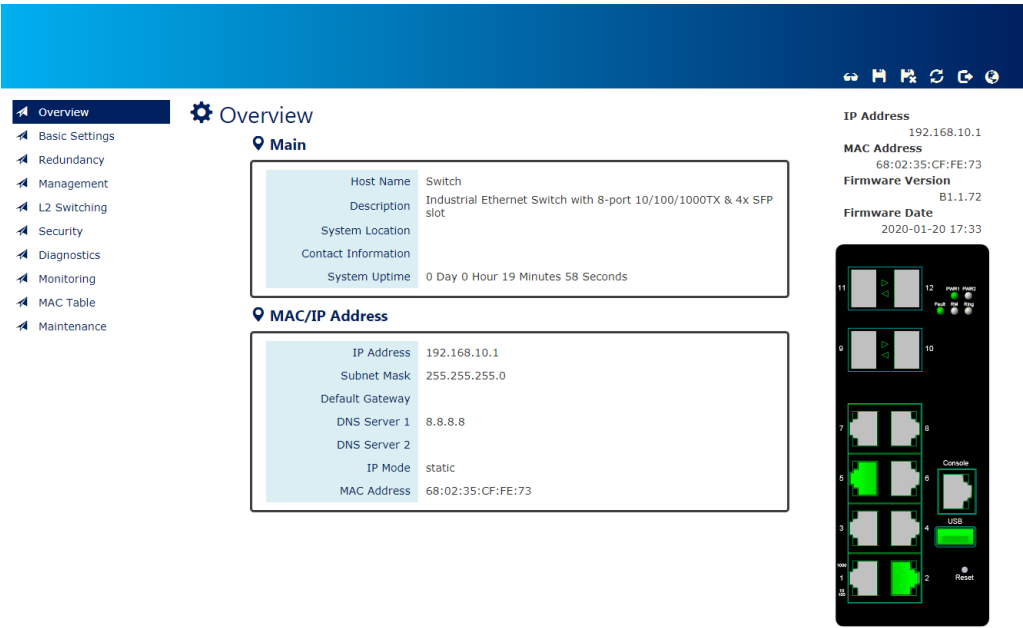

GLOBAL FUNCTIONS

Five global functions are provided in the header field.

1.  [Hide/Show Model Information](#)

When a low-resolution environment is used to configure the system via the web console, the "Model Information" field can be hidden to have a better view.

Show Model Information:

RSTP/CIST Status

Bridge Information

Bridge ID	8.000.68:02:35:FF:FF:77
Root Priority	32768
Root Bridge	No
Root Port	Port8
Root Path Cost	0
Hello Time	2
Forward Delay	15
Max Age	20

Port Status

No.	Role	Path State	Port Cost	Port Priority	Oper P2P	Oper Edge
Port1	Designated	Forwarding	200000	128	P2P	Edge
Port2	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port3	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port4	Designated	Forwarding	200000	128	P2P	Edge
Port5	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port6	Disabled	Discarding	20000	128	P2P	Non-Edge
Port7	Disabled	Discarding	200000	128	P2P	Non-Edge
Port8	Root	Forwarding	20000	128	P2P	Non-Edge
Port9	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port10	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port11	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port12	Disabled	Discarding	200000000	128	Shared	Non-Edge

IP Address 192.168.10.168
MAC Address 68:02:35:FF:FF:77
Firmware Version 1.1.0
Firmware Date 2017-10-02 00:00

Hide Model Information:

RSTP/CIST Status

Bridge Information

Bridge ID	8.000.68:02:35:FF:FF:77
Root Priority	32768
Root Bridge	No
Root Port	Port8
Root Path Cost	0
Hello Time	2
Forward Delay	15
Max Age	20

Port Status

No.	Role	Path State	Port Cost	Port Priority	Oper P2P	Oper Edge
Port1	Designated	Forwarding	200000	128	P2P	Edge
Port2	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port3	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port4	Designated	Forwarding	200000	128	P2P	Edge
Port5	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port6	Disabled	Discarding	20000	128	P2P	Non-Edge
Port7	Disabled	Discarding	200000	128	P2P	Non-Edge
Port8	Root	Forwarding	20000	128	P2P	Non-Edge
Port9	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port10	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port11	Disabled	Discarding	200000000	128	Shared	Non-Edge
Port12	Disabled	Discarding	200000000	128	Shared	Non-Edge

2. Save Configuration

After configuring, click the icon to save the configurations to the "startup-config" file. The configurations are retained in the system until a factory reset default is done.

3. Restore Factory Default

Removes the configurations saved in the system. After restoring factory default, all the settings will be set to default values.

4. [Reboot System](#)

Reboots the device and restarts the system.

5. [System Logout](#)

This option enables you to sign out from the system. Users have to login again if they want to configure the settings.

The system will **auto-logout** after the "timeout" timer expires. The "timeout" timer is configured in the CLI mode by using the "exec-timeout" command.

The maximum value of the timer in the web console is **30 mins**.

6. [Change Language](#)

We support multi-language from firmware version **1.1.72**. The default language is **English** and **Traditional Chinese** is also supported by default. If you need other languages, please contact us.



A USER-FRIENDLY DATA TABLE

A user-friendly data table is provided on the “**IPv6 Neighbor Table**”, “**IGMP Snooping Table**”, “**VLAN Table**”, “**LLDP Neighbor Table**”, and “**MAC Address Table**”. The following section details how to use the data table functions to help the users to observe the information easily.

The following example is “**MAC Address Table**”.

Show

10

 entries

Search:

VID	MAC Address	Type	Source
VLAN 1	EC:08:6B:06:96:53	Learning	2
VLAN 1	1C:49:7B:6A:F3:41	Learning	5
VLAN 1	1C:1B:0D:66:75:EB	Learning	5
VLAN 1	01:00:5E:7F:FF:FA	Static	2
VLAN 1	40:8D:5C:EA:92:02	Learning	5
VLAN 1	9C:EB:E8:3A:54:E7	Learning	5
VLAN 1	40:8D:5C:EA:8D:C3	Learning	5
VLAN 1	1C:1B:0D:66:F7:F8	Learning	5
VLAN 1	FC:3F:DB:53:19:8E	Learning	5
VLAN 1	A4:02:B9:80:7D:66	Learning	5

Showing 1 to 10 of 10 entries

First

Previous

Next

Last

☐ Auto Refresh

Refresh

Refresh Rate:

5

 seconds 

- Show

10

 entries

Users will be able to select a value to display the number of entries in one page. The following values can be selected - “**10**”, “**25**”, “**50**”, and “**100**” selections. By default, “**10**” is selected.

- Search:

The search option enables you to search a key word in the data. It will search all the columns and identify the data rows that match the search criteria.

- Showing 1 to 10 of 31 entries

It displays the total number of entries and the current entry number.

-  and 

This option orders the field from **smaller to larger** or from **larger to smaller**.

- | | | | |
|-------|----------|------|------|
| First | Previous | Next | Last |
|-------|----------|------|------|

Changes to “First”, “Previous”, “Next”, or “Last” page.

In addition to the above functions, “**Refresh**” and “**Auto Refresh**” function are available for all status page including “**IPv6 Neighbor Table**”, “**RSTP Port Status**”, “**DHCP Leased Table**”, “**Port Status**”, “**IGMP Snooping Table**”, “**VLAN Table**”, “**Trunking Status**”, “**LLDP Neighbor Table**”, and “**MAC Address Table**”.

- ☐ Auto Refresh

Selecting this checkbox enables the “Auto Refresh” function and deselecting the checkbox disables the “Auto Refresh” function.

- Refresh Rate: seconds 

The Refresh Rate option is a **global** configurable variable. When the Auto Refresh option is enabled, the status will refresh automatically based on the Refresh Rate interval.

The range of the Refresh Rate is **from 5 to 300** second(s).

The default Refresh Rate is **5** seconds.

-  (Refresh Button)

You can click the “**Refresh**” button to manually refresh the status.

System Information

CONFIGURE SYSTEM INFORMATION

System Information

System Name	Switch	
System Description	Industrial Ethernet Switch with 8-port 10/	
System Location		
System Contact		

[Apply](#)

For more information, hover the mouse over the  icon in the system.

- Host Name**
 It is useful to identify the difference between the switches, for example: CoreSwitch01.
 The **max. length** for the Host Name is **32 characters**.
Note: #, \, ', ", ? are **invalid** characters.
- System Description**
 The System Description is default defined by the system.
 It contains the copper port number, fiber port number, and PoE information (if supported).
 The **max. length** for the System Description is **68 characters**.
Note: #, \, ', ", ? are **invalid** characters.
- Switch Location**
 It is useful to find the location of the switches, for example: Area01.
 The **max. length** for the Switch Location is **32 characters**.
Note: #, \, ', ", ? are **invalid** characters.
- Contact Information**
 Records the information of the person responsible for this device and also the contact details.
Note: #, \, ', ", ? are **invalid** characters.

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

IPv4 (VLAN IP)

Internet Protocol Version 4 (IPv4) is the fourth version of the Internet Protocol. It is used on the packet-switched networks and with connectionless communication. IPv4 has four bytes (32 bits) address and the address space is limited to 4,294,967,296 (2^{32}) unique addresses. On the local area network (LAN), the "Private Network" is used. It starts from **192.168.0.0** and the address space contains 65,025 (2^{16}) IP addresses. The frames can only be sent to the host in the same subnet. For example, the default IP Address of the switch is "192.168.10.1". When the users want to connect to the web console of the switch, an IP address from "192.168.10.2" to "192.168.10.254" must be assigned to the host.

We usually configure VLANs to divide broadcast domains in the Local Area Network (LAN). To communicate with others in another VLAN, we need the device to support inter-VLAN routing. Users can use VLANs to create Layer 3 interfaces by assigning IP address in different subnets to the VLAN. Before configuring any kind of routing protocols, users have to make sure the VLAN IP Address is configured.

The Loopback Interface is a virtual interface for management or identity. It is more stable than physical interface and never goes down when physical interface fails. However, currently there are some limitations in our switches.

- Loopback Interface is only supported on the **IPv4**
- Only support **one** Loopback Interface
- The IP Address of Loopback must be different from the IP Addresses of Interfaces (VLANs).

CONFIGURE IPv4 INFORMATION

IPv4

Basic Settings

DNS Server 1	8.8.8.8
DNS Server 2	

Loopback Settings

IP Address 	
Subnet Mask	

Interface Settings

VLAN ID	IP Address 	Subnet Mask	
1	192.168.10.1	255.255.255.0	✕
100	192.168.100.1	255.255.255.0	✕

Apply

- [DNS Server 1 / 2](#)
 Specifies the IP address of the DNS Server so that the users can connect to another device based on the **URL** instead of the IP address.
 The default DNS Server 1 is "**8.8.8.8**". It is provided by Google.
 The default DNS Server 2 is **BLANK**.
- [Loopback Settings](#)
 - [IP Address](#)
 Assign a unique static IP Address for **Loopback Interface**.
 Note: the IP Address of Loopback must be different from the IP Addresses of Interfaces (VLANs).
 - [Subnet Mask](#)
 Define the type of network of **Loopback Interface**.
- [Interface Settings](#)
 - [VLAN ID](#)
 Users have to create VLAN in the VLAN Settings Page before configure its IP Address.
 - [IP Address](#)

Assign a unique static IP Address for the VLAN ID.

The default IP Address for VLAN 1 is "**192.168.10.1**".

- Subnet Mask

Define the type of network, to which this device is connected to.

The default Subnet Mask for VLAN 1 is "**255.255.255.0**".

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

IPv6 (VLAN IP)

Internet Protocol Version 6 (IPv6) is a solution to deal with the address space limitation of IPv4 and it is the most recent version of Internet Protocol. It is intended to replace IPv4. IPv6 is a **Layer 3** (Internet Layer) protocol, which is used on the packet-switched networks and with connectionless communication. There are 16 bytes (128 bits) for an IPv6 address and the address space is up to 2^{128} unique addresses. The IPv6 address is usually represented in hexadecimal digits, 8 groups of 4 digits, and each group is separated by a ":" (**colon**). For example, the DNS server address in IPv6 is "2001:4860:4860:0000:0000:0000:8888".

CONFIGURE IPv6 INFORMATION

IPv6 Settings

IPv6 Interface Settings

VLAN ID	IPv6 Address?	/	Prefix	
1		/		✕
100		/		✕
200		/		✕

Apply

For more information, hover the mouse over the  icon in the system.

- [VLAN ID](#)
Users have to create VLAN in the VLAN Settings Page before configure its IP Address.
- [IPv6 Addresses](#)
Enables the users to define an IPv6 addresses for each created VLAN.
The IPv6 address contains 2 section - **IPv6 address** and **prefix**. The default Prefix is **64-bit**.
: Click the **remove icon** to delete the IPv6 Address row.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

barox Kommunikation AG
Im Grund 15
CH-5405 Baden-Dättwil

Tel: +41 56 511 10 30
E-Mail: mail@barox.ch
Web: www.barox.ch

barox Kommunikation GmbH
Weiler Straße 7
D-79540 Lörrach

Tel: +49 7621 1593 100
E-Mail: mail@barox.de
Web: www.barox.de

System Time

The **System Time** represents the date and time. The system uptime defines the passing time after the system boots up. There is no battery on the switch and hence the system time cannot be saved in the system. Users can configure the time zone and system time manually by synchronizing the time with the browser or by enabling the “**NTP**” service to get the time from a **NTP Server**.

NTP

Network Time Protocol (NTP) is a clock synchronization protocol, which is used to synchronize the system time with the NTP server. NTP is one of the oldest Internet Protocols in use from 1985 until now. It works based on a client-server model, but it can also be used in peer-to-peer relationships. The NTP application on the switch follows the client-server model and the switch plays a role in the NTP Client.

CONFIGURE SYSTEM TIME INFORMATION

System Time

System Time Information

Current Time ⓘ	1970/01/01 00:03:00.898063221
System Uptime	0 Day 0 Hour 2 Minutes 21 Seconds

NTP Settings

NTP Mode	☐ Enable ☒ Disable
NTP Server 1	2.pool.ntp.org
NTP Server 2	2.pool.ntp.org

Manual Time Settings

Time Zone	Europe ▾	London ▾
Date Selector	1970/01/01	
Time Settings	00 : 02 : 21	
Sync with Browser	☐ 2020/12/09 09:47:46	

Apply

barox Kommunikation AG
Im Grund 15
CH-5405 Baden-Dättwil

Tel: +41 56 511 10 30
E-Mail: mail@barox.ch
Web: www.barox.ch

barox Kommunikation GmbH
Weiler Straße 7
D-79540 Lörrach

Tel: +49 7621 1593 100
E-Mail: mail@barox.de
Web: www.barox.de


- **System Time Information**
 - Current Time: The current date time of the system.
Note: Time format: Year/Month/Day 24HR:Min:Sec.NanoSec
 - System Uptime: The system boot up duration.
- **NTP Settings**
 - NTP Mode
"Enable" or "Disable" NTP Service. If NTP Mode is enabled, the system will sync time with NTP Server on an hourly basis.
 - NTP Server 1 & 2
This field displays the URL or the IP address of the host that provides the NTP Service. There are 2 server configurations supported.
- **Manual Time Settings**
 - Time Zone
Select the Time Zone to define the local time offset from GMT.
 - Date Selector
Select the system date manually. The format is "**year/month/day**".
 - Time Setting
Define the system time manually. The format is "**hour:minute:second**".
 - Sync with Browser
Select the checkbox to synchronize the system time with the **browser time**.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

Precision Time Protocol (PTP)

The **Precision Time Protocol (PTP)** is used to synchronize clocks and it is more accurate than NTP. PTP is majorly employed to synchronize the network devices that require precise timing like financial transactions. Synchronization and management of a PTP network is implemented by the exchange of messages across the communications devices.

PTP is working by a **Master** and **Slave** structure. There are three types of PTP clocks – **Ordinary Clock**, **Boundary Clock**, and **Transparent Clock** and currently we support Ordinary Clock and Transparent Clock on the **L2, Router**, and **L3** switches, and **Boundary Clock** on the **Router** and **L3** switches. If the switch is an Ordinary Clock, it can be configured as role Master or Slave. For the Boundary Clock and Transparent Clock, they can be both Master and Slave at the same time to synchronize with the Master and forward to Slaves.

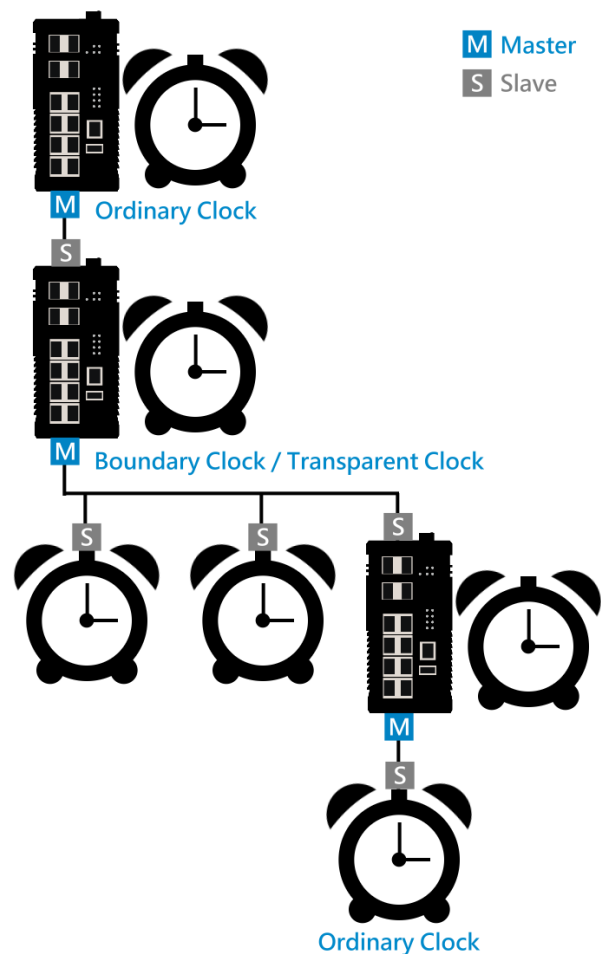

CONFIGURE PTP BASIC INFORMATION – ORDINARY CLOCK

⚙️ PTP Configuration

📍 Basic Settings

PTP Status	☒ Enable ☐ Disable
PTP Mode	☐ Master ☐ Slave ☒ Boundary Clock
Domain ID	0 ?
Interface1	1 ?
Interface2	0 ?

For more information, hover the mouse over the ? icon in the system.

- [PTP Status](#)

"Enable" or "Disable" the PTP protocol.

Note: The **PTP Slave** and **NTP Client** are mutually incompatible, if users want to enable PTP mode with role Slave, please make sure the NTP Client is disabled.

- [PTP Mode](#)

There are 3 roles of PTP that supported on the switch – **Master**, **Slave**, and **Boundary Clock**. The advanced settings of these modes are different, and the configurations are presented on the [Configure PTP OC Master](#), [Configure PTP OC Slave](#), and [Configure PTP Boundary Clock](#) sections.

- [Domain ID](#)

The ID is the identifier of the PTP network. Only the nodes with the same Domain ID synchronize the time in the network.

The default value of [Domain ID](#) is **0**

The range of [Domain ID](#) is **from 0 to 127**

- [Interface1](#)

This field is to assign an interface for PTP function. It is the **Master** interface when PTP is running on **Boundary Clock** mode.

The default value of [Interface1](#) is **1**

The range of [Interface1](#) is **from 1 to 4094**

- [Interface2](#)

The field Interface2 is only supported on **Boundary Clock** mode. It is the **Salve** interface of Boundary Clock.

The default value of [Interface2](#) is **0**

The range of [Interface2](#) is **from 1 to 4094**

CONFIGURE PTP ADVANCED SETTINGS

📍 **Advanced Settings**

Priority1	128	?
Priority2	128	?
Announce Interval	1	▼
Announce Timeout	6	?
Sync Interval	0	▼
Period	0	?

[Apply](#)

For more information, hover the mouse over the  icon in the system.

- [Priority 1](#)

The Priority is used to decide the Best Master when there are several Master nodes in the PTP network. If there are 2 or more Masters with the same **Priority 1**, the system will refer to the **Priority 2**.

The default value of Priority 1 is **128**

The range of Priority 1 is **from 0 to 248**

Note: the lower the value the higher the priority

- **Priority 2**

The Priority is used to decide the Best Master when there are several Master nodes with the same **Priority 1** in the PTP network. If there are 2 or more Masters with the same **Priority 2**, the system will refer to the **Clock Identity (MAC Address)**.

The default value of Priority 1 is **128**

The range of Priority 1 is **from 0 to 248**

Note: the lower the value the higher the priority

- **Announce Interval**

The Announce Interval is the period to send Announce Message.

The range of Announce Interval is **from -1 to 7**

- **Announce Timeout**

The **Announce Timeout** is the timer for announcing timeout message.

The default value of Announce Timeout is **6**

The range of Announce Timeout is **from 2 to 255**

- **Sync Interval**

The Sync Interval is the period to send Sync Message.

The range of Sync Interval is **from -7 to 7**

The mapping for Announce Interval and Sync Interval to **second(s)** is as following table:

Interval	0	1	2	3	4	5	6	7
Seconds	1s	2s	4s	8s	16s	32s	64s	128s
Interval		-1	-2	-3	-4	-5	-6	-7
Seconds		512ms	256ms	128ms	64ms	32ms	16ms	8ms

- **Period**

The Period is a timeout period. The Slave node will wait n (Period Value) times that announce receipt timeout before resetting.

The default value of Period is **0**

The range of Period is **from 0 to 20**

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

PTP STATUS – MASTER

PTP Status

PTP device type	MasterOnly Clock
Clock Domain	0
Clock ID	680235ffef1c441
Best master ID	680235ffef1c441
Priority1	128
Priority2	128
Class	13

- [PTP Device Type](#)
This field is the type/role of switch that in a PTP network. The switch can be “**Master Only**” or “**Slave Only**” currently because we only support **Ordinary Clock** now.
- [Clock Domain](#)
This field shows the Domain ID that the system is in now.
- [Clock ID](#)
This field is the identity of the switch in the PTP network. The Clock Identity is configured to the MAC Address of the switch by default.
- [Best Master ID](#)
The Best Master ID is the Clock Identity of the Best Master in a PTP network. If there are several Master in the PTP network, users can understand which one is the Best Master through this field.
- [Priority 1](#)
This field is the value of **Priority 1** that is configured.
- [Priority 2](#)
This field is the value of **Priority 2** that is configured.
- [Class](#)
The Class field is usually named **colckClass**. The values of PTP clock classes are based on the traditional quality levels from SSM/ESMC.

PTP STATUS – SLAVE

PTP Status

PTP device type	SlaveOnly Clock
Clock Domain	0
Clock ID	680235ffff1c441

- [PTP Device Type](#)
This field is the type/role of switch that in a PTP network. The switch can be “**Master Only**” or “**Slave Only**” currently because we only support **Ordinary Clock** now.
- [Clock Domain](#)
This field shows the Domain ID that the system is in now.
- [Clock ID](#)
This field is the identity of the switch in the PTP network. The Clock Identity is configured to the MAC Address of the switch by default.

CONFIGURE PTP BASIC INFORMATION – TRANSPARENT CLOCK

PTP Hardware Configuration

Port	Mode	Status
1	None ▼	Disable ▼
2	None ▼	Disable ▼
3	None ▼	Disable ▼
4	None ▼	Disable ▼
5	None ▼	Disable ▼
6	None ▼	Disable ▼
7	None ▼	Disable ▼
8	None ▼	Disable ▼
9	None ▼	Disable ▼
10	None ▼	Disable ▼
11	None ▼	Disable ▼
12	None ▼	Disable ▼

Apply

Known Limitations:

The Transparent Clock is only supported on the following conditions:

- **VLAN untagged mode**
- **L2 management switches**
- **Copper ports and 1G SFP Slots**
- **One-step Mode**
- **End-to-End delay mechanism**
- **Port**
Port 1 to Port N, where N is based on the total port number.
- **Mode**
Select Transparent Mode or Normal Mode (None) on the designated port.
- **Status**
“Enable” or “Disable” selected mode on the designated port.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

Spanning Tree

The **Spanning-Tree Protocol** is a standard protocol that is defined in **IEEE 802.1D**. It is used to build a **logical loop-free** topology for layer-2 Networks. The basic function of the protocol is to prevent loops and broadcast flooding around the switches. STP allows spare links in the network design to provide **backup paths** when the active link fails and requires a **convergence time** of **30-50 seconds** to recover the topology when the topology is changed. This prompted the use of **Rapid Spanning-Tree Protocol** as it provides a faster convergence when the topology is changed.

RSTP was introduced by IEEE as **802.1w**. It can respond within **3 x "Hello Time"** when a topology is changed. The "Hello Time" is a configurable value and it is very important for RSTP. The default RSTP value is **2 seconds** and typically, the convergence time for RSTP is **under 6 seconds**. RSTP is much faster than STP. RSTP should be used instead of STP.

The **Multiple Spanning-Tree Protocol** defined in the **IEEE 802.1s** is an extension to RSTP for Virtual LANs. MSTP provides a better alternate path than STP/RSTP for different VLANs. It can make a group of VLANs more systemized in the topology.

CONFIGURE RSTP/CIST BASIC INFORMATION

RSTP/CIST Configuration

Bridge Settings

Mode	RSTP	
Priority	32768	
Hello Time	2	
Forward Delay	15	
Max Age	20	

For more information, hover the mouse over the  icon in the system.

- [System Time Information](#)
RSTP: Enable STP and run "RSTP" for redundancy.
MSTP: Enable STP and run "MSTP" for redundancy.
Disable: Disable STP. Users have to enable another protocol to prevent from loop.
- [Root Priority](#)

It is used to define the "**Root Bridge**". The bridge with the **lowest Root Priority** is the "Root Bridge". If all the bridges are set to the same Root Priority value, the system will select the Root Bridge based on the **MAC Addresses**.

The range of Root Priority is **from 0 to 61440 (multiple of 4096)**.

The default Root Priority is **32768**.

- **Hello Time**

It is very important and used to determine the interval to send BPDU (management frame) to check the RSTP topology and status.

The range of Hello Time is **from 1 to 10** second(s).

The default Hello Time is **2** seconds.

- **Forward Delay**

A delay/timer is used to determine when to change the **Path State** from Learning/Listening to Forwarding.

The range of Forward Delay is **from 4 to 30** seconds.

The default Forward Delay is **15** seconds.

- **Maximum Age**

A timer that is used to wait for the Hello BPDU from the Root Bridge. If this device receives the BPDU before the timer expires, the timer will be reset. Else, the device will send the topology changed BPDU to notify other devices.

The range of Maximum Age is **from 6 to 40** seconds.

The default Maximum Age is **20** seconds

The relationship between "Hello Time", "Forward Delay", and "Maximum Age" is:

$$2 \times (\text{Forward Delay} - 1 \text{ sec}) \geq \text{Max Age} \geq 2 \times (\text{Hello Time} + 1 \text{ sec})$$

CONFIGURE RSTP PORT INFORMATION

Port Settings

Port	Port Cost 	Port Priority	Admin P2P	Edge	Admin STP
1	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
2	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
3	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
4	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
5	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
6	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
7	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
8	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
9	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
10	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
11	0	128 ▼	Shared ▼	Auto ▼	Enable ▼
12	0	128 ▼	Shared ▼	Auto ▼	Enable ▼

Apply

For more information, hover the mouse over the  icon in the system.

- **Port**
Port 1 to Port N, where N is based on the total port number.
- **Path Cost**
The cost from the current node to another device.
The range of Path Cost is **from 0 to 200000000**.
The default Path Cost is **0**. This implies that the Path Cost is decided by the system.
- **Port Priority**
Used to decide the port to be blocked in the Ring topology.
The range of Root Priority is **from 0 to 240** and are in **multiple of 16**.
The default Root Priority is **128**.

- [Admin P2P](#)

The Admin P2P is the link-type for each port.

P2P: It is a full-duplex link.

Shared: It is a half-duplex link.

- [Edge](#)

A port that can connect to a **non-STP device** is called an Edge port. Users can manually fix a port to non-Edge or Edge.

Auto: The system **automatically** identifies an Edge or Non-Edge.

Edge: The port is forced to be an Edge port. An edge port will directly be transitioned to the "**Forwarding**" state and is not required to wait for the "Forward Delay". If a port is directly connected to a non-STP device, users can manually set it to "Edge" and enable it to transmit faster.

Non-Edge: The port is forced to be a Non-Edge port. This implies that the port will go through Learning/Listening to Forwarding state even though it is connected to an end device or not.

- [Admin STP](#)

"Enable" or "Disable" the Spanning-tree protocol that is running on the specific port.

- [Apply](#) (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

RSTP/CIST STATUS

RSTP/CIST Status

Bridge Information

Bridge ID	8.000.68:02:35:B7:89:05
Priority	32768
Root Bridge	Yes
Root Port	none
Root Path Cost	0
Hello Time	2
Forward Delay	15
Max Age	20

- [Bridge ID](#)

This field shows the **unique** identity of this node when it is part of a network. It contains **8 bytes** - the first 2 bytes are for **Bridge Priority** (configurable) and the remaining 6 bytes are for the **MAC Address** (unique).

- [Root Bridge](#)

It is elected from the switches in the STP topology via several **STP messages (BPDU)**. The Root Bridge is the node with the **lowest Root Priority**. If all of the nodes are with the same Root Priority, the Root Bridge will be selected based on their **MAC Addresses**.

- [Root Priority](#)

It is used to define the "**Root Bridge**". The bridge with the **lowest Root Priority** is the "Root Bridge". If all bridges are set to the same Root Priority value, the system will select the Root Bridge based on the **MAC Addresses**.

- [Root Port](#)

It is the port that is **connected to the Root Bridge** and with the **lowest cost**. If the Root Port shows "**none**", it implies this node is the Root Bridge.

- [Root Path Cost](#)

It is the cost from the current node to the Root Bridge.

- [Hello Time](#)

It is used to determine the interval to send BPDU (management frame) to check the RSTP topology and status.

- [Forward Delay](#)

It is used to determine when to change the **Path State** from Learning/Listening to Forwarding.

- [Max Age](#)

It is used during waiting for Hello BPDU from the Root Bridge.

📍 Port Status

Port	Role	Port Status	Port Cost	Port Priority	Oper P2P	Oper Edge
1	Disabled	Discarding	200000000	128	Shared	Non-Edge
2	Designated	Forwarding	20000	128	P2P	Non-Edge
3	Disabled	Discarding	200000000	128	Shared	Non-Edge
4	Disabled	Discarding	200000000	128	Shared	Non-Edge
5	Disabled	Discarding	200000000	128	Shared	Non-Edge
6	Disabled	Discarding	200000000	128	Shared	Non-Edge
7	Disabled	Discarding	200000000	128	Shared	Non-Edge
8	Disabled	Discarding	200000000	128	Shared	Non-Edge
9	Disabled	Discarding	200000000	128	Shared	Non-Edge
10	Disabled	Discarding	200000000	128	Shared	Non-Edge
11	Disabled	Discarding	200000000	128	Shared	Non-Edge
12	Disabled	Discarding	200000000	128	Shared	Non-Edge

☐ Auto Refresh

- **Port**

Port 1 to Port N, N is based on the total port number.

- **Role**

This field shows the role of the STP port.

Root: This is the root port, which is connected to the Root Bridge with the lowest cost.

Designated: This is the designated port, which can send the best BPDU on the segment to other connected nodes.

Alternate: This is the alternate port, which is blocked. This port can still receive useful BPDU **from another bridge**. When it receives a useful BPDU, it will help to forward it on the segment.

Backup: This is the backup port, which is blocked. It corresponds with "Alternate Port" to the blocking state. This port also receives useful BPDU, but the BPDU is **from the same bridge**. When it receives a useful BPDU, it will help to forward it on the segment.

Disabled: The port is not linked up.

- **Path State**

This field shows the path state of this STP port.

Discarding: The port state can be "Disabled", "Blocking", or "Listening". The incoming frames are dropped and learning MAC addresses are stopped.

Learning: The port is learning MAC addresses, but the incoming frames are dropped.

Forwarding: The port in the forwarding state forwards the incoming frames based on the learned MAC address table.

- **Port Cost**

This is the cost from the port to the Root Bridge. Spanning-tree Protocol assumes the path cost is determined by the **access speeds of the links**. The **default RSTP path cost** is shown in the following table:

Speed	RSTP Path Cost	Speed	RSTP Path Cost
4 Mbps	5,000,000	1000 Mbps (1Gbps)	20,000
10 Mbps	2,000,000	2000 Mbps (2 Gbps)	10,000
16 Mbps	1,250,000	10000 Mbps (10 Gbps)	2,000
100 Mbps	200,000		

- **Port Priority**

The Port Priority is used to determine the Root Port on a non-root bridge. The port with the lowest Port Priority value gets the higher priority.

- **Oper. P2P**

This field shows the link-type of the STP port. P2P means “**point-to-point**” and Shared means “**point-to-multiple**”.

- **Oper. Edge**

This field shows the edge state of this STP port.

CONFIGURE MSTI INFORMATION

MSTI Configuration

Basic Settings

Region Name	680235b78905	
Revision Number	0	

Instance Settings

Instance	Included VLAN 	Priority
1.		32768 ▼
2.		32768 ▼
3.		32768 ▼
4.		32768 ▼
5.		32768 ▼
6.		32768 ▼
7.		32768 ▼
8.		32768 ▼
9.		32768 ▼
10.		32768 ▼
11.		32768 ▼
12.		32768 ▼
13.		32768 ▼
14.		32768 ▼
15.		32768 ▼

Apply

For more information, hover the mouse over the  icon in the system.

- Basic Settings

- Region Name

The Region Name is the name of the MST Region. The switches in the same MST Region must be set to the same Region Name.

The **max. length** for the Region Name is **32 characters**.

Note: #, \, ', ", ? are **invalid** characters.

- Revision Number

The Revision Number is the level of the MST Revision. The switches in the same MST Region must be set to the same Revision Number.

The range of the Revision Number is **from 0 to 65535**.

The default Revision Number is **0**.

- **Instance Settings**

- **Instance**

The Instance is from 1 to 15.

- **Included VLAN**

The configured VLANs are involved in the specific Instance.

The format is: 10, 20, 30.... "Comma" is used to separate VLAN IDs.

- **Priority**

The priority is used to define the "Root Bridge" that is used to communicate with other MSTI Region.

The range of the Root Priority is **from 0 to 61440 (multiple of 4096)**.

The default Root Priority is **32768**.

- (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE MSTI PORT INFORMATION

MSTI Port Settings

Instance 1

Instance 1

Port	Port Cost 	Port Priority
1	0	128 ▼
2	0	128 ▼
3	0	128 ▼
4	0	128 ▼
5	0	128 ▼
6	0	128 ▼
7	0	128 ▼
8	0	128 ▼
9	0	128 ▼
10	0	128 ▼
11	0	128 ▼
12	0	128 ▼

Apply

For more information, hover the mouse over the  icon in the system.

- **Instance Selector**
Select the instance to configure the ports. The Instance No. is from 1 to 15.
- **Port**
Port1 to PortN, where N is based on the total port number.
- **Path Cost**
The Path Cost is the cost from the current node to another device.
The range of the Path Cost is **from 0 to 200000000**.
The default Path Cost is **0**. This implies that the Path Cost is decided by the system.
- **Port Priority**
This is used to identify the port to be blocked in the Ring topology.
The range of the Root Priority is **from 0 to 240** and is in **multiples of 16**.
The default Root Priority is **128**.
- Apply (Apply Button)
After configuring above fields, click "**Apply**" button to make the changes effective.

barox Kommunikation AG
Im Grund 15
CH-5405 Baden-Dättwil

Tel: +41 56 511 10 30
E-Mail: mail@barox.ch
Web: www.barox.ch


barox Kommunikation GmbH
Weiler Straße 7
D-79540 Lörrach

Tel: +49 7621 1593 100
E-Mail: mail@barox.de
Web: www.barox.de

ERPS

Ethernet Ring Protection Switching (ERPS) applies the protection switching mechanism for Ethernet traffic in a ring topology. This mechanism is defined in **ITU-T G8032**. You can have a protection switching and avoid the possible loops in a network by implementing the ERPS function. This is done by blocking the flow of traffic to the **Ring Protection Link (RPL)** there by protecting the entire Ethernet ring.

When an ERPS is implemented in a ring topology, only one switch is allocated as the **owner**. This switch is in charge of blocking the traffic in the RPL to avoid loops. The switch adjacent to the RPL owner is called the **RPL neighbor** node and it is responsible for blocking the end of the RPL during normal condition. The participating switches that are adjacent to the RPL owner or neighbor in a ring are called the members or RPL next-neighbor nodes. The primary function of these switches is to forward the received traffic.

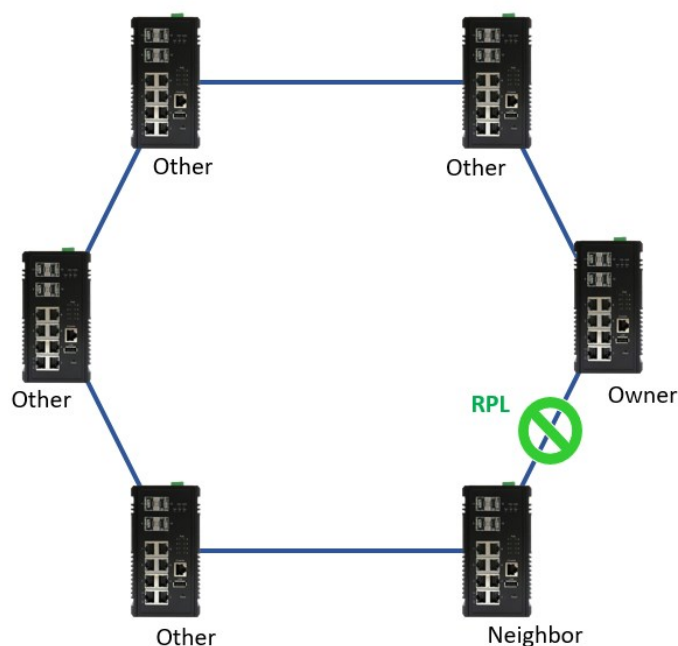

The benefit of the ERPS ring protection switching architecture are:


- ◆ Protection switching on Ethernet layer
- ◆ Preventing loop by blocking mechanism
- ◆ VLAN based protection
- ◆ **Sub-50msec** protection switching
- ◆ Support administration command

♦ **250 switches** and links in singled ring tested

To make sure that a ring is up and loop-free, **Ring Automatic Protection Switching** message is sent regularly as control messages by nodes on the ring. The RPL owner identifies a signal failure (SF) in a ring when the RPL owner misses the poll packets or reads from the fault detection packets. When the fault is identified, the RPL owner unblocks the ring protection link (RPL) and permits the protected VLAN traffic through.

ERPS, similar to STP, provides a **loop-free** network by using polling packets to detect faults. If a fault occurs, ERPS restores itself by sending traffic over a protected reverse path rather than making a calculation to identify the forwarding path. The fault detection mechanism in the ERPS enables the ERPS to join in **less than 50 milliseconds** and recovers quickly to forward traffic. In a real test case, the protection switching time is 15ms in 250 devices single ring topology.

In the new ERPS version, G.8032 v2, it supports multiple ring or ladder topology. Rings can conjoin by one or more interconnection nodes. The major ring controls a full physical ring. Sub ring does not constitute a closed ring. It is connected to a major ring at the interconnection nodes.

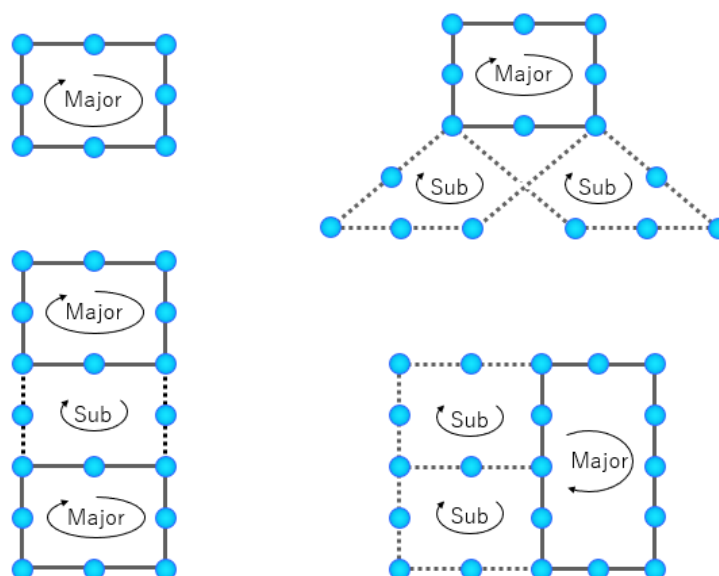

Using major ring and sub ring can design multiple ring or ladder topology. With these topologies, ERPS can append to variance application with different level of ring network. For example, core ring and branch ring architecture has application in campus and the area with central control node. Ladder topology has lots of case for tunnel and train application. The benefit of small ring is less effect nodes if ring caused of recovery.

barox Kommunikation AG
Im Grund 15
CH-5405 Baden-Dättwil

Tel: +41 56 511 10 30
E-Mail: mail@barox.ch
Web: www.barox.ch

barox Kommunikation GmbH
Weiler Straße 7
D-79540 Lörrach

Tel: +49 7621 1593 100
E-Mail: mail@barox.de
Web: www.barox.de

CONFIGURE ERPS INFORMATION

ERPS Configuration

▼

Ring 1

 **Basic Settings**

ERPS Status

☐ Enable ☒ Disable

Ring Type

☒ Major-ring ☐ Sub-ring

ERPS Port 0(West)

Port 1 ▼

None ▼

ERPS Port 1(East)

Port 2 ▼

None ▼

ERPS Ring ID



R-APS Channel



Advanced Settings

☒ Enable

 **Advanced Settings**

Major-Ring Virtual Channel



Sub-Ring Virtual Channel

☐ Enable ☒ Disable
Support only when Ring Type set to "Sub-ring"

Revertive Mode

☒ Enable ☐ Disable

MEL Value



Apply

For more information, hover the mouse over the  icon in the system.

- [ERPS Ring](#)

There are three rings supported on a device. Using the dropdown select to change the ERPS Rings.

- [Basic Settings](#)

- [ERPS Status](#)

“Enable” or “Disable” ERPS protocol running on the switch. By default, the ERPS protocol is **disabled**.

- [Ring Type](#)

Major-ring: controls a full physical ring.

Sub-ring: connected to another ring. It does not constitute a closed ring.

- [ERPS Port 0](#)

The ERPS Port 0 is also called “**West Port**”. Select one of the switch ports to be the Port 0 of ERPS and decide the role of the port.

- [ERPS Port 1](#)

The ERPS Port 1 is also called “**East Port**”. Select one of the switch ports to be the Port 1 of ERPS and decide the role of the port.

Note: Only One of the switch ports can be configured as ERPS Port 0 or ERPS Port 1.

Role	Description
Owner	There is only one “Owner” in the ERPS ring topology. The Owner is responsible for blocking the traffic in RPL and protects one side of the RPL.
Neighbor	There is only one “Neighbor” in the ERPS ring topology. The Neighbor is the port connected with the Owner port and protects another side of the RPL.
Interconnection	The Interconnection port connects a major-ring and a sub-ring. If one of the ports on the switch is set to “Interconnection” role, the other port will be set to “Disabled” automatically.
None	The “None” implies that the port is other than an Owner or a Neighbor.

- ERPS Ring ID

The ID is the identifier of the ring. The members in the same ring must be set to the same ERPS Ring ID.

The range of the ERPS Ring ID is **from 1 to 239**.

The default ERPS Ring ID is **1**.

- R-APS Channel

The R-APS Channel is used to forward ERPS information and is mapped to the VLAN IDs. These VLAN IDs cannot be set as traffic VLAN ID. The members in the same ring must be set to the same R-APS Channel.

The range of the R-APS Channel is **from 1 to 4094**.

The default R-APS Channel is **1000**.

- Advanced Settings

The Advanced Settings field is only displayed when the “Advanced Settings” checkbox is selected in the Basic Settings.

- Major-Ring Virtual Channel

This field is used to configure the specific virtual channel for transmitting the management packets of the sub-ring through the major-ring.

- Sub-Ring Virtual Channel

“Enable” or “Disable” using virtual channel in the sub-ring. When the Sub-Ring Virtual Channel is enabled, ERPS protocol will transmit management packets by the configured virtual channel.

- Revertive Mode

“Enable” or “Disable” the ERPS Revertive Mode. If the Revertive Mode is enabled, the blocked link will revert to the RPL link after the failed link is recovered.

By default, the ERPS Revertive Mode is **enabled**.

- MEL Value

MEL field is for the compliance with other devices which are running ITU-T G.8031 from third-party. The MEL implies the MEG Level. It is a field in the R-APS PDU. A large MEL value involves more devices. For example, level 7 contains levels 0 to 6.

The range of the MEL Value is **from 0 to 7**.

The default MEL Value is **7**.

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

ERPS STATUS

ERPS Status

Ring 1
▼

 **Basic Information**

Ring Type	Major-ring
ERPS Status	Disable
Ring State	Normal
Node State	Initial
ERPS Ring ID	1
R-APS Channel	1000
Virtual Channel	default
Revertive Mode	Yes
MEL Value	7

 **Port Status**

	Interface	Role
Port 0(West)	Lan1	None
Port 1(East)	Lan2	None

☐ Auto Refresh

Refresh

Refresh Rate: seconds 

- ERPS Ring

There are three rings supported on a device. Using the dropdown select to change the ERPS Rings.

- Basic Information

- Ring Type

The type of the selected ERPS Ring shows “**Major-ring**”, “**Sub-ring with virtual channel**”, or “**Sub-ring without virtual channel**”.

- ERPS Status

The status of ERPS is “Enable” or “Disable” in the selected ERPS Ring.

- Ring State

There are two states for ERPS Rings: **Normal** and **Abnormal**.

- Node State

There are three states for ERPS Nodes: **Initial**, **Idle**, **Pending**, and **Protection**.

State	Description
Initial	The ERPS protocol is disabled in the selected ring.
Idle	The ERPS protocol is enabled in the selected ring and the ERPS ring is under control by the RPL Owner.
Pending	The ERPS protocol is enabled in the selected ring. The ERPS ring is recovery from Protection state and is waiting for the wtr timer expired.
Protection	The ERPS protocol is enabled in the selected ring but one of the links in the ring is broken. The RPL changes to forward to keep the ring working.

- ERPS Ring ID

The ID is the identity for the selected ERPS Ring.

- R-APS Channel

This field shows the configured R-APS Channel.

- Virtual Channel

This field shows the virtual channel of sub-ring. If the field shows “default” implies the virtual channel follows the R-APS Channel.

- Revertive Mode

Show the Revertive Mode is enabled (Yes) or disabled (No).

- MEL Value

The field is the configured MEL value.

- Port Status

- Interface

The configured port presents the ERPS port 0/1 in the ERPS protocol.

- Role

Display the configured role for the configured port.


MRP

MRP function is only supported on the KN-LGIPR38-28

Media Redundancy Protocol (MRP) is an IEC standard protocol to prevent the ring topology from loop, and it is defined as **IEC 62439-2**. The recovery time of MRP is much faster than STP and even than RSTP, so it is suitable in most Industrial Ethernet applications.

In the ring topology with MRP, the manager is called **Media Redundancy Manager (MRM)**, and the clients are called **Media Redundancy Clients (MRC)**. The **MRM** send test packets from both of its ring ports periodically to confirm the health of ring topology.

There are three states for MRP Ring Ports – **Disabled**, **Blocked**, and **Forwarding**. When the **MRP** ring is under normal operation, the network works in the **Ring-Closed** state. In the closed state, one of the **MRM** Ring Ports is blocked and the other one is forwarding, while both of the ring ports of **MRCs** are forwarding. Due to the blocked port, the topology is a logical stub and the loops are avoided. If one of the forwarding links is failed, the ring topology goes to open state, and the blocked port of **MRM** will be forwarding state to insure the transmission in the ring.

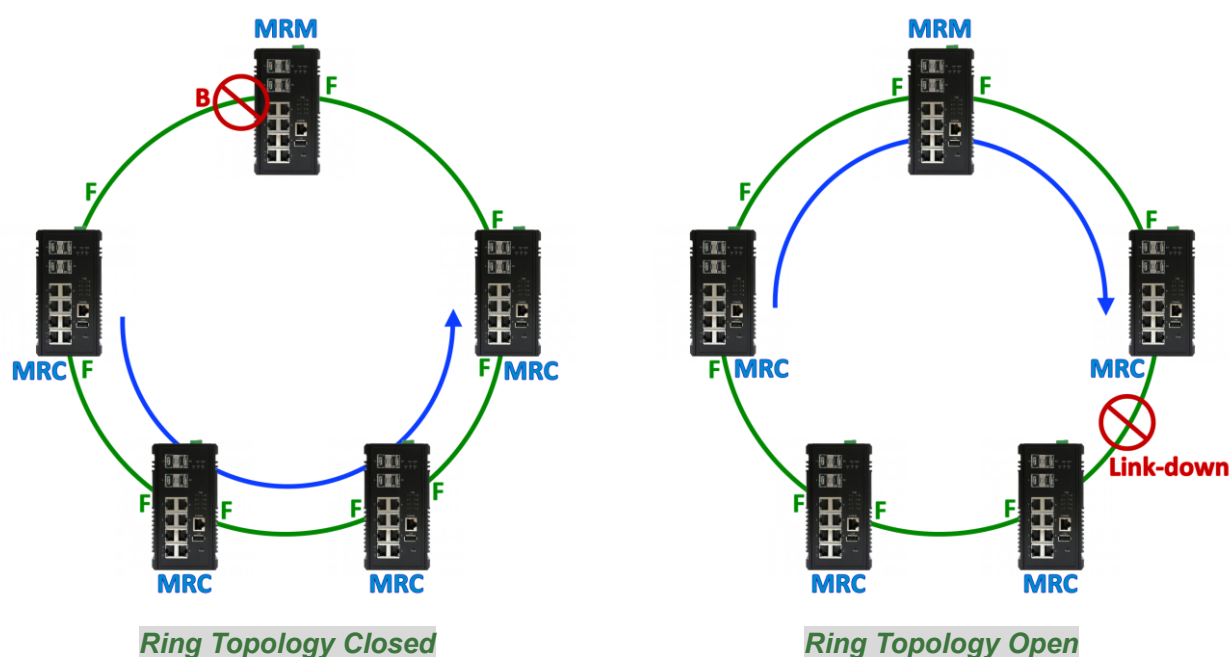

If the **MRC** detects a link down at one of the ring ports, it can notify this event to the **MRM** initiatively. In **Advanced Mode**, the **MRM** can activate the blocked ring port to speed-up recovery rather than wait till sufficient loss of test packets.

MRP standard guarantees the recovery time in the specifications. The recovery time are 500ms, 200ms, 30ms with maximum 50 switches, and 10ms with up to 14 switches in a ring. Currently, we support the recovery delay of 500ms and 200ms.

CONFIGURE MRP INFORMATION

MRP Configuration

Settings

MRP Status	☐ Enable ☒ Disable
MRP Role	☐ Manager ☒ Client
MRP Recovery Delay	☒ 500 ms ☐ 200 ms
MRP Port 1(Primary)	None
MRP Port 2(Second)	None
MRP Domain Name	?
MRP Domain ID	255.255.255.255.255.255.255.2! ?
Advanced Mode	☒ Enable

[Apply](#)

For more information, hover the mouse over the ? icon in the system.

- [MRP Status](#)
“Enable” or “Disable” MRP protocol running on the switch. By default, the MRP protocol is **disabled**.
- [MRP Role](#)
Configure the role of the switch when running MRP protocol. The “Manager” item implies MRM and the “Client” item implies MRC.
- [MRP Recovery Delay](#)
The MRP Recovery Delay implies to the amount of lost packets. The IEC 62439-2 standard defines 4 recovery delays – **500ms**, **200ms**, **30ms**, and **10ms**. Currently, we only support 500ms and 200ms.
- [MRP Port 1 \(Primary\)](#)
The MRP Port 1 is the **primary port** of MRP. Select one of the switch ports to be the primary port of MRP. The Primary port is default configured to be **forwarding** when the Ring is closed.
- [MRP Port 2 \(Second\)](#)

The MRP Port 2 is the **secondary port** of MRP. Select one of the switch ports to be the secondary port of MRP. The secondary port is default configured to be **blocking** when the Ring is closed.

- [MRP Domain Name](#)

The MRP Domain Name is a unique string for the MRP domain to identify MRP domains

- [MRP Domain ID](#)

The MRP Domain ID is the key attribute to define the members in the same MRP ring.

The default MRP Domain ID is

255.255.255.255.255.255.255.255.255.255.255.255.255.255.

- [Advanced Mode](#)

The Advanced Mode is supported only when the MRP Role is configured to “**Manager**”. If the Advanced Mode is checked, it implies the Advanced Mode is enabled. Under the advanced mode, when the MRM received a link-down signal, the MRM activates the backup port immediately rather than waiting for the sufficient loss of test packets.

MRP STATUS – BASIC & CONFIGURE INFORMATION

⚙️ MRP Status

📍 Basic Information

Instance ID	1
Domain ID	255.255.255.255.255.255.255.255.255.255.255.255.255.255.255

📍 Configure Information

Advanced Mode(react on link change)	Enabled
Role of Switch (administrative setting)	Manager
Role of Switch (real operating state)	Manager
Domain Name	
Recovery delay	500 (msec)
Port Number, Secondary	3, State: Blocked
Port Number, Primary	4, State: Blocked
Operation	Enabled

- [Basic Information](#)

- [Instance ID](#)

The Instance ID is the Ring ID. We only support one ring currently, so the Instance ID displays always **1**.

- [Domain ID](#)

The Domain ID is the identity of current MRP ring. Only the members with the same Domain ID will be regarded as working in the same ring.

- [Configured Information](#)

- [Advanced Mode](#)

The field shows the status of Advanced Mode. Advanced Mode is only supported

when the switch is configured as a **MRM (Manager)**.

- Role of Switch

There are 2 roles of switches in the MRP – **Manager** and **Client**

Administrative Setting: the role that users configured for the switch.

Real Operating State: the role that the switch is working as.

- Domain Name

This field shows the configured name of this MRP Domain.

- Recovery Delay

This field shows current operating Recovery Delay. It may be **500** or **200 (msec)**.

- Port Number, Secondary

- Port Number, Primary

These two fields shows two parts of information. The first one is the switch port number configured as Primary / Secondary Port, and the other one is the state of this port. There are 3 states for MRP ports when the MRP is enabled: **Forwarding**, **Blocked**, and **Disabled**. If the MRP is disabled, the state shows “**N/A**”.

- Operation

This field shows current Operation State – **Enabled** or **Disabled**.

📍 Operating States

Ring State	Open
Topology Change Interval	20.0 (msec)
Topology Change Repeat Count	3
Short Test Interval	30.0 (msec)
Default Test Interval	50.0 (msec)
Test Monitoring Count	5
Nonblocking Client Supported	Enabled
Test Monitoring Extended Count	15
Check Media Redundancy	Enabled

- Operating States (Master)

- Ring State

The Ring State displays the actual ring state of MRP, and the state may be

Open: some of the links in the MRP ring are down or MRC failure.

Closed: the MRP ring is closed and under normal operation without error.

- Topology Change Interval

The interval is the period to send **MRP_TopologyChange** frames.

- Topology Change Repeat Count

The count is the repeat times to transmit **MRP_TopologyChange** frames.

- Short Test Interval

This interval is a timer used after **link changes** to send **MRP_Test** frames on the MRP ring ports.

- Default Test Interval

The interval is the **default** period to send **MRP_Test** frames on the MRP ring ports.

- Test Monitoring Count

This field is the interval count for monitoring the reception of **MRP_Test** frames.

- Non-blocking Client Supported

This field displays the ability of the MRM to support MRCs without **BLOCKED** port state support in the ring.

- Test Monitoring Extended Count

This field is an **optional** parameter. It is an extended interval count for monitoring the reception of **MRP_Test** frames.

- Check Media Redundancy

Check the current state of MRM. The state may be “**Enabled**” or “**Disabled**”.

📍 **Operating States**

Link Down Interval	20.0 (msec)
Link Up Interval	20.0 (msec)
Link Change Count	4
Blocked Support	Enabled

☐ Auto Refresh

Refresh

Refresh Rate: seconds ⓘ

- **Operating States (Client)**

- Link Down Interval

The Link-down Interval shows the period that MRP Link-down frames sent on the ring port. The default value of Link-down Interval is **20ms**.

- Link Up Interval

The Link-up Interval shows the period that MRP Link-up frames sent on the ring port. The default value of Link-up Interval is **20ms**.

- Link Change Count

The Link-change Count controls the repeated times to transmit MRP Link-Change frames. The default Link-change Count is **4** times.

- Blocked Support

The Blocked Support is default **enabled**. The MRM with Blocked Support will block the secondary port when there is no Blocked Port in the MRM ring topology to avoid loops.

SNMP

Simple Network Management Protocol (SNMP) is a standard for collecting and structuring information on the managed devices of the IP network. It can also modify some of the information to change the behavior of the devices. SNMP is usually used in monitoring the network. The users can remotely query the information provided by the devices running SNMP.

The switches support SNMP v1, v2c, and v3. SNMP v1 and v2c authenticates with a community string for “**read-only**” or “**read-write**” permission. The SNMP v3 authentication requires to select an authentication level (**MD5** or **SHA**) and also supports data encryption to make the data safer.

For the SNMP version and authentication method relationship, refer to the table below:

Version	Web Setting	Authentication	Encryption	Method
v1 & v2c	Read Only Community	Community String	No	String match for authentication
	Read-Write Community	Community String	No	String match for authentication
v3	Security Level – No Authentication, No Privacy	No	No	Access by an account (admin or user)
	Security Level – Authentication, No Privacy	MD5 / SHA	No	Access by an account (admin or user) and password with more than 8 characters, which is based on MD5 or SHA
	Security Level – Authentication, Privacy	MD5 / SHA	Yes AES / DES	Access by an account (admin or user) and password more than 8 characters, which is based on MD5 or SHA. The data encryption is based on AES or DES and the key requires 8 to 32 characters.

CONFIGURE SNMP SERVER INFORMATION

SNMP Server

Basic Settings

SNMP Version	v1, v2c and v3	
Read Only Community	public	
Read-Write Community	private	

SNMPv3 Settings

 Admin		
Security Level	No Authentication, No Privacy	
Authentication Type	☐ MD5 ☒ SHA	
Authentication Password	administrator	
Encryption Type	☐ AES ☐ DES	
Encryption Password	administrator	
 User		
Security Level	No Authentication, No Privacy	
Authentication Type	☐ MD5 ☒ SHA	
Authentication Password	administrator	
Encryption Type	☐ AES ☐ DES	
Encryption Password	administrator	

Apply

For more information, hover the mouse over the  icon in the system.

- Basic Settings

- SNMP Version

The system enables the SNMP “**v1, v2c and v3**” authentication by default. The users can enable the SNMP server on only “**v1 and v2c**” or “**v3**”. “**None**” refers to disabling the SNMP server.

- Read Only Community

The community used to access the SNMP server with the “**read-only**” privilege.

The **max. length** for the Read Only Community is **32 characters**.

Note: #, \, ', ", ? are **invalid** characters.

- Read-Write Community

The community used to access the SNMP server with the “**read-write**” privilege.

The **max. length** for the Read-Write Community is **32 characters**.

Note: #, \, ', ", ? are **invalid** characters.

- SNMPv3 Settings

This section is displayed only when the **SNMP Version** is set to “v3” or “v1, v2c and v3”. Two accounts are provided – Admin and User to access the SNMP agent. The users can set different levels for the 2 accounts.

- Security Level

No Authentication, No Privacy: Access by an account “admin” or “user”.

Authentication, No Privacy: Access by an account “admin” or “user” with password.

Authentication, Privacy: Access by an account “admin” or “user” with password and the data will be encrypted.

- Authentication Type

Two algorithms are provided - **MD5** and **SHA** for authentication password.

- Authentication Password

A string/key is used to authenticate the SNMP Server and obtain the access permission. It will be hashed by MD5 or SHA before authentication.

The min. length for the Read-Write Community is **8 characters**.

The max. length for the Read-Write Community is **32 characters**.

Note: Only digits, letters and underline are valid.

- Encryption Type

Two algorithms are provided - **AES** and **DES** for data encryption.

- Encryption Password

A string/key is used to encrypt the data that is sent to the SNMP server.

The min. length for the Read-Write Community is **8 characters**.

The max. length for the Read-Write Community is **32 characters**.

Note: Only digits, letters and underline are valid.

- (Apply Button)

After configuring above fields, click “**Apply**” button to make the changes effective.

CONFIGURE SNMP TRAP INFORMATION

SNMP Trap

Basic Settings

Trap Version	v3 Trap	
Inform Retry	5	
Inform Timeout	1	
Trap Receiver IP 1		
Trap Receiver IP 2		
Community	public	

SNMPv3 Trap Settings

Username		
Engine ID	0x8000000080f189e37802010000	
Security Level	Authentication, No Privacy	
Authentication Type	☒ MD5 ☐ SHA	
Authentication Password		
Encryption Type	☒ AES ☐ DES	
Encryption Password		

Apply

For more information, hover the mouse over the  icon in the system.

- Basic Settings**

- Trap Mode

The system enables the SNMP “v1, v2c and v3” authentication by default. Users can enable the SNMP server only on “v1 and v2c” or “v3”. “None” indicates disabling the SNMP server.

- Inform Retry

The SNMP trap will send “Retry” times when the trap set to “v2 Inform” or “v3 Inform” mode.

The range of the Inform Retry is **from 1 to 100**.

The default Inform Retry is **5**.

- Inform Timeout

The interval is used to send trap when the trap set to “v2 Inform” or “v3 Inform” mode.

The range of the Inform Retry is **from 1 to 300** second(s).

The default Inform Retry is **1** second.

- Trap Receiver IP 1 & 2

The IP address is the IP address of the trap server to receive the trap information. The system supports both **IPv4** and **IPv6** addresses for the receiver. There are 2 Trap Receiver IP supported.

- Community

The string in the SNMP trap is the identity of the device.

The max. length for the Community is **32 characters**.

Note: #, \, ', ", ? are **invalid** characters.

- SNMPv3 Trap/Inform Settings

This section is displayed only when **Trap Mode** are set to “v3 Trap” or “v3 Inform”.

- Username

Specify the username for authentication with the SNMP trap server.

- Engine ID

The Engine ID is the identifier for the given SNMP application.

- Security Level

No Authentication, No Privacy: Access using the username assigned to the users.

Authentication, No Privacy: Access using the username assigned to the users with password.

Authentication, Privacy: Access using the username assigned to the users with password and the data will be encrypted.

- Authentication Type

Two algorithms are provided - **MD5** and **SHA** for authentication password.

- Authentication Password

A string/key is used to authenticate the SNMP trap server and obtain the permission. It will be hashed by MD5 or SHA before authentication.

The min. length for the Read-Write Community is **8 characters**.

The max. length for the Read-Write Community is **32 characters**.

Note: #, \, ', ", ? are **invalid** characters.

- Encryption Type

Two algorithms are provided - **AES** and **DES** for data encryption.

- Encryption Password

A string/key is used to encrypt the data sent to the SNMP trap server.

The min. length for the Read-Write Community is **8 characters**.

The **max. length** for the Read-Write Community is **32 characters**.

Note: #, \, ', ", ? are **invalid** characters.

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

DHCP

DHCP SERVER/CLIENT

DHCP, **Dynamic Host Configuration Protocol**, is a standardized protocol used in the IP networks. The DHCP Server holds an **IP address pool** and when a DHCP Client request for an IP address, the DHCP Server picks an IP address from the pool and assigns it to the client. DHCP Server also manages other IP information such as **Default Gateway** and **DNS Server**. DHCP is very useful to configure the IP information for a number of devices. Only the administrator can enable the DHCP Client for each device and setup the DHCP Server. The clients will then obtain a unique IP address and other IP settings to connect to the network.

DHCP SERVER BINDING


Apart from dynamically allocating an IP address to a DHCP Client, the DHCP Server also provides a function to manually assign a **static IP address** to the device with a specific MAC Address. This is called as DHCP Server Binding.

DHCP RELAY/OPTION82

In a large network, there might be several subnets existed and the DHCP Client is not able to serve by DHCP Servers directly. In this case, we need a relay agent to help to transmit the request frames to the DHCP Servers. When a relay agent receives the broadcast request frame from a DHCP Client, the relay agent will transmit the frame to the DHCP Servers, which are in the same subnet by unicast.


Option 82 is an information option to identify the clients by **Circuit ID** and **Remote ID**. The **Circuit ID** is an identity containing the **interface** name and/or **VLAN** information, and the **Remote ID** is to identify the **remote host** (the relay agent). The DHCP Server can distribute an IP address to the DHCP Client according to Option 82 information and make the IP addresses more controllable.

The frame format for the **Circuit ID** is as below:

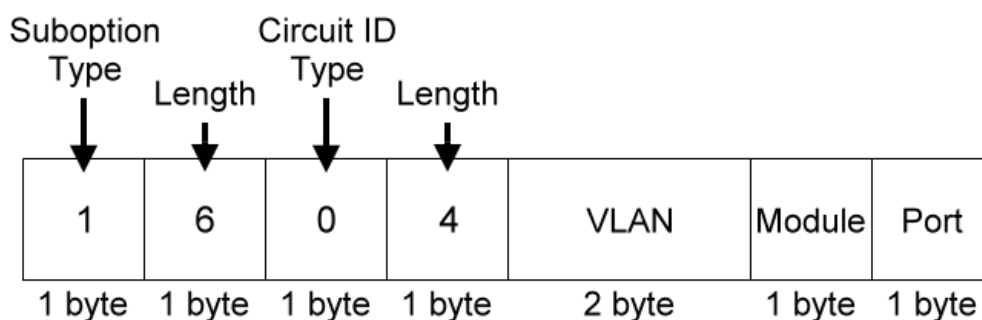

- **VLAN**
The VLAN field is for the **management VLAN ID**, which is natively set to **1**.
- **Module**
The stack number for the device sending the DHCP request is on. For industrial switches, this byte is always filled as **0**.
- **Port**
The port number identifies the incoming DHCP request frame/DHCP Client.

The frame format for the **Remote ID** is as below:

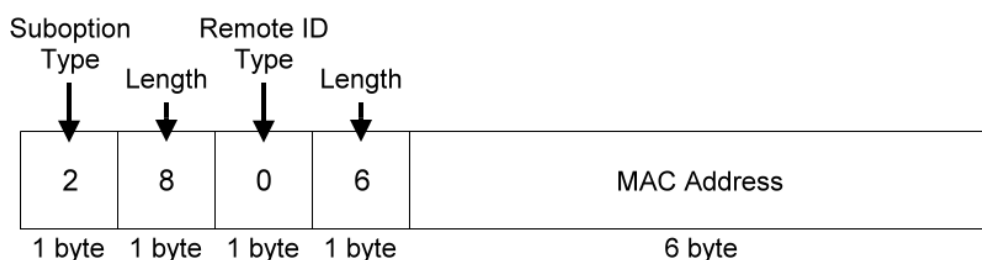

- **MAC Address**
By default, the MAC address is set to the MAC address of DHCP relay agent.

CONFIGURE DHCP CLIENT

IPv4 Settings

IPv4 Mode	☒ Static ☐ DHCP Client
IP Address	192.168.10.1
Subnet Mask	255.255.255.0
Default Gateway	
DNS Server	8.8.8.8

[Apply](#)

- [IPv4 Mode](#)

Set the **IPv4 Mode** to “**DHCP Client**” to enable the DHCP Client. The system sends a **discovery frame** to the network and tries to obtain an IP address from the DHCP Server.

After enabling the DHCP Client, users need to connect to the **Console Port** to get the IP address by using “***show ip address***” on the CLI.

-  (Apply Button)

After configuring above fields, click “**Apply**” button to make the changes effective.

CONFIGURE DHCP SERVER INFORMATION

DHCP Server

Server Status	DHCP Server Down
Server Mode	☐ Enable ☒ Disable
Start IP Address	
End IP Address	
Default Gateway	
DNS Server	
Lease Time	60 

[Apply](#)

For more information, hover the mouse over the  icon in the system.

- [Server Status](#)
Shows the status of the DHCP server: **Down** or **Up**.
- [Server Mode](#)
“Enable” or “Disable” the DHCP Server function.
- [Start IP Address](#)
Set the range of the IP pool. The “Start IP Address” is the starting.
“Start IP Address” must be in the **same subnet** as that of the switch itself.
- [End IP Address](#)
Set the range of IP pool. The “End IP Address” is the end.
“End IP Address” must be in the **same subnet** as that of the switch itself.
- [Default Gateway](#)
Set the Default Gateway for the DHCP Clients to make them connect to the WAN.
“Default Gateway” must be in the **same subnet** as that of the switch itself.
- [DNS Server](#)
Set the DNS Server for the DHCP Clients to make them connect to another device based on the **URL** instead of IP address.

- [Lease Time](#)

DHCP Server leases an IP address to a device for a **period of time**. When the lease time expires, the DHCP server may assign a different IP address in the pool to the device.

- [Apply](#) (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

DHCP LEASED TABLE

DHCP Leased Table

Show entries
Search:

IP Address	MAC Address	Expired Time
192.168.10.100	68:02:35:00:16:ee	1970/01/07 22:55:49

Showing 1 to 1 of 1 entries

First Previous Next Last

☐ Auto Refresh

Refresh

Refresh Rate: seconds. 

- [IP Address](#)

This field implies the IP Address that this device acquired from DHCP Server.

- [MAC Address](#)

The MAC Address of the device that acquired mapped IP Address. Administrators can use MAC Address to map to the device's IP Address.

- [Expired Time](#)

The Expired Time implies the deadline of designated IP Address that leased from DHCP Server. After Expired Time, the DHCP Client has to communicate with DHCP Server and ask for the IP Address again.

CONFIGURE DHCP SERVER BINDING INFORMATION

DHCP Server Binding

Binding ID 	MAC Address	Binding IP Address	+
			×

Apply

For more information, hover the mouse over the  icon in the system.

- [Binding ID](#)
An ID used to identify the binding.
The range of the Binding ID is **from 1 to 32**.
- [MAC Address](#)
The device with the specified MAC Address will be assigned to the static Binding IP Address.
- [Binding IP Address](#)
A static IP Address will be assigned to the specified MAC Address.
- : Click the **plus icon** to add a DHCP Binding row.
- : Click the **remove icon** to delete the DHCP Binding row.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE DHCP RELAY INFORMATION

DHCP Relay

Basic Settings

Relay Mode	☐ Enable ☒ Disable	
Relay Option82	☐ Enable ☒ Disable	
Helper Address 1		
Helper Address 2		
Helper Address 3		
Helper Address 4		

Relay Untrust

Port	Untrust Status 
1	☐ Enable ☒ Disable
2	☐ Enable ☒ Disable
3	☐ Enable ☒ Disable
4	☐ Enable ☒ Disable
5	☐ Enable ☒ Disable
6	☐ Enable ☒ Disable
7	☐ Enable ☒ Disable
8	☐ Enable ☒ Disable
9	☐ Enable ☒ Disable
10	☐ Enable ☒ Disable
11	☐ Enable ☒ Disable
12	☐ Enable ☒ Disable

Apply

For more information, hover the mouse over the  icon in the system.

- Relay Basic Settings

- Relay Mode

“Enable” or “Disable” the DHCP Relay function.

- Relay Option82

“Enable” or “Disable” the DHCP Relay with Option82 tag.

- Helper Address 1 - 4

The **IP Addresses** of the **DHCP Servers** provide IP addresses to the DHCP Clients. A backup of Four Helper Addresses are available during breakdown.

- **Relay Untrust**
 - Port
Port1 to Port N, where N is based on the total port number.
 - Untrust Status
“Enable” or “Disable” to untrust the specific port. If the untrusted status is enabled on a port, the system will **drop** the DHCP management frames on the port.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

PoE (PoE Model Only)

The **PoE**, or **Power over Ethernet**, allows switches to provide electric power along with data on the twisted pair Ethernet cables. The Power over Ethernet defined in **IEEE 802.3af** provides up to 15.4 W and **IEEE 802.3at** provides up to 25.5 W. It requires category 5 cables or better to support high power levels. **PoE** is helpful when the AC power is not available or is available with high cost. It is usually used in surveillance IP cameras, I/O sensors, wireless access points, and IP telephones.

POWER DE-RATING PROTECTION

Due to the power supply is designed inside the devices for some models, so the power budget will decrease by the operating temperature. To ensure the functionality of PoE, we do the protection by software in the background and adjust the budget as temperature rises. Please refer to the **Hardware User Manual** for the detail of the relationship of power budget and temperature.

POE DEBUG CODE

We provide **PoE Debug Command** on the “**CLI**” for troubleshooting. When users find that the PoE functions work abnormal, users can use the command to acquire the error code. The error codes are mapping to different situations, users can understand the error codes from the following table:

Code	Description
0x00	PoE port is on.
0x01	
0x02	
0x03	
0x04	
0x06	PoE port is off. Mains voltage is higher than maximum voltage limitation.
0x07	PoE port is off. Mains voltage is lower than minimum voltage limitation.
0x11	PoE port is not defined yet, please check the PoE power input.
0x20	PoE port is off because of power budget exceeded.
0x1F	PoE port is off because of over-load state according to 802.3AF/AT.
0x43	PoE port is off because of class error.
0x81	802.3BT - compliant PD was detected using BT Port (30w)
0x85	802.3BT - SSPD was detected using BT Port (60w/95w) and operates as BT Port (30w) if requested class =< 4.
0x86	802.3BT - SSPD was detected using BT Port (60w 95w) and operates as BT Port

	(60w/95w) if requested class > 4.
0x90	BT Port (30w) and delivers power due to force power command.
0x91	BT Port (60w/95w) and delivers power due to force power command.
0x1B	PoE port is off because detection is in process.
0xA8	PoE port is not connected.
Others	Please contact your system administrator!!

CONFIGURE POWER OVER ETHERNET (POE)

PoE Configuration

Port	Mode			Status	Class	Voltage	Power
1	☒ Enable	☐ Disable	☐ Force	Off	0	-	-
2	☒ Enable	☐ Disable	☐ Force	Off	0	-	-
3	☒ Enable	☐ Disable	☐ Force	Off	0	-	-
4	☒ Enable	☐ Disable	☐ Force	Off	0	-	-
5	☒ Enable	☐ Disable	☐ Force	Off	0	-	-
6	☒ Enable	☐ Disable	☐ Force	Off	0	-	-
7	☒ Enable	☐ Disable	☐ Force	Off	0	-	-
8	☒ Enable	☐ Disable	☐ Force	Off	0	-	-

Apply

- **Port**
Port1 to PortN, where N is based on the total PoE port number.
- **Mode**
“Enable”, “Disable”, or “Force” PoE function on the specific port. If the mode is configured to “Force”, the system will provide power forcedly on the specific port even there is no device connected to this port.
- **Status**
The field shows the PoE status of the specific port.
On: PoE is enabled or configured to force on the port and power is delivered on the port.
Off: PoE is enabled on the port but no Powered Device (PD) is connected.
Disabled: PoE is disabled on the port.
- **Class**
The field shows the class followed by the PD. The acceptable power of the class is defined in the IEEE 802.3af/at.
- **Voltage**

This field shows the output voltage that PSE provided. The power output of the boost switch will be boosted to 53V.

- **Power**

The Consumption field contains provided power in watts. The PSE can provide up to 30Watts and the PDs can receive up to 25.5Watts.

- **Apply** (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE POE KEEP ALIVE

PoE Keep Alive

Port	Detect	IP Address ?	Ping Interval ?	Hold Time ?
1	☐ Enable		30	60
2	☐ Enable		30	60
3	☐ Enable		30	60
4	☐ Enable		30	60
5	☐ Enable		30	60
6	☐ Enable		30	60
7	☐ Enable		30	60
8	☐ Enable		30	60

Apply

For more information, hover the mouse over the ? icon in the system.

- **Port**

Port1 to PortN, where N is based on the total PoE port number.

- **Detect**

"Enable" or "Disable" to detect the Powered Device (PD) on the specific port. When the detection is enabled, the system pings the configured IP Address on every Ping Interval.

- **IP Address**

The field is the IP Address of the Powered Device (PD).

- **Ping Interval**

The Ping Interval is the duration to ping the Powered Device (PD).

The range of the Ping Interval is **from 1 to 65535** seconds.

The default Ping Interval is **30** seconds.

- **Hold Time**

The Hold Time is used when the ping fails. The system will wait for the Hold Time to expire and then try to ping the PD again.

The range of the Hold Time is **from 1 to 65535** seconds.

The default Hold Time is **60** seconds.

- **Apply** (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE POE SCHEDULE

PoE Schedule

Port 1 ▼

Schedule Mode

☐ Enable
 ☒ Disable

	Sun	Mon	Tue	Wed	Thu	Fri	Sat
00	☐	☐	☐	☐	☐	☐	☐
01	☐	☐	☐	☐	☐	☐	☐
02	☐	☐	☐	☐	☐	☐	☐
03	☐	☐	☐	☐	☐	☐	☐
04	☐	☐	☐	☐	☐	☐	☐
05	☐	☐	☐	☐	☐	☐	☐
06	☐	☐	☐	☐	☐	☐	☐
07	☐	☐	☐	☐	☐	☐	☐
08	☐	☐	☐	☐	☐	☐	☐
09	☐	☐	☐	☐	☐	☐	☐
10	☐	☐	☐	☐	☐	☐	☐
11	☐	☐	☐	☐	☐	☐	☐
12	☐	☐	☐	☐	☐	☐	☐
13	☐	☐	☐	☐	☐	☐	☐
14	☐	☐	☐	☐	☐	☐	☐
15	☐	☐	☐	☐	☐	☐	☐
16	☐	☐	☐	☐	☐	☐	☐
17	☐	☐	☐	☐	☐	☐	☐
18	☐	☐	☐	☐	☐	☐	☐
19	☐	☐	☐	☐	☐	☐	☐
20	☐	☐	☐	☐	☐	☐	☐
21	☐	☐	☐	☐	☐	☐	☐
22	☐	☐	☐	☐	☐	☐	☐
23	☐	☐	☐	☐	☐	☐	☐

Apply

- **Port Selector**
Select the port number to configure the PoE Schedule.
Port1 to PortN, where N is based on the total PoE port number.
- **Schedule Mode**
“Enable” or “Disable” to provide power by the schedule on the specific port.
- **Enable** (for each day)
The week is from Sunday to Saturday.
- **Week** (The x-ray of the table)
The week is from Sunday to Saturday.
- **Hour** (The y-ray of the table)
The hour is from 00 (00:00) to 23 (23:00).
Users can select the checkbox with the Week and Hour in the table to enable the PoE Schedule on the specific time. For example, if the user wants the PoE to be enabled only on Monday from 6:00 to 7:00 and on Wednesday from 13:00 to 15:00, the following checkboxes must be selected – “Mon-06”, “Mon-07”, “Wed-13”, “Wed-14”, and “Wed-15”.
-  (Apply Button)
After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE POE PRIORITY

From **v1.1.48**, we remove “**Priority Mode**” and “**Power Limit**” for each port configurations in the PoE Priority Page because of the support of the PoE chipset.

From **v1.1.77**, all PoE Models (including MP/MT/MH/MQ/CP/CT/CH/CQ) support PoE Priority function including 60W/95W 802.3bt switches.

PoE Priority

Basic Settings

Power Budget	240	
--------------	-----	---

Power Settings

Port	Priority
1	Low
2	Low
3	Low
4	Low
5	Low
6	Low
7	Low
8	Low

Apply

For more information, hover the mouse over the  icon in the system.

- Basic Setting
 - Power Budget
This field defines the **maximum power** that can provide to all the connected PDs.
The range of Power Budget is **from 1 to 240 Watt**.
The default Power Budget is **240 Watt**.
- Power Settings
 - Port
Port1 to PortN, where N is based on the total PoE port number.
 - Priority
Assign the PoE priority to **high, middle, or low** for the specific port.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

Industrial Protocols

There are three industrial protocols provided in the switch – **EtherNet/IP**, **PROFINET**, and **Modbus/TCP**.

EtherNet/IP is an **industrial network protocol** that linked up the Common Industrial Protocol (CIP) with standard Ethernet. EtherNet/IP takes advantage of both of the **Internet Protocol suite** and **IEEE 802 standard**, which are the most widely deployed collections of Ethernet standards, to define the features and functions for its transportation, networking, data link and physical layers. CIP makes use of **object-oriented design** to provide EtherNet/IP with the services and device profiles needed for real-time control applications. The object-oriented design of the CIP is also used to promote consistent implementation of automation functions into a diverse ecosystem of products. EtherNet/IP defines how to organize the data in a TCP/UDP packet and transfers the packet in the application layer.

Modbus is a popular communication protocol used for the **industrial serial devices**. It is usually working as “**master-slave**” architecture and working with **programmable logic controllers** which are also called **PLCs**. The Modbus/TCP implies to provide Modbus Messaging service on the TCP/IP, so that the devices which are running Modbus can communicate with each other with Modbus messages. The Modbus messages are encapsulated with an Ethernet TCP/IP wrapper on the basis of the standard. During the transmission, the switches can only acquire the encapsulated information when the Modbus/TCP is enabled. If users would like to understand the real content of Modbus message, users have to install other utilities such as “ModScan”. Our switches implement the Modbus/TCP registers including system information, firmware information, port information, and packet information. The details refer to the “Modbus Data Mapping Information” section.

PROFINET is a technical standard for automation data communication over Industrial Ethernet. It is designed for collecting data and controlling devices in industrial systems. **PROFINET** is maintained and supported by **PROFIBUS & PROFINET International (PI)**. It defines entire data exchange not only IO-controllers and IO-devices but also parameter setting and diagnosis. **PROFINET** is useful for production and process automation, safety applications, and all range of drive technology while these applications are implemented.

MODBUS DATA FORMAT AND FUNCTION CODE

The primary four types of Modbus/TCP data format are as following:

Data Access Type		Function Code	Function Name
Bit Access	Physical Discrete Inputs	2	Read Discrete Inputs
	Internal Bits or Physical Coils	1	Read Coils
Word Access (16-bit Access)	Physical Input Registers	4	Read Input Registers
	Physical Output Registers	3	Read Holding Registers

MODBUS DATA MAPPING INFORMATION

In the following tables, we assume the total port number is **28**.

The following table is for **Function Code 3 (Holding Registers) / Function Code 6**.

Address Offset	Data Type	Interpretation	Description
System Information			
0x0000 to 0x0008	1 word	HEX	Port 1 to Port 8 Status Configuration 0x0000: Disable 0x0001: Enable

The following table is for **Function Code 4 (Input Registers)**. The data map addresses in the following table starts from **Modbus address 30001**. For example, the address offset 0x0000H equals Modbus address 30001, and the address offset 0x0030H equals Modbus address 30049. All the information read from our switches is in the **HEX mode** and users can refer to the ASCII table for the translation (e.g. 0x4B='K', 0x74='t').

Address Offset	Data Type	Interpretation	Description
System Information			
0x0030	20 words	ASCII	Product Name = "MT-0804G" Word 0 Hi byte = 'M' Word 0 Lo byte = 'T' Word 1 Hi byte = '-' Word 1 Lo byte = '0' Word 2 Hi byte = '8' Word 2 Lo byte = '0' Word 3 Hi byte = '4' Word 3 Lo byte = 'G'
0x0050	1 word		Product Serial Number
0x0051	2 words	HEX	Firmware Version For example:

			Word 0 = 0x0103 Word 1 = 0x0200 Firmware version is 1.3.2
0x0053	2 words	HEX	Firmware Release Date For example: Word 0 = 0x1719 Word 1 = 0x1506 Firmware was released on 2015-06-17 at 19 o'clock
0x0056	3 words	HEX	Ethernet MAC Address Ex: MAC = 01:02:03:0A:0B:0C Word 0 Hi byte = 0x01 Word 0 Lo byte = 0x02 Word 1 Hi byte = 0x03 Word 1 Lo byte = 0x0A Word 2 Hi byte = 0x0B Word 2 Lo byte = 0x0C
0x0059	1 word	HEX	Power 1 0x0000: Off 0x0001: On
0x005A	1 word	HEX	Power 2 0x0000: Off 0x0001: On
0x005B	1 word	HEX	Fault LED Status 0x0000: Boot error 0x0001: Normal 0x0002: Fault
0x0082	1 word	HEX	DO1 0x0000: Off 0x0001: On
Port Information			
0x1000 to 0x1008	1 word	HEX	Port 1 to Port 8 Status 0x0000: Link down 0x0001: Link up 0x0002: Disable 0xFFFF: No port
0x1100 to	1 word	HEX	Port 1 to Port 8 Speed

0x1108			0x0000: 10M-Half 0x0001: 10M-Full 0x0002: 100M-Half 0x0003: 100M-Full 0xFFFF: No port
0x1200 to 0x1208	1 word	HEX	Port 1 to Port 8 Flow Ctrl 0x0000: Off 0x0001: On 0xFFFF: No port
0x1300 to 0x1313 (Port 1) 0x1314 to 0x1327 (Port 2) ... 0x138C to 0x139F (Port 8)	20 words	ASCII	Port 1 to Port 8 Description Port Description = "100Tx,RJ45." Word 0 Hi byte = '1' Word 0 Lo byte = '0' Word 1 Hi byte = '0' Word 1 Lo byte = 'T' ... Word 4 Hi byte = '4' Word 4 Lo byte = '5' Word 5 Hi byte = '.' Word 5 Lo byte = '\0'
0x1500 to 0x1508	1 Word	HEX	Port 1 to Port 8 PoE Status 0x0000: PoE Off 0x0001: PoE On
0x1600 to 0x1608	1 Word	HEX	Port 1 to Port 8 PoE Power in Watt
Packet Information			
0x2000 to 0x200F	2 words	HEX	Port 1 to Port 8 Tx Packets Ex: port 1 Tx Packet Amount = 13248635 Received Modbus response: 0x13248635 Word 0 = 1324 Word 1 = 8635
0x2080 to 0x208F	2 words	HEX	Port 1 to Port 8 Tx Bytes Ex: port 1 Tx Btyes Amount = 13248635 Received Modbus response: 0x13248635 Word 0 = 1324 Word 1 = 8635
0x2100 to 0x21(YY*2-1)	2 words	HEX	Port 1 to YY Rx Packets Ex: port 1 Rx Packet Amount = 13248635 Received Modbus response:

			0x13248635 Word 0 = 1324 Word 1 = 8635
0x2180 to 0x218F	2 words	HEX	Port 1 to Port 8 Rx Bytes Ex: port 1 Rx Btyes Amount = 13248635 Received Modbus response: 0x13248635 Word 0 = 1324 Word 1 = 8635

ETHERNET/IP CIP OBJECT MAPPING INFORMATION

The following communication objects that defined in Common Industrial Protocol (CIP) are supported in switches for PLCs and SCADA systems to monitor:

- Identity Object
- TCP/IP Interface Object
- Ethernet Link Object
- Proprietary Object

The following tables introduce the supported attributes, including access rules for each attribute, and services for the above objects. Users can also refer to the official documents of CIP introduction (Vol. 1) and the Ethernet/IP Adaption of CIP (Vol. 2) to understand the details of each attribute of the standard objects.

Identity Object

The Class code of Identity object is defined in **CIP Vol 1, 5-2** and the value is **0x01**.

Class Attribute List

Addr ID	Access Rule	Name	Data Type	Description
1	Get	Revision	UINT (16)	Revision of this object
2	Get	Max Instance	UINT (16)	Maximum instance number of an object currently created in this class level of the device
3	Get	Number of Instances	UINT (16)	Number of object instances currently created in this class level of the device.
6	Get	Maximum ID Number Class Attributes	UINT (16)	The attribute ID number of the last class attribute of the class definition implemented in the device

7	Get	Maximum ID Number Instance Attributes	UINT (16)	The attribute ID number of the last instance attribute of the class definition implemented in the device
---	-----	--	-----------	--

Instance Attribute List

Addr ID	Access Rule	Name	(Struct.)	Data Type	Description
1	Get	Vendor ID		UINT (16)	The vendor ID of company
2	Get	Device Type		UINT (16)	0x0, "Managed Ethernet Switch"
3	Get	Product Code		UINT (16)	N/A
4	Get	Revision		(Struct.)	The version of the Identity object
			Major	USINT (8)	The structure member, major
			Minor	USINT (8)	The structure member, minor
5	Get	Status		WORD (16)	Not used
7	Get	Product Name		SHORT_STRING	The product name in human-readable format
101	Get	Serial Number		UDINT (32)	The serial number of each device

Common Service List

Service Code	Implementation		Service Name	Description
	Class	Instance		
0x01	✓	✓	Get_Attributes_All	Return the contents of all attributes of the class
0x0E	✓	✓	Get_Attributes_Single	Used to read an object instance attribute
0x10		✓	Set_Attributes_Single	Used to write an object instance attribute
0x05		✓	Reset	Invokes the reset service for the device

TCP/IP Interface Object

The Class code of TCP/IP Interface object is defined in **CIP Vol 2, 5-3** and the value is **0xf5**.

Class Attribute List

Addr ID	Access Rule	Name	Data Type	Description
1	Get	Revision	UINT (16)	Revision of this object
2	Get	Max Instance	UINT (16)	Maximum instance number of an object currently created in this class level of the device
3	Get	Number of Instances	UINT (16)	Number of object instances currently created in this class level of the device.
6	Get	Maximum ID Number	UINT (16)	The attribute ID number of the last

		Class Attributes		class attribute of the class definition implemented in the device
7	Get	Maximum ID Number Instance Attributes	UINT (16)	The attribute ID number of the last instance attribute of the class definition implemented in the device

Instance Attribute List

Addr ID	Access Rule	Name	(Struct.)	Data Type	Description
1	Get	Status		DWORD (32)	Interface status 0 = The Interface Configuration attribute has not been configured. 1 = The Interface Configuration attribute contains valid configuration obtained from BOOTP, DHCP or non-volatile storage
2	Get	Configuration Capability		DWORD (32)	Interface capability flags Bit map of capability flags: Bit 0: BOOTP Client Bit 1: DNS Client Bit 2: DHCP Client Bit 3: DHCP-DNS Update Bit 4: Configuration Settable
3	Get/Set	Configuration Control		DWORD (32)	Interface control flags Bit map of control flags: Bit 0 to 3: Startup Configuration 0 = The device shall use the interface configuration values previously stored (for example, in non-volatile memory or via hardware switches). 1 = The device shall obtain its interface configuration values via BOOTP.

					2 = The device shall obtain its interface configuration values via DHCP upon start-up. 3 to 15 = Reserved.
4	Get	Physical Link Object		(Struct.)	Path to physical link object
			Path Size	UINT (16)	Size of Path
			Path	Padded EPATH	Logical segments identifying the physical link object
5	Get/Set	Interface Configuration		(Struct.)	TCP/IP network interface configuration
			IP Address	UDINT (32)	The device's IP address
			Network Mask	UDINT (32)	The device's network mask
			Gateway Address	UDINT (32)	Default gateway address
			Name Server	UDINT (32)	Primary name server
			Name Server 2	UDINT (32)	Secondary name server
			Domain Name	STRING	Default domain name
6	Get/Set	Host Name		UDINT (32)	Host name

Common Service List

Service Code	Implementation		Service Name	Description
	Class	Instance		
0x01	✓	✓	Get_Attributes_All	Return the contents of all attributes of the class
0x0E	✓	✓	Get_Attributes_Single	Used to read an object instance attribute
0x10		✓	Set_Attributes_Single	Used to write an object instance attribute

Ethernet Link Object

The Class code of TCP/IP Interface object is defined in **CIP Vol 2, 5-4** and the value is **0xf6**. There is an instance for each switch port, and mapping as the following table:

Instance Number	Mapping to
0	Ethernet Link class
1	1 st switch port
2	2 nd switch port

3	3 rd switch port
...	N th switch port

Class Attribute List

Addr ID	Access Rule	Name	Data Type	Description
1	Get	Revision	UINT (16)	Revision of this object
2	Get	Max Instance	UINT (16)	Maximum instance number of an object currently created in this class level of the device
3	Get	Number of Instances	UINT (16)	Number of object instances currently created in this class level of the device.
6	Get	Maximum ID Number Class Attributes	UINT (16)	The attribute ID number of the last class attribute of the class definition implemented in the device
7	Get	Maximum ID Number Instance Attributes	UINT (16)	The attribute ID number of the last instance attribute of the class definition implemented in the device

Instance Attribute List

Addr ID	Access Rule	Name	(Struct.)	Data Type	Description
1	Get	Interface Speed		UDINT (32)	Interface speed currently in use (Speed in Mbps, e.g., 0, 10, 100, 1000, 10000, etc.)
2	Get	Interface Flags		DWORD (32)	Refer to the Interface Flags table
3	Get	Physical Address		ARRAY of 6 USINT (8)	MAC layer address (The System MAC address)
4	Get	Interface Counters		(Struct.)	Counters relevant to the receipt of packets
			In Octets	UDINT (32)	Octets received on the interface.
			In Ucast Packets	UDINT (32)	Unicast packets received on the interface
			In NUcast Packets	UDINT (32)	Non-unicast packets received on the interface
			In Discards	UDINT (32)	Inbound packets received on the interface but are discarded
			In Errors	UDINT (32)	Inbound packets that contain

					Errors (does not include In Discards)
			In Unknown Protos	UDINT (32)	Inbound packets with unknown protocol
			Out Octets	UDINT (32)	Octets sent on the interface
			Out Ucast Packets	UDINT (32)	Unicast packets sent on the interface
			Out NUcast Packets	UDINT (32)	Non-unicast packets sent on the interface
			Out Discards	UDINT (32)	Discarded outbound packets
			Out Errors	UDINT (32)	Outbound packets that contain errors
6	Get/Set	Interface Control		(Struct.)	Configuration for physical interface
			Control Bits	WORD (16)	Bit 0 : Auto-Negotiate Value 0: Force Value 1: Auto-Nego Bit 1 : Half/Full Duplex Value 0: half duplex Value 1: full duplex Bit 2 to 15 : Reserved, all zero
			Forced Interface Speed	UINT (16)	Speed at which the interface shall be forced to operate
7	Get	Interface Type		USINT	Value 0 : Unknown interface type. Value 1 : The interface is internal to the device, for example, in the case of an embedded switch. Value 2 : Twisted-pair (e.g., 10Base-T, 100Base-TX, 1000Base-T, etc.) Value 3 : Optical fiber (e.g., 100Base-FX) Value 4 to 256 : Reserved
8	Get	Interface State		USINT	Value 0 : Unknown interface state Value 1 : The interface is enabled and is ready to send and receive

					data Value 2 : The interface is disabled Value 3 : The interface is testing Value 4 to 256 : Reserved
9	Get	Admin State		USINT	Value 0 : Reserved Value 1 : Enable the interface Value 2 : Disable the interface. If this is the only CIP communications interface, a request to disable the interface shall result in an error (status code 0x09). Value 3 to 256 : Reserved
10	Get	Interface Label		SHORT_STRING	Human readable identification
101	Get	PoE Status		USINT (8)	Value 1 : PoE On Value 2 : PoE Off
102	Get	PoE Power		UDINT (32)	PoE Power in Watt
103	Get/Set	PoE Mode		UDINT (32)	Value 0 : Unknown Value 1 : Enable Value 2 : Disable Value 3 : Force

Interface Flags

Bit(s)	Called	Definition
0	Link Status	0 indicates an inactive link; 1 indicates an active link.
1	Half/Full Duplex	0 indicates half duplex; 1 indicates full duplex.
2-4	Negotiation Status	Indicates the status of link auto-negotiation 0 = Auto-negotiation in progress. 1 = Auto-negotiation and speed detection failed. Using default values for speed and duplex. Default values are product-dependent; recommended defaults are 10Mbps and half duplex. 2 = Auto negotiation failed but detected speed. Duplex was defaulted. Default value is product-dependent; recommended default is half duplex.

		3 = Successfully negotiated speed and duplex. 4 = Auto-negotiation not attempted. Forced speed and duplex.
5	Manual Setting Requires Reset	0 indicates the interface can activate changes to link parameters (auto-negotiate, duplex mode, interface speed) automatically. 1 indicates the device requires a Reset service be issued to its Identity Object in order for the changes to take effect.
6	Local Hardware Fault	0 indicates the interface detects no local hardware fault; 1 indicates a local hardware fault is detected. The meaning of this is product-specific. For example, an AUI/MII interface might detect no transceiver attached, or a radio modem might detect no antenna attached. In contrast to the soft, possibly self-correcting nature of the Link Status being inactive, this is assumed a hard-fault requiring user intervention.
7-31	Reserved	Shall be set to zero

Common Service List

Service Code	Implementation		Service Name	Description
	Class	Instance		
0x0E	✓	✓	Get_Attributes_Single	Used to read an object instance attribute
0x10		✓	Set_Attributes_Single	Used to write an object instance attribute

Proprietary Object

The Class code of Proprietary object is defined by vendor, and the value is **0x1C1**.

Class Attribute List

Addr ID	Access Rule	Name	Data Type	Description
1	Get	Power 1	USINT (8)	Power 1 status. Value 1 : On Value 0 : Off
2	Get	Power 2	USINT (8)	Power 2 status. Value 1 : On Value 0 : Off
3	Get	Alarm Relay	USINT (8)	Alarm Relay status. Value 1 : On Value 0 : Off

4	Get	Digital Input	USINT (8)	Digital Input status. Value 1 : High Value 0 : Low
5	Get	System Time	UDINT (32)	System Time encodes as unix time.
6	Get	All Interface Speed	ARRAY of 28 UDINT(32)	Array list of all interface speed currently in use
7	Get	All Interface Flags	ARRAY of 28 DWORD(32)	Array list of all interface flags. Refer to the Interface Flags table
8	Get	All Interface States	UDINT (32)	Bitwise of all current interface states. Bit 0 : Port 1 Value 0 : Link down Value 1 : Link up Bit 1 : Port 2, and so on

ETHERNET/IP ELECTRONIC DATA SHEET (EDS) FILE

The EDS (Electronic Data Sheet) file includes electronic descriptions of all relevant communication parameters and objects of an EtherNet/IP device. It is required for I/O controllers to recognize switch and its CIP capability.

The list includes the sections which are described in our EDS file.

- [File]
- [Device]
- [Device Classification]
- [Port]
- Icon should be **32 * 32** in pixel.

PROFINET PARAMETERS MAPPING INFORMATION

There are three categories of parameters – Device Parameters, Device Status, and Port Parameters.

- r/w: Read and Write
- ro: Read Only

Device Parameters

Byte	Name	Access	Value	Description	Default Value
0	Status Alarm	rw	0	Do not send any alarms	0: No Alarms
			1	Send alarm if any status change	

1	Power Alarm 1	rw	0	Do not send power failed alarms	0: No Alarms
			1	Send alarm if power supply 1 fails	
2	Power Alarm 2	rw	0	Do not send power failed alarms	0: No Alarms
			1	Send alarm if power supply 2 fails	

Device Status

Byte	Name	Access	Value	Description
0	Overall Device Status	ro	0	Unavailable
			1	OK
			2	Device Error
1	Fault Status	ro	0	Unavailable
			1	OK
			2	Device Detect Fault
2	Power 1 Status	ro	0	Unavailable
			1	OK
			2	Power 1 Fails
3	Power 2 Status	ro	0	Unavailable
			1	OK
			2	Power 2 Fails
4	Relay 1	ro	0	Unavailable
			1	Closed
			2	Open
5	Relay 2	ro	0	Unavailable
			1	Closed
			2	Open
6	Redundant Mode	ro	0	Unavailable
			1	RSTP
			2	ERPS
			3	ERPS Sub-ring 1
			4	ERPS Sub-ring 2
7	Ring Status	ro	0	Unavailable
			1	Healthy
			2	Break
8	Redundant Port 1 Status	ro	0	Unavailable
			1	Forwarding
			2	Blocking

			3	Link Down
9	Redundant Port 2 Status	ro	0	Unavailable
			1	Forwarding
			2	Blocking
			3	Link Down
10	Sub-ring Mode	ro	0	Unavailable
			1	Healthy
			2	Break
11	Sub-ring Port 1 Status	ro	0	Unavailable
			1	Forwarding
			2	Blocking
			3	Link Down
12	Sub-ring Port 2 Status	ro	0	Unavailable
			1	Forwarding
			2	Blocking
			3	Link Down
13	Connection	ro	0	Unavailable
			1	OK
			2	Connection Failure

Port Parameters

Byte	Name	Access	Value	Description
0	Port Alarm	rw	0	Off, do not send alarm
			1	On, send alarm when port link down
1	Port Admin State	rw	0	Unavailable
			1	Off, inactive
			2	On, active
2	Port Link State	ro	0	Unavailable
			1	Link is down
			2	Link is up
3	Port Speed	ro	0	Unavailable
			1	Unknown
			2	10M
			3	100M
			4	1G
			5	10G

4	Port Duplex	ro	0	Unavailable
			1	Half
			2	Full
5	Port Auto-negotiation	ro	0	Unavailable
			1	Off
			2	On
6	Port Flow Control	ro	0	Unavailable
			1	Off
			2	On
7	Port MDI/MDIX	ro	0	Unavailable
			1	MDI
			2	MDIX

CONFIGURE INDUSTRIAL PROTOCOLS INFORMATION

Note: For **PoE models**, the system will take around **10 seconds** to read PoE status.

Industrial Protocols

Modbus/TCP

Modbus Mode ☐ Enable ☒ Disable

Ethernet/IP

Ethernet/IP Mode ☐ Enable ☒ Disable

Profinet

Profinet Mode ☐ Enable ☒ Disable

Apply

- [Modbus Mode](#)
"Enable" or "Disable" the Modbus/TCP function.
- [Ethernet/IP Mode](#)
"Enable" or "Disable" the Ethernet/IP function.
- [PROFINET Mode](#)
"Enable" or "Disable" the PROFINET function.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

UPnP

UPnP is **Universal Plug and Play**, a set of networking protocols that permit the network devices to seamlessly discover each other in the networks. It is promoted by the UPnP Forum, but since 2016, all UPnP efforts are managed by the Open Connectivity Foundation.

UPnP extends “**plug and play**” to connect to a network device without configuration. When an UPnP device such as printer, Wi-Fi AP, or mobile device connects to a network, it will automatically establish the working configurations with another devices.

CONFIGURE UPNP INFORMATION



UPnP Mode

☐ Enable
 ☒ Disable

Advertisement Interval

1800

?

Apply

For more information, hover the mouse over the ? icon in the system.

- [UPnP Mode](#)
“Enable” or “Disable” the UPnP function.
- [Advertisement Interval](#)
A time period used to send the UPnP advertisement frame.
The range of the Advertisement Interval is **from 300 to 86400** seconds.
The default Advertisement Interval is **1800** seconds.
-  (Apply Button)
After configuring above fields, click "**Apply**" button to make the changes effective.

Port Management

Port Management contains a “Description” field that is used to describe the port, “Enable” or “Disable” option to turn on or turn off a specific port, configure the speed-duplex for the port, and Flow Control on the port. In the Port Status page, the users can obtain information such as Link Status, Speed, Duplex, Flow Control, Tx and Rx in Bytes, and PoE status. These are very helpful for the administrator to manage the interfaces on the switch.

CONFIGURE PORT INFORMATION

Port Settings

Port	Description ?	Link Status	Admin Status	Speed	Flow Control
1		Down	Enable ▾	Auto ▾	Off ▾
2		Up	Enable ▾	Auto ▾	Off ▾
3		Down	Enable ▾	Auto ▾	Off ▾
4		Down	Enable ▾	Auto ▾	Off ▾
5		Down	Enable ▾	Auto ▾	Off ▾
6		Down	Enable ▾	Auto ▾	Off ▾
7		Down	Enable ▾	Auto ▾	Off ▾
8		Down	Enable ▾	Auto ▾	Off ▾
9		Down	Enable ▾	Auto ▾	Off ▾
10		Down	Enable ▾	Auto ▾	Off ▾
11		Down	Enable ▾	Auto ▾	Off ▾
12		Down	Enable ▾	Auto ▾	Off ▾

Apply

For more information, hover the mouse over the ? icon in the system.

- **Port**
Port1 to PortN, where N is based on the total port number.
- **Description**
The description for the port is helpful for the administrator to identify the difference between the ports.

The **max. length** for the Description is **32 characters**.

Note: #, \, ', ", ? are **invalid** characters.

- **Link Status**

Link Status shows “Up”, “Down”, or “Disable” to reflect the link status of the port.

- **Admin Status**

“Enable” or “Disable” the Admin Status of the port to restrict the transmission on the port.

Note: Administrator can **turn off the un-used port** to **secure** the network with unexpected device.

- **Speed**

The users are able to manually fix the speed and duplex or automatically run auto-negotiation to determine the speed and duplex for copper ports.

- Auto: The port follows IEEE 802.3 protocol to auto-negotiate with connected device.
- 100M-Full: The port transmits frames with **100Mbps** per second speed and **full duplex**.
- 100M-Half: The port transmits frames with **100Mbps** per second speed and **half duplex**.
- 10M-Full: The port transmits frames with **10Mbps** per second speed and **full duplex**.
- 10M-Half: The port transmits frames with **10Mbps** per second speed and **half duplex**.

The users have to manually configure SFP ports to fix the speed and duplex. The default setting is the highest speed for the SFP slot.

- Auto: The port follows IEEE 802.3 protocol to auto-negotiate with connected device.
- 10G-Full (**Only supported on 10G models**)
The port transmits frames with **10Gbps** per second speed and **full duplex**.
- 1G-Full: The port transmits frames with **1Gbps** per second speed and **full duplex**.
- 100M-Full (**Only supported on dual speed SFP ports**)
The port transmits frames with **100Mbps** per second speed and **full duplex**.

- Copper-Full: Select Copper-Full when using **copper SFP** module.

Note: Configure the port speed to “**1G-Full**” if users need the **VDSL2 SFP** supported.

Configure the port speed to “**Auto**” if the connected device is unmanaged.

For **Copper SFP Module**, please refer to the following instructions to configure the correct speed:

Copper SFP Module Type	Speed Config	Note
SGMII (10/100/1000M)	Copper-Full	Only support transmitting on 1000M
Multi-Speed (1G/10G)	10G-Full	Depends on the connected speed
10G	10G-Full	
1G / VDSL2	1G-Full	

- **Flow Control**

“Enable” or “Disable” the Flow Control when the speed is set to “Auto”. Enabling the Flow Control helps to prevent the traffic from losing when the network is in congestion.

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

SFP DDM STATUS

 SFP DDM

SFP Port 9 ▼

 **Transceiver Info**

Vendor Name	-
Part number	-
Transceiver Type	Unknown
Laser wavelength	0nm
Link length	-

- [SFP Port Selector](#)

Select the SFP port number to display SFP DDM information.

- [Transceiver Info](#)

If there is no SFP module inserted or the information cannot be read, the field will show “-”.

- [Vendor Name](#)
This field shows the **brand or vendor name** of the SFP module.
- [Part Number](#)
This field shows the **model name (part number)** of the SFP module.
- [Transceiver Type](#)
This field shows the **transceiver type** of the SFP module including transmitting **speed** and the **type of fiber**. If there is no SFP module inserted or the transceiver type cannot be read, the field will show “**Unknown**”.
- [Laser Wavelength](#)
This field shows the **laser operating wavelength** of the SFP module.
- [Link Length](#)
This field shows the **maximum link length** of the SFP module.

DDM Module

Real-Time Value

Temperature	57.000deg
Voltage	0.0mV
Current	0.000mA
Tx Power	0.0000mW
Rx Power	0.0000mW

Alarm Warning

	HI ALARM	HI WARNING	LOW WARNING	LOW ALARM
TEMP	57.000deg	0.000deg	0.000deg	0.000deg
VOLT	1459.2mV	0.0mV	0.0mV	0.0mV
CURR	29.184mA	0.000mA	0.000mA	0.000mA
TX PW	1.4592mW	0.0000mW	0.0000mW	0.0000mW
RX PW	1.4592mW	0.0000mW	0.0000mW	0.0000mW

- [DDM Module](#)

This section only shows when the **SFP DDM** is supported on the inserted SFP module.

- [Real Time Value](#)

The current operating information including **temperature**, **voltage**, **current**, **Tx power**, and **Rx power**.


- [Alarm Warning](#)

The default configured threshold for triggering the alarm and system warning. There are 5 types of information (**temperature**, **voltage**, **current**, **Tx power**, and **Rx power**) and 4 levels of alarm and warning (**high alarm/warning**, **low alarm/warning**).

DETAILED PORT STATUS

There are two methods to link to **detailed port status (RMON)**. One is from **menu** and the other is from the **front panel** picture. Users can directly click the port on the front panel and then the page will redirect to the detailed port status page of the specific port. The RMON is a set of standard Simple Network Management Protocol (SNMP) and it is useful to monitor and manage the incoming and outgoing traffic.

Detailed Port Status

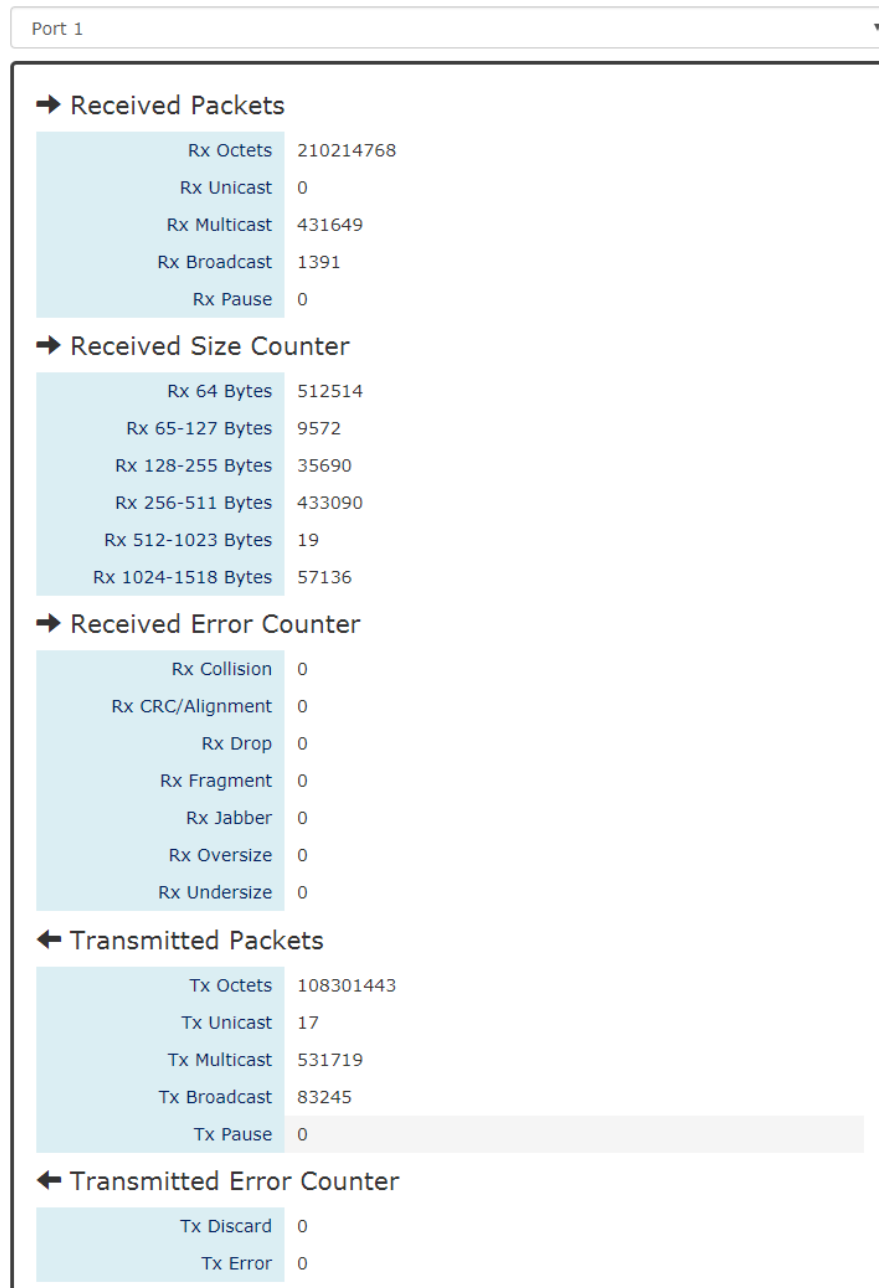

- [Port Selector](#)

Select the port number to monitor the RMON information.

Port 1 to N, where N is based on the total port number.

- **Received Packets**
 - Rx Octets: the total received traffic in bytes
 - Rx Unicast: the number of received unicast packets
 - Rx Multicast: the number of received multicast packets
 - Rx Broadcast: the number of received broadcast packets
 - Rx Pause: the number of MAC Control packets received on the specific interface with an opcode indicating the PAUSE operation.
- **Received Size Counter**
 - Rx 64 Bytes: the number of received packets that were 64 octets
 - Rx 65-127 Bytes: the number of received packets that were from 65 to 127 octets
 - Rx 128-255 Bytes: the number of received packets that were from 128 to 255 octets
 - Rx 256-511 Bytes: the number of received packets that were from 256 to 511 octets
 - Rx 512-1023 Bytes: the number of received packets that were from 512 to 1023 octets
 - Rx 1024-1518 Bytes: the number of received packets that were from 1024 to 1518 octets
- **Received Error Counter**
 - Rx Collision: the total number of collisions on the Ethernet segment.
 - Rx CRC/Alignment: the total number of received packets that have either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
 - Rx Drop: the total number of dropped packets due to lack of resources.
 - Rx Fragment: the total number of received packets that are less than 64 octets and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
 - Rx Jabber: the total number of received packets that are longer than 1518 octets and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
 - Rx Oversize: the total number of received packets that are longer than 1518 octets.
 - Rx Undersize: the total number of received packets that are less than 64 octets.
- **Transmitted Packets**
 - Tx Octets: the total transmitted traffic in bytes.
 - Tx Unicast: the number of transmitted unicast packets
 - Tx Multicast: the number of transmitted multicast packets

- Tx Broadcast: the number of transmitted broadcast packets
- Tx Pause: the number of MAC Control packets transmitted on the specific interface with an opcode indicating the PAUSE operation.
- Transmitted Error Counter
 - Tx Discard: the number of outbound packets which are chosen to be discarded even though no errors had been detected. One possible reason for discarding such a packet could be to free up buffer space.
 - Tx Error: the number of outbound packets that could not be transmitted because of errors.

EEE STATUS

Energy-Efficient Ethernet (EEE) is a feature to save power when the link is idle, which means the port is linked up but there is no traffic on the link. The EEE function can be enabled or disabled by port.

EEE Status

Port	State	TxIdleTime	TxWakeupTime	TxEventCount	TxDuration	RxEventCount	RxDuration	Enable
1	Disable	60	30	-1	-1	-1	-1	☐
2	Disable	60	30	-1	-1	-1	-1	☐
3	Disable	60	30	-1	-1	-1	-1	☐
4	Disable	60	30	-1	-1	-1	-1	☐
5	Disable	60	30	-1	-1	-1	-1	☐
6	Disable	60	30	-1	-1	-1	-1	☐
7	Disable	60	30	-1	-1	-1	-1	☐
8	Disable	60	30	-1	-1	-1	-1	☐

☐ Auto Refresh

Refresh Rate: seconds 

- Port
Port 1 to N, where N is based on the total port number.
- State
Display the state, Enable or Disable, of EEE function.
- TxIdleTime
The TxIdleTime is the required time to enter the EEE low-power mode.
- TxWakeupTime
The TxWakeupTime is the required time to exit the EEE low-power mode.
- TxEventCount

The TxEventCount is the EEE Low Power Idle (LPI) event counter of Tx. This counter implies the number of times that the LPI mode has been enforced by EEE function on the transmitting side.

- [TxDuration](#)

The TxDuration is an LPI event duration on the transmitting path which is updated if the port is in the EEE LPI mode.

- [RxEventCount](#)

The RxEventCount is the EEE LPI event counter of Rx. This counter implies the number of times that the LPI mode has been enforced by EEE function on the receiving side.

- [RxDuration](#)

The RxDuration is an LPI event duration on the receiving path which is updated if the port is in the EEE LPI mode.

- [Enable](#)

Select the specific ports or deselect the selected ports and then click the “**Apply Selected**” button to enable or disable the EEE function. Directly click “**Enable All**” to enable EEE function on all ports or “**Disable All**” to disable EEE function on all ports.

PORT STATUS

Port Status

Clear Selected

Clear All

Port	Link Status	Speed	Duplex	Flow Control	Rx Byte	Tx Byte	PoE	Clear Rx/Tx
1	Up	1000	Full	Off	1704675	33021829	No_PD	☐
2	Up	100	Full	Off	17960092	13197836	Delivery	☐
3	Down	-	-	Off	0	0	No_PD	☐
4	Up	100	Full	Off	5927919	25182558	Delivery	☐
5	Up	1000	Full	Off	1175481	31105465	No_PD	☐
6	Down	-	-	Off	0	0	No_PD	☐
7	Up	1000	Full	Off	3192398	28409537	No_PD	☐
8	Down	-	-	Off	0	0	No_PD	☐
9	Down	-	-	Off	0	0	None	☐
10	Down	-	-	Off	0	0	None	☐
11	Down	-	-	Off	0	0	None	☐
12	Down	-	-	Off	0	0	None	☐

☐ Auto Refresh

Refresh

Refresh Rate: seconds ⓘ

- [Port](#)
Port 1 to N, where N is based on the total port number.
- [Link Status](#)
Link Status displays the link state ("Up" or "Down") of the port. If the port is disabled, it displays "Disabled".
- [Speed](#)
Speed displays the access speed in bit per second of the port. If the port is linked down, it displays "-".
- [Duplex](#)
Duplex displays the link-type (Full or Half) of the port. If the port is linked down, it displays "-".
- [Flow Control](#)
It is the state (On or Off) of the Flow Control.
- [Rx Byte](#)
This is the total **received** frames formatted in byte.
- [Tx Byte](#)

This is the total **transmitted** frames formatted in byte.

- [PoE](#) (PoE Model Only)

PoE displays the PoE state (Delivery, No PD, Disabled, None) of the port. If the port does not support PoE function, it displays “None”.

Note: This information is displayed on the system that supports the PoE function.

- [Clear Rx/Tx](#)

Select the specific ports and click the “**Click Selected**” button to clear the Tx/Rx Byte information or click “**Click All**” button to clear all ports’ Tx/Rx Byte information.

IGMP Snooping

Internet Group Management Protocol (IGMP) is used in communicating among hosts and establishing a multicast group membership on the IPv4 networks (Layer 3). IGMP provides the ability to prune **multicast traffic** to those who need this kind of traffic and reduce the amount of traffic on the network. However, switches work on the MAC Layer (Layer 2) and are unable to obtain IGMP information. **IGMP Snooping** allows the switch to listen to the IGMP communication between hosts and routers, and maintains a table of multicast IPs and group members. **IGMP Snooping** can prevent the hosts on the LAN from receiving traffic from a non-joined multicast group and save bandwidth of the network.

CONFIGURE IGMP SNOOPING INFORMATION

IGMP Snooping Settings

Basic Settings

Mode	☒ Enable ☐ Disable	
Last-Member Count	2	
Last-Member Interval	1	

Fast-Leave Settings

Port	Fast-Leave Mode	
1	☐ Enable	☒ Disable
2	☐ Enable	☒ Disable
3	☐ Enable	☒ Disable
4	☐ Enable	☒ Disable
5	☐ Enable	☒ Disable
6	☐ Enable	☒ Disable
7	☐ Enable	☒ Disable
8	☐ Enable	☒ Disable
9	☐ Enable	☒ Disable
10	☐ Enable	☒ Disable
11	☐ Enable	☒ Disable
12	☐ Enable	☒ Disable

Apply

For more information, hover the mouse over the  icon in the system.

- Basic Setting

- Mode

“Enable” or “Disable” the IGMP Snooping function.

- Last-Member Count
The count is the number of times that the router sends IGMP query messages to receive the leave message.
The range of the Last-Member Count is **from 2 to 10**.
The default Last-Member Count Interval is **2**.
- Last-Member Interval
The interval is the period to send IGMP query messages.
The range of the Last-Member Interval is **from 1 to 25** seconds.
The default Last-Member Interval is **1** second.
- Fast-Leave Setting
 - Port
Port 1 to N, where N is based on the total port number.
 - Fast-Leave Mode
“Enable” or “Disable” the fast-leave function on the specific port. If the fast-leave mode is enabled on the port, the switch will close the multicast stream when receiving a leave message on this port without further action.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE IGMP SNOOPING QUERIER INFORMATION

IGMP Snooping Querier

Basic Settings

Mode	☐ Enable ☒ Disable
Query Interval	125 
Max Response Time	10 

Query Version Settings

VLAN ID 	State	Version	
1	Enable	v2	



For more information, hover the mouse over the  icon in the system.

- Basic Settings

- Mode
“Enable” or “Disable” the IGMP Snooping Querier function. If it is enabled, the system sends IGMP snooping **version 1 and 2** queries.
- Querier Interval
This period is the interval to send the IGMP snooping queries.
The range of the Querier Interval is **from 1 to 3600** seconds.
The default Querier Interval is **125** seconds.
- Query Max Response Time
This is a timer to wait for the member response of the IGMP groups. It is used in **removing** the information of the IGMP groups if no member responds to the query.
- Query Version Settings
The Query Version Settings is configured for per-VLAN query.
 - VLAN ID
The field is to fill in the VLAN ID to configure the IGMP Snooping query version.
 - State
“Enable” or “Disable” the IGMP Snooping query on the configured VLAN ID.
 - Version
Set the IGMP Snooping version (v1, v2c, v3) on the specific VLAN.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE UNKNOWN MULTICAST INFORMATION

⚙️ Unknown Multicast

📍 Action Setting

Unknown-Multicast

Flooding ▼

📍 Router Port Settings

Port	Router Port	Status
1	☐	-
2	☐	-
3	☐	-
4	☐	-
5	☐	-
6	☐	-
7	☐	-
8	☐	-
9	☐	-
10	☐	-
11	☐	-
12	☐	-

Apply

- Action Settings

- Unknown-Multicast

Configure the action when the system receives an unknown-multicast packet.

Flooding: flood the unknown-multicast packet to all other ports.

Discarding: discard the unknown-multicast packet.

Router: forward the unknown-multicast packet to the router port.

- Router Port Settings

- No.

Port 1 to N, where N is based on the total port number.

- Router Port

Set the specific port to router port or not.

- Status

The status field shows the port's status which “-” implies not a router port and “static” implies set to router port.

IGMP SNOOPING TABLE

⚙️ IGMP Snooping Table

Show entries
Search:

Multicast IP	Group
224.0.1.60	Port 5
239.255.255.250	Port 5

Showing 1 to 2 of 2 entries

First
Previous
Next
Last

☐ Auto Refresh

Refresh

Refresh Rate: seconds ⓘ

- [Multicast IP](#)

The Multicast IP is the IP address of the multicast group.

- [Group](#)

The group shows the port number, which joined the group.

802.1Q VLAN

802.1Q VLAN

Virtual Local Area Network (VLAN) is a structure that can ease Network planning. The devices in a VLAN can be located anywhere without the restriction of physical connections, but work like they are on the same physical segment.

IEEE 802.1Q defines **VLAN tagging** conception for the Ethernet frames. VLAN tagging supports frames in the different VLAN groups transmitting on a link (called **VLAN trunk**). The maximum number of VLANs on the Ethernet network is 4096. The VLAN 0 and VLAN 4095 are for specific use and hence the usable VLAN number is **4094**.

VLAN Q-IN-Q

VLAN Q-in-Q, also called **Stacked VLAN**, is an extension for 802.1Q VLAN. It supports a maximum of 4096*4096 VLAN groups. VLAN Q-in-Q can apply a port to a provider, customer, or tunnel for different applications. The header of the stacked VLAN frame contains two 802.1Q Headers with different Ethertype (TPID). The TPID "0x88A8" is the outer tag by default and the TPID "0x8100" is the inner tag for 802.1Q VLAN. Customized ethertype called **Specific Provider Ethertype** are supported if one or more ports are set to "**Specific Provider**".

CONFIGURE 802.1Q VLAN INFORMATION

VLAN Settings

VLAN Member Settings

VLAN ID 	Name 	Untagged Ports	Tagged Ports	
1	-	10 items selected ▾	Nothing selected ▾	

For more information, hover the mouse over the  icon in the system.

- VLAN Member Settings
 - VLAN ID
Assigns a unique VLAN ID to this VLAN group.
The range of the VLAN ID is **from 1 to 4094**.
 - Name
Assigns a name to this VLAN group to identify the different VLANs.
The **max. length** for the Name is **32 characters**.
Note: #, \, ', ", ? are **invalid** characters.

- Untagged Ports

Sets the untagged ports for this VLAN group. The system **removes the VLAN tag** before transmitting from the port that is set to “**untagged**”. Usually, this port is connected to the end device that belongs to this VLAN.

- Tagged Ports

Sets the tagged ports for this VLAN group. The system **keeps the VLAN tag** when transmitting from the port that is set to “**tagged**”. Usually this port is connected to another switch and uses the VLAN tag to transfer the VLAN information.

- : Click the **plus icon** to add a VLAN Member row.
- : Click the **remove icon** to delete the VLAN Member row.

802.1Q VLAN TABLE

VLAN Table

Show entries
Search:

VLAN ID	VLAN Name	Untag Member	Tag Member
1	-	1,2,3,4,5,6,7,8,9,10,11,12	-
100	VLAN_100	9,11	10,12
200	VLAN_200	-	9,10,11,12

Showing 1 to 3 of 3 entries

First Previous Next Last

☐ Auto Refresh

Refresh Rate: seconds

Refresh

- [VLAN ID](#)
This is the assigned unique **VLAN ID** for this VLAN group.
- [VLAN Name](#)
This is the assigned **VLAN Name** for this VLAN group.
- [Untag Member](#)
These ports are assigned as VLAN untagged ports.
- [Tag Member](#)
These ports are assigned as VLAN tagged ports.

CONFIGURE 802.1Q VLAN PVID & ACCEPT TYPE

VLAN PVID

Port	PVID ?
1	1
2	1
3	1
4	1
5	1
6	1
7	1
8	1
9	1
10	1
11	1
12	1

Accept Type

Port	Filter
1	All
2	All
3	All
4	All
5	All
6	All
7	All
8	All
9	All
10	All
11	All
12	All

Apply

For more information, hover the mouse over the ? icon in the system.

- **VLAN PVID**
 - Port
Port1 to PortN, where N is based on the total port number.
 - PVID
Assign a VLAN ID to the frames without a VLAN tag that come into the specific port.
- **Accept Type**
 - No.
Port1 to PortN, where N is based on the total port number.
 - Filter
Three types of filters are provided: All, Tagged Only, Untagged Only.
All: Accept both tagged and untagged frames that come into the port.
Tagged Only: Accept only tagged frames that come into the port.
Untagged Only: Accept only untagged frames that come into the port.
- **Apply** (Apply Button)

After configuring the above fields, click "**Apply**" button to make it effective.

CONFIGURE VLAN Q-IN-Q

Q-in-Q Settings

Specific Provider Ethertype

Ethertype	0x88A8	
-----------	--------	---

For more information, hover the mouse over the  icon in the system.

- [Specific Provider Ethertype](#)

This is a global configuration and an Ethertype is assigned for all ports, which are configured as “**Specific Provider**”. This field is locked (disabled) until at least one port is configured to the “**Specific Provider**” in the “**Q-in-Q Port Settings**” section.

The range of the Provider Ethertype is from 0x0000 to 0xFFFF, but 0x8100 is **invalid**.

The default Provider Ethertype is 0x88A8.

Q-in-Q Port Settings

Port	Mode
1	Customer
2	Customer
3	Customer
4	Customer
5	Customer
6	Customer
7	Customer
8	Customer
9	Customer
10	Customer
11	Customer
12	Customer

Apply

- [Q-in-Q Port Settings](#)

- Port

Port1 to PortN, where N is based on the total port number.

- Mode

Set the port to one of the Q-in-Q mode.

The Egress is dependent on the connected device and hence the egress action is skipped.

Mode	Ingress
Q-in-Q Tunnel	Untagged Frames: Add TPID:0x88A8 tag and forward. Tagged Frames: - TPID:0x8100: Add TPID:0x88A8 tag and forward. - TPID:0x88A8: Forward the frames.
Mode	Ingress
Customer	A port set to "Customer" runs typically 802.1Q VLAN. Untagged Frames: Add TPID:0x8100 tag and forward. Tagged Frames: - TPID:0x8100: - Same VLAN ID: Forward the frames. - Different VLAN ID: Discard the frames. - TPID:0x88A8: Discard the frames.
Provider	Untagged Frames: Add TPID:0x88A8 tag and forward. Tagged Frames: - TPID:0x8100: Discard the frames. - TPID:0x88A8: - Same VLAN ID: Forward the frames. - Different VLAN ID: Discard the frames.
Specific Provider	Users define the Ethertype for the Provider service. Untagged Frames: Add the user-defined TPID tag and forward. Tagged Frames: - TPID:0x8100: Discard the frames. - TPID:0x88A8: Discard the frames. - TPID: [user-defined]: - Same VLAN ID: Forward the frames. - Different VLAN ID: Discard the frames.

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

Quality of Service

Quality of Service which known as **QoS** provides a stable and predictable transmitting service. It is useful to manage the bandwidth more efficiently based on the requirement of applications. Users are able to set **different priorities** for different traffics to satisfy the services which need a fixed bandwidth and have more sensitive of delay. **Quality of Service** can also optimize the restrict bandwidth resource and control the network traffic of the switches.

CONFIGURE QoS INFORMATION

QoS Settings

Queue Scheduling

Scheduling Mode	WRR (Weighted) ▼
-----------------	------------------

Queue Weight

Queue	Weight		Queue	Weight	
1	1		5	5	
2	2		6	6	
3	3		7	7	
4	4		8	8	

For more information, hover the mouse over the  icon in the system.

- [Queue Scheduling](#)
 - [Scheduling Mode](#)
Select the scheduling mode for the Quality of Service.
WRR: Weighted Round Robin. WRR ensures that every queue takes turns to transmit the traffic by its weight.
Strict: Strict Priority Queue. The traffic is transmitted based on the priority, which is from highest to lowest.
- [Queue Weight](#)
 - [Queue](#)
Eight queues from queue 0 to queue 7 are supported.
 - [Weight](#)
Enables you to configure a specific weight for the port.
The range of the Weight is **from 1 to 100**. There is no need to sum all queues to 100.

The default Weight for each queue is displayed in the table:

Queue	0	1	2	3	4	5	6	7
Weight	1	2	3	4	5	6	7	8

CONFIGURE QOS TRUST MODE AND DEFAULT COS

📍 Trust Mode

Port	Mode
1	CoS ▼
2	CoS ▼
3	CoS ▼
4	CoS ▼
5	CoS ▼
6	CoS ▼
7	CoS ▼
8	CoS ▼
9	CoS ▼
10	CoS ▼
11	CoS ▼
12	CoS ▼

📍 Default CoS

Port	Class
1	0 ▼
2	0 ▼
3	0 ▼
4	0 ▼
5	0 ▼
6	0 ▼
7	0 ▼
8	0 ▼
9	0 ▼
10	0 ▼
11	0 ▼
12	0 ▼

Apply

- **Trust Mode**

- **Port**

Port1 to PortN, where N is based on the total port number.

- **Mode**

CoS: Class of Service. Use the 3-bit “PRI” field in the VLAN tag. It enables you to assign traffic to 8 different classes **from 0 to 7**.

DSCP: Use 6-bit field “DSCP” in the Type of Service (ToS) tag. It enables you to assign traffic to 64 different types **from 0 to 63**.

- **Default CoS**

- **Port**

Port1 to PortN, where N is based on the total port number.

- Class

You can assign a default class to the port. The system follows the assigned CoS classes to transmit frames if there is **no VLAN tag** in the frame header.

The default Class for each port is **0**.

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE COS MAPPING

CoS Mapping

Class / Priority	Queue
0	1
1	0(Lowest)
2	2
3	3
4	4
5	5
6	6
7	7(Highest)



- Class / Priority

There are **3 bits** for the “Class of Service” field called “**PRI**” in the VLAN tag and there are 8 classes **from 0 to 7**.

- Queue

The chipset supports **8 queues from queue 0 to queue 7**. The queue 0 is the lowest priority queue and the queue 7 is the highest priority queue.

The default Queue for each class is displayed in the table:

Class	0	1	2	3	4	5	6	7
Queue	1	0	2	3	4	5	6	7

CONFIGURE TOS MAPPING

DSCP Mapping

DSCP	Queue	DSCP	Queue	DSCP	Queue	DSCP	Queue
0	0(Low)	16	2	32	4	48	6
1	0(Low)	17	2	33	4	49	6
2	0(Low)	18	2	34	4	50	6
3	0(Low)	19	2	35	4	51	6
4	0(Low)	20	2	36	4	52	6
5	0(Low)	21	2	37	4	53	6
6	0(Low)	22	2	38	4	54	6
7	0(Low)	23	2	39	4	55	6
8	1	24	3	40	5	56	7(High)
9	1	25	3	41	5	57	7(High)
10	1	26	3	42	5	58	7(High)
11	1	27	3	43	5	59	7(High)
12	1	28	3	44	5	60	7(High)
13	1	29	3	45	5	61	7(High)
14	1	30	3	46	5	62	7(High)
15	1	31	3	47	5	63	7(High)

Apply

- DSCP**
There are **6 bits** for the “DSCP” in ToS tag and hence there are 64 classes **from 0 to 63**.
- Queue**
The chipset supports **8 queues from queue 0 to queue 7**. The queue 0 is the least priority queue and the queue 7 is the highest priority queue.

The default Queue for each type is displayed in the table:

Type	0-7	8-15	16-23	24-31	32-39	40-47	48-55	56-63
Queue	0	1	2	3	4	5	6	7

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

Port Trunk

Port Trunk is also known as **Link Aggregation**, and it is a protocol to group links to a trunk. A total of **8** trunk groups are provided. It is a good method to reach load balance and link backup. For example, when port 1 to port 4 are combined to trunk 1 and all ports support 100Tx and set to full-duplex, the bandwidth of the trunk will be 800Mbps. The traffic transmitting on the trunk is distributed to one of the link by the source **MAC address** to reach the load balance. When the trunk mode is set to LACP and when one of the link is broken, the traffic will transmit on another link on the group.

CONFIGURE PORT TRUNK INFORMATION

Trunking Settings

Group	Trunking Mode	Member Ports
Trunk 1	LACP ▼	Nothing selected ▼
Trunk 2	LACP ▼	Nothing selected ▼
Trunk 3	LACP ▼	Nothing selected ▼
Trunk 4	LACP ▼	Nothing selected ▼
Trunk 5	LACP ▼	Nothing selected ▼
Trunk 6	LACP ▼	Nothing selected ▼
Trunk 7	LACP ▼	Nothing selected ▼
Trunk 8	LACP ▼	Nothing selected ▼



- [Group](#)

Eight trunk groups from **Trunk 1** to **Trunk 8** are supported.

- **Trunking Mode**

Two trunking modes are available: "LACP" and "Static".

Static: The traffic is transmitted on one of the links in the group. The link is determined by the MAC Address in the frame header. If the link is broken, the traffic cannot transmit on the other links in the group.

LACP: It is also known as "Dynamic" trunking. If the current transmitting link is broken, the traffic can be transmitted on another link in the group.

- **Member Ports**

Select member ports to be joined in the specified Trunk group. A port can only be in one of the Trunk group. Each Trunk group supports maximum 8 member per ports.

- **Apply** (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

PORT TRUNK STATUS

Trunking Status

Group	Type	Ports	Link Status
Trunk 1	-	-	-
Trunk 2	-	-	-
Trunk 3	Static	9	Down
		10	Down
		11	Down
Trunk 4	-	12	Down
		-	-
Trunk 5	LACP	7	Down
		8	Down
Trunk 6	-	-	-
Trunk 7	-	-	-
Trunk 8	-	-	-

☐ Auto Refresh

Refresh

Refresh Rate: seconds 

- **Group**

The supported trunk groups are from **Trunk 1** to **Trunk 8**.

- **Type**

The trunk mode set for this group may be “**LACP**” or “**Static**”. This field displays “-” if no members are in the group.

- [Ports](#)

The selected member ports in the group will be displayed in this column.

- [Link Status](#)

This field displays the link state (Up or Down) for the specific port.

Static Route

Static Route is the most basic routing method. Users have to manually-configure routing entries into routing table. **Static Route** is fixed and unchanged if the Network is changed. **Static Route** is good to be configured at a gateway of last resorts. The Network administrator has the full control over the static routing behavior, so the administrator must have enough background knowledge to handle it.

CONFIGURE IPv4 STATIC ROUTE INFORMATION

IPv4 Static Route

IP Address	/ Prefix	Next Hop	+
192.168.1.0	/ 32	via 192.168.1.11	✕
192.168.10.0	/ 32	via 192.168.10.11	✕

Apply

- [IP Address](#)
Assign the IP Address to configure the static routing path.
- [Netmask](#)
The Netmask is a number mapping to the Subnet Mask. For example, users configure the Netmask to 24 implies to configure the Subnet Mask to 255.255.255.0.
- [Next Hop](#)
The Next Hop is an IP Address for a VLAN ID. The Next Hop implies the next node that the packet will be transferred to.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE IPv6 STATIC ROUTE INFORMATION

IPv6 Static Route


IPv6 Address	/	Prefix		Next Hop	+
2001:288:1001::	/	64	via	2001:288:1000::61	✕
	/		via		✕

Apply

- [IPv6 Address](#)
Assign the IPv6 Address to configure the static routing path.
- [Prefix](#)
The Prefix defines the segment of the IPv6 address.
- [Next Hop](#)
The Next Hop is an IPv6 Address for a VLAN ID. The Next Hop implies the next node that the packet will be transferred to.
-  (Apply Button)
After configuring above fields, click "**Apply**" button to make the changes effective.

IPv4 STATIC ROUTE EXAMPLE

In the following diagram, we are going to configure a topology with Static Route for the system.

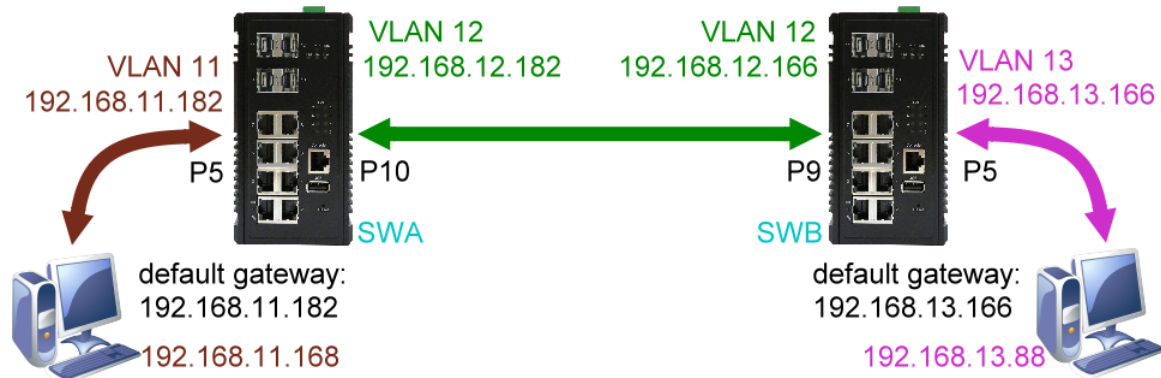

- Configurations for SWA

- Configure VLAN for different subnets

Add VLAN 11 with untagged member port 5 and VLAN 12 with tagged member port 10

Configure PVID to 11 on port 5 because the end device (PC) has no ability to deal with the VLAN tag.

VLAN Settings

VLAN Member Settings

VLAN ID 	Name 	Untagged Ports	Tagged Ports	
1	-	8 items selected ▾	Nothing selected ▾	✕
11	Internal_LAN	P5 ▾	Nothing selected ▾	✕
12	External_LAN	Nothing selected ▾	P10 ▾	✕

VLAN PVID

Port	PVID 
1	1
2	1
3	1
4	1
5	11
6	1
7	1
8	1
9	1
10	1

Accept Type

Port	Filter
1	All ▾
2	All ▾
3	All ▾
4	All ▾
5	All ▾
6	All ▾
7	All ▾
8	All ▾
9	All ▾
10	All ▾

Apply

- Configure IP Address for different VLANs (Subnets)

The IP Address of [VLAN 11](#) is 192.168.11.182 and the Subnet Mask is 255.255.255.0

The IP Address of [VLAN 12](#) is 192.168.12.182 and the Subnet Mask is 255.255.255.0

IPv4

Basic Settings

DNS Server 1	8.8.8.8
DNS Server 2	

Interface Settings

VLAN ID	IP Address	Subnet Mask
1	192.168.10.1	255.255.255.0
11	192.168.11.182	255.255.255.0
12	192.168.12.182	255.255.255.0

Apply

- Configure Static Routing Rule

To connect to the internal LAN on SWB, users have to configure the path on SWA

The Subnet of internal LAN on SWB is [192.168.13.0/24](#), and the IP Address of SWB's external LAN is [192.168.12.166](#).

Static Route

IP Address	/	Netmask		Next Hop	
192.168.13.0	/	24	via	192.168.12.166	

Apply

Configurations for SWB

- Configure VLAN for different subnets

Add [VLAN 11](#) with untagged member [port 5](#) and [VLAN 12](#) with tagged member [port 10](#)

Configure PVID to [11](#) on [port 5](#) because the end device (PC) has no ability to deal with the VLAN tag.

VLAN Settings

VLAN Member Settings

VLAN ID 	Name 	Untagged Ports	Tagged Ports	
1	-	8 items selected ▾	Nothing selected ▾	✕
12	External_LAN	Nothing selected ▾	P9 ▾	✕
13	Internal_LAN	P5 ▾	Nothing selected ▾	✕

VLAN PVID

Port	PVID 
1	1
2	1
3	1
4	1
5	13
6	1
7	1
8	1
9	1
10	1

Accept Type

Port	Filter
1	All ▾
2	All ▾
3	All ▾
4	All ▾
5	All ▾
6	All ▾
7	All ▾
8	All ▾
9	All ▾
10	All ▾

Apply

- Configure IP Address for different VLANs (Subnets)

The IP Address of [VLAN 11](#) is 192.168.11.182 and the Subnet Mask is 255.255.255.0

The IP Address of [VLAN 12](#) is 192.168.12.182 and the Subnet Mask is 255.255.255.0

IPv4

Basic Settings

DNS Server 1	8.8.8.8
DNS Server 2	

Interface Settings

VLAN ID	IP Address	Subnet Mask
1	192.168.10.1	255.255.255.0
12	192.168.12.166	255.255.255.0
13	192.168.13.166	255.255.255.0

Apply

○ Configure Static Routing Rule

To connect to the internal LAN on SWA, users have to configure the path on SWB

The Subnet of internal LAN on SWA is [192.168.11.0/24](#), and the IP Address of SWA's external LAN is [192.168.12.182](#).

Static Route

IP Address	/	Netmask		Next Hop	
192.168.11.0	/	24	via	192.168.12.182	

Apply

Note: Remember clicking “Apply” button to make the changes effective in each step.

OSPFv2

Open Shortest Path First (OSPF) is one of the **dynamic routing protocols** and OSPFv2 is for **IPv4** Networks. **OSPF** is the most widely used **interior Gateway Protocol (IGP)** and it is designed for medium-and-large-scale enterprise networks. **OSPF** nodes exchange neighbors' information by Link-State and calculate the shortest path with their Cost to transmit packets. **OSPF** is operating under a hierarchical system and divide the system to several Areas by different Area IDs. OSPF nodes only exchange information with the nodes in the same Area.

CONFIGURE OSPFv2 INFORMATION

OSPF Configuration

Basic Settings

OSPF Mode	☐ Enable	☒ Disable
-----------	------------------------------	--

Networks

Network ID	/	Prefix ?	Area ?	
	/			 

Router-ID

Router-ID ?	
-------------	----------------------

Hello-Interval and Metric

VLAN ID	Hello-Interval ?	Metric ?
1	10	10

Apply

For more information, hover the mouse over the  icon in the system.

- [OSPF Mode](#)
 “Enable” or “Disable” OSPFv2 Function. The OSPFv2 function is default disabled. Please make sure the status of RIP is Disabled before Enable OSPFv2 function.
- [Networks](#)
 - [Network ID](#)

The Networks ID implies the first IP Address of the subnet that will join the OSPF routing.

- Prefix

The Prefix is a number mapping to the Subnet Mask. For example, users configure the Prefix to 24 implies to configure the Subnet Mask to 255.255.255.0.

The range of Prefix is **from 0 to 32**.

- Area

The Area is an identity and only the nodes in the same area will exchange the OSPF information with each other. The Area 0 is a special area, and also called Backbone Area. All other areas must connect to the backbone area.

The range of Area is **from 0 to 4294967295**.

: Click the **plus icon** to add an OSPF entry.

: Click the **remove icon** to delete the OSPF entry.

- Router-ID

The Router-ID implies the identity for the working OSPFv2.

The format of Router-ID is **A.B.C.D**.

- Hello Interval

The Hello Interval is the period to send "Hello Message" to OSPF neighbors.

The range of Hello Interval is **from 1 to 65535** second(s).

The default Hello Interval is **10** seconds.

- Metric

The Metric is the total cost of the path from source device to destination device.

The range of Metric is **from 1 to 65535**.

The default Metric is **10**.

- (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

OSPFv2 STATUS

OSPF Status

Basic Information

OSPF Status	Disable
-------------	---------

Local IP

Router ID	IP	VLAN	Link Time
-----------	----	------	-----------

Neighbor information

Neighbor ID	Pri	State	Dead Time	IP Address	Interface
-------------	-----	-------	-----------	------------	-----------

Neighbor IP

IP	From	VLAN	Link Time
----	------	------	-----------

Hello-Interval and Metric


VLAN ID	Hello-Interval	Metric
1	10	10

- [OSPF Mode](#)
Display the state (“**Enable**” or “**Disable**”) of OSPF function.
- [Local IP](#)
Display the information that configured on the localhost for OSPFv2.
- [Neighbor Information](#)
Display the status of the neighborhood.
- [Neighbor IP](#)
Display the information that learned from OSPF neighbors.
- [Hello Interval](#)
Display the Hello Interval value of designated VLAN.
- [Metric](#)
Display the Metric of designated VLAN.

OSPFv2 EXAMPLE

In the following diagram, we are going to configure a topology with Dynamic Routing – OSPFv2 for the system. Use the following commands or view **OSPF Status** page to check the link state after configurations are completed:

- show router ospf
- show router ospf neighbor
- show ip route

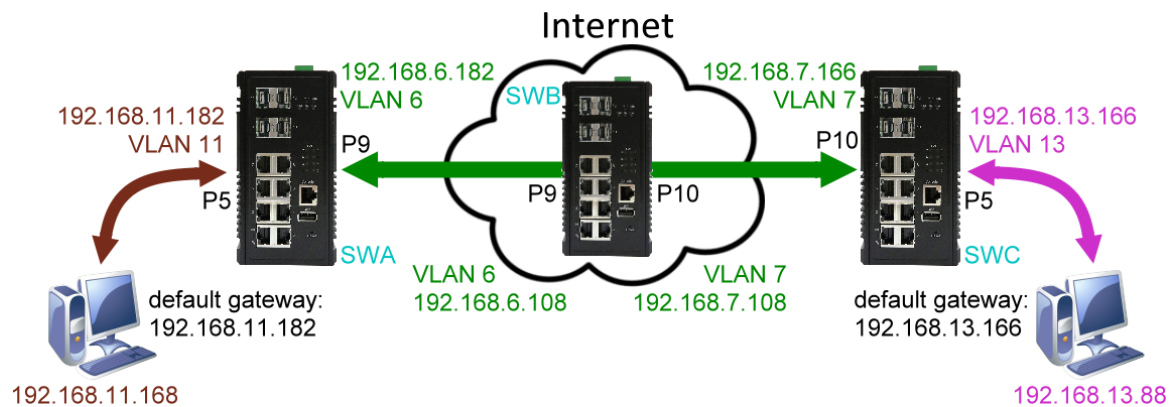

Simulation Internet by through SWB.

• Configurations for SWA

- Configure VLAN for different subnets

Add VLAN 6 with tagged member port 9 and VLAN 11 with untagged member port 5

Configure PVID to 11 on port 5 because the end device (PC) has no ability to deal with the VLAN tag.

⚙️ VLAN Settings

📍 VLAN Member Settings

VLAN ID ⓘ	Name ⓘ	Untagged Ports	Tagged Ports	+
1	-	8 items selected ▾	Nothing selected ▾	✕
6	External_LAN	Nothing selected ▾	P9 ▾	✕
11	Internal_LAN	P5 ▾	Nothing selected ▾	✕

VLAN PVID

Port	PVID
1	1
2	1
3	1
4	1
5	11
6	1
7	1
8	1
9	1
10	1

Accept Type

Port	Filter
1	All
2	All
3	All
4	All
5	All
6	All
7	All
8	All
9	All
10	All

Apply

- Configure IP Address for different VLANs (Subnets)

The IP Address of [VLAN 6](#) is 192.168.6.182 and the Subnet Mask is 255.255.255.0

The IP Address of [VLAN 11](#) is 192.168.11.182 and the Subnet Mask is 255.255.255.0

IPv4

Basic Settings

DNS Server 1	8.8.8.8
DNS Server 2	

Interface Settings

VLAN ID	IP Address	Subnet Mask
1	192.168.10.1	255.255.255.0
6	192.168.6.182	255.255.255.0
11	192.168.11.182	255.255.255.0

Apply

- Configure OSPF rules

Set Router ID to [0.0.0.1](#) for SWA

Configure subnet [192.168.6.0/24](#) to join OSPF network [area 0](#)

Configure subnet [192.168.11.0/24](#) to join OSPF network [area 0](#)

[Enable](#) OSPFv2 function on SWA

OSPF Configuration

Basic Settings

OSPF Mode	☒ Enable ☐ Disable
-----------	---

Networks

Network ID	/	Prefix 	Area 	
192.168.6.0	/	24	0	
192.168.11.0	/	24	0	

Router ID

Router ID 	0.0.0.1
--	---------

Hello-Interval and Metric

VLAN ID	Hello-Interval 	Metric 
1	10	10
6	10	10
11	10	10

Apply

- [Configurations for SWB](#)

- Configure VLAN for different subnets

Add [VLAN 6](#) with tagged member [port 9](#) and [VLAN 7](#) with tagged member [port 10](#)

Both port 9 and port 10 are tagged members, so there is no need to configure PVID.

VLAN Settings

VLAN Member Settings

VLAN ID 	Name 	Untagged Ports	Tagged Ports	
1	-	8 items selected ▾	Nothing selected ▾	✕
6	To_SWA	Nothing selected ▾	P9 ▾	✕
7	To_SWC	Nothing selected ▾	P10 ▾	✕

- Configure IP Address for different VLANs (Subnets)

The IP Address of [VLAN 6](#) is 192.168.6.108 and the Subnet Mask is 255.255.255.0

The IP Address of [VLAN 7](#) is 192.168.7.108 and the Subnet Mask is 255.255.255.0

IPv4

Basic Settings

DNS Server 1	8.8.8.8
DNS Server 2	

Interface Settings

VLAN ID	IP Address	Subnet Mask
1	192.168.10.1	255.255.255.0
6	192.168.6.108	255.255.255.0
7	192.168.7.108	255.255.255.0

[Apply](#)

- Configure OSPF rules

Set Router ID to [0.0.0.2](#) for SWB

Configure subnet [192.168.6.0/24](#) to join OSPF network [area 0](#)

Configure subnet [192.168.7.0/24](#) to join OSPF network [area 0](#)

[Enable](#) OSPFv2 function on SWB

⚙️ OSPF Configuration

📍 Basic Settings

OSPF Mode	☒ Enable ☐ Disable
-----------	---

📍 Networks

Network ID	/	Prefix ?	Area ?	
192.168.6.0	/	24	0	✕
192.168.7.0	/	24	0	✕

📍 Router ID

Router ID ?	0.0.0.2
-------------	---------

📍 Hello-Interval and Metric

VLAN ID	Hello-Interval ?	Metric ?
1	10	10
6	10	10
7	10	10

Apply

- Configurations for SWC

- Configure VLAN for different subnets

Add [VLAN 7](#) with tagged member [port 10](#) and [VLAN 13](#) with untagged member [port 5](#)

Configure PVID to [13](#) on [port 5](#) because the end device (PC) has no ability to deal with the VLAN tag.

VLAN Settings

VLAN Member Settings

VLAN ID ?	Name ?	Untagged Ports	Tagged Ports	+
1	-	8 items selected ▾	Nothing selected ▾	✕
7	External_LAN	Nothing selected ▾	P10 ▾	✕
13	Internal_LAN	Nothing selected ▾	P5 ▾	✕

VLAN PVID

Port	PVID ?
1	1
2	1
3	1
4	1
5	13
6	1
7	1
8	1
9	1
10	1

Accept Type

Port	Filter
1	All ▾
2	All ▾
3	All ▾
4	All ▾
5	All ▾
6	All ▾
7	All ▾
8	All ▾
9	All ▾
10	All ▾

Apply

- Configure IP Address for different VLANs (Subnets)

The IP Address of [VLAN 7](#) is 192.168.7.166 and the Subnet Mask is 255.255.255.0

The IP Address of [VLAN 13](#) is 192.168.13.166 and the Subnet Mask is 255.255.255.0

IPv4

Basic Settings

DNS Server 1	8.8.8.8
DNS Server 2	

Interface Settings

VLAN ID	IP Address	Subnet Mask
1	192.168.10.1	255.255.255.0
7	192.168.7.166	255.255.255.0
13	192.168.13.166	255.255.255.0

Apply

- Configure OSPF rules

Set Router ID to [0.0.0.3](#) for SWC

Configure subnet [192.168.7.0/24](#) to join OSPF network [area 0](#)

Configure subnet [192.168.13.0/24](#) to join OSPF network [area 0](#)

[Enable](#) OSPFv2 function on SWB

OSPF Configuration

Basic Settings

OSPF Mode ☒ Enable ☐ Disable

Networks

Network ID	/	Prefix ?	Area ?	+
192.168.7.0	/	24	0	×
192.168.13.0	/	24	0	×

Router ID

Router ID ?

Hello-Interval and Metric

VLAN ID	Hello-Interval ?	Metric ?
1	10	10
7	10	10
13	10	10

Apply

Note: Remember clicking “Apply” button to make the changes effective in each step.

OSPFv3

Continued from previous chapter, **OSPFv3** is an extension of **OSPFv2** which can support both **IPv4** and **IPv6** Networks.

There is no necessary to explicitly create a routing process for each subnet in OSPFv3. The routing process will be triggered by assigning an interface, which implies **VLAN**, to the OSPFv3 configurations. Users can configure several IPv6 address prefixes on a VLAN interface, so all prefixes on the VLAN interface will be included by default.

CONFIGURE OSPFv3 INFORMATION

OSPFv3 Configuration

Basic Settings

OSPFv3 Mode ☐ Enable ☒ Disable

Networks

VLAN ID	Area 	
		

Router ID

Router ID 

Hello-Interval and Metric

VLAN ID	Hello-Interval 	Metric 
1	10	10
100	10	10
200	10	10

Apply

For more information, hover the mouse over the  icon in the system.

- OSPFv3 Mode

“**Enable**” or “**Disable**” OSPFv3 Function. The OSPFv3 function is default disabled. Please make sure the status of RIP is Disabled before Enable OSPFv3 function.

- Networks

- VLAN ID

Assign the designated VLAN interface to join OSPFv3 routing process.

- Area

The Area is an identity and only the nodes in the same area will exchange the OSPF information with each other. The Area 0 is a special area, and also called Backbone Area. All other areas must connect to the backbone area.

The range of Area is **from 0 to 4294967295**.

: Click the **plus icon** to add an OSPF entry.

: Click the **remove icon** to delete the OSPF entry.

- Router-ID

The Router-ID implies the identity for the working OSPFv3.

The format of Router-ID is **A.B.C.D**.

- Hello Interval

The Hello Interval is the period to send “Hello Message” to OSPF neighbors.

The range of Hello Interval is **from 1 to 65535** second(s).

The default Hello Interval is **10** seconds.

- Metric

The Metric is the total cost of the path from source device to destination device.

The range of Metric is **from 1 to 65535**.

The default Metric is **10**.

- (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

OSPFv3 STATUS

OSPFv3 Status

Basic Information

OSPFv3 Status Disable

Local IPv6

Router ID	IPv6	VLAN	Link Time
-----------	------	------	-----------

Neighbor Information

Neighbor ID	Pri	State	Dead Time	Duration Time	Interface
-------------	-----	-------	-----------	---------------	-----------

Neighbor IPv6

IPv6	From	VLAN	Link Time
------	------	------	-----------

Interval and Metric

VLAN ID	Hello-Interval	Metric
1	10	10
100	10	10
200	10	10

- [OSPF Mode](#)
Display the state (“**Enable**” or “**Disable**”) of OSPF function.
- [Local IPv6](#)
Display the information that configured on the localhost for OSPFv3.
- [Neighbor Information](#)
Display the status of the neighborhood.
- [Neighbor IPv6](#)
Display the information that learned from OSPF neighbors.
- [Hello Interval](#)
Display the Hello Interval value of designated VLAN.

- Metric

Display the Metric of designated VLAN.

RIPv1/v2

Routing Information Protocol (RIP) is another **dynamic routing protocol** for a small scale Network. **RIP** uses **Distance Vector** to determine the routing path. The best path for RIP is the least **hops** during transmission. This is also the weakness of RIP because the path with least hops might not be the fastest path.

The RIP members **broadcast** their routing table to each other every 30 seconds to synchronize the Network and maintain the routing paths to be the least hops. The max number of hops that can be transferred between two nodes (routers) is **15**. This is why the RIP function is only suitable for a small Network.

CONFIGURE RIPv1/V2 INFORMATION

RIP Configuration

Basic Settings

RIP Mode ☐ Enable ☒ Disable

Networks

Network ID	/	Prefix 	+
	/		×

Version

Version

Timers

Update time		
Timeout		
Garbage		

Apply

For more information, hover the mouse over the  icon in the system.

- **RIP Mode**

“**Enable**” or “**Disable**” RIP Function. The RIP function is default disabled.

Please make sure the status of OSPFv2 is Disabled before Enable RIP function.

- **Networks**

- **Network ID**

The Networks ID implies the first IP Address of the subnet that will join the RIP routing.

- **Prefix**

The Prefix is a number mapping to the Subnet Mask. For example, users configure the Prefix to 24 implies to configure the Subnet Mask to 255.255.255.0.

The range of Prefix is **from 0 to 32**.

- **Version**

Configure the Version of RIP. We support **RIPv2** by default but users can configure the version to support RIPv1.

- **Timers**

- **Update Time**

The Update Time is the interval to send broadcast for updating routing table with other routers in the same RIP Network.

The range of Update Time is **from 5 to 2147483647**.

The default Update Time is **30 seconds**.

- **Timeout**

The Timeout value is also called **Aging Time**. It will be count down from configured value until 0. If the system received a packet with the same RIP path, the Aging Time will be reset to the initial configured value and count down again. If the Aging Time is counting down to 0, the routing entry will be deleted from the routing table.

The range of Timeout is **from 5 to 2147483647**.

The default Timeout is **180 seconds**.

- **Garbage**

The **Garbage-Collection Timer** is used for a newly created routing path. When a new routing path is built, the timer creates and counts down. The routing path will be discarded if the timer is 0.

The range of Garbage is **from 5 to 2147483647**.

The default Garbage is **120 seconds**.

- (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

barox Kommunikation AG
Im Grund 15
CH-5405 Baden-Dättwil

Tel: +41 56 511 10 30
E-Mail: mail@barox.ch
Web: www.barox.ch

barox Kommunikation GmbH
Weiler Straße 7
D-79540 Lörrach

Tel: +49 7621 1593 100
E-Mail: mail@barox.de
Web: www.barox.de

RIPv1/v2 STATUS

RIP Status

Basic Information

RIP Status	Enable
------------	--------

Local IP

IP Address	Next Hop	Metric	From
192.168.2.0/24	0.0.0.0	1	self

Routing Network Information


IP Address	Next Hop	Metric	From	Time
------------	----------	--------	------	------

- [RIP Status](#)
Display the state (“Enable” or “Disable”) of RIP function.
- [Local IP](#)
Display the information that configured on the localhost for RIP.
- [Routing Network Information](#)
Display the routing information that exchanges with other routers.

RIP EXAMPLE

In the following diagram, we are going to configure a topology with Dynamic Routing – RIP for the system. Use the following commands or view **RIPv1/v2 Status** page to check the link state after configurations are completed:

- show router rip status
- show router rip state
- show ip route

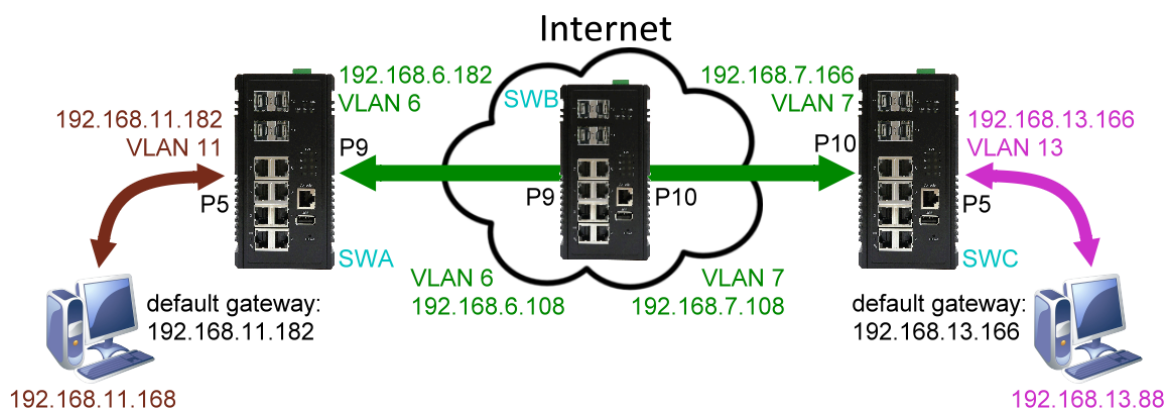

Simulation Internet by through SWB.

- **Configurations for SWA**

- Configure VLAN for different subnets

Add [VLAN 6](#) with tagged member [port 9](#) and [VLAN 11](#) with untagged member [port 5](#)

Configure PVID to [11](#) on [port 5](#) because the end device (PC) has no ability to deal with the VLAN tag.

VLAN Settings

VLAN Member Settings

VLAN ID ?	Name ?	Untagged Ports	Tagged Ports	+
1	-	8 items selected ▾	Nothing selected ▾	✕
6	External_LAN	Nothing selected ▾	P9 ▾	✕
11	Internal_LAN	P5 ▾	Nothing selected ▾	✕

VLAN PVID

Port	PVID ?
1	1
2	1
3	1
4	1
5	11
6	1
7	1
8	1
9	1
10	1

Accept Type

Port	Filter
1	All ▾
2	All ▾
3	All ▾
4	All ▾
5	All ▾
6	All ▾
7	All ▾
8	All ▾
9	All ▾
10	All ▾

Apply

- Configure IP Address for different VLANs (Subnets)

The IP Address of [VLAN 6](#) is 192.168.6.182 and the Subnet Mask is 255.255.255.0

The IP Address of [VLAN 11](#) is 192.168.11.182 and the Subnet Mask is 255.255.255.0

IPv4

Basic Settings

DNS Server 1	8.8.8.8
DNS Server 2	

Interface Settings

VLAN ID	IP Address	Subnet Mask
1	192.168.10.1	255.255.255.0
6	192.168.6.182	255.255.255.0
11	192.168.11.182	255.255.255.0

- Configure RIP rules

Configure subnet [192.168.6.0/24](#) to join RIP network

Configure subnet [192.168.11.0/24](#) to join RIP network

[Enable](#) RIP function on SWA, the default RIP is running [version 2](#).

RIP Configuration

Basic Settings

RIP Mode	☒ Enable ☐ Disable
----------	---

Networks

Network ID	/	Prefix 	+
192.168.6.0	/	24	×
192.168.11.0	/	24	×

Version

Version	Version 2 
---------	---

Timers

Update time	30	
Timeout	180	
Garbage	120	

Apply

- Configurations for SWB

- Configure VLAN for different subnets

Add [VLAN 6](#) with tagged member [port 9](#) and [VLAN 7](#) with tagged member [port 10](#)

Both port 9 and port 10 are tagged members, so there is no need to configure PVID.

VLAN Settings

VLAN Member Settings

VLAN ID 	Name 	Untagged Ports	Tagged Ports	+
1	-	8 items selected 	Nothing selected 	×
6	To_SWA	Nothing selected 	P9 	×
7	To_SWC	Nothing selected 	P10 	×

- Configure IP Address for different VLANs (Subnets)

The IP Address of [VLAN 6](#) is 192.168.6.108 and the Subnet Mask is 255.255.255.0

The IP Address of [VLAN 7](#) is 192.168.7.108 and the Subnet Mask is 255.255.255.0

 IPv4 Basic Settings

DNS Server 1	8.8.8.8
DNS Server 2	

 Interface Settings

VLAN ID	IP Address	Subnet Mask
1	192.168.10.1	255.255.255.0
6	192.168.6.108	255.255.255.0
7	192.168.7.108	255.255.255.0

[Apply](#)

- Configure RIP rules

Configure subnet [192.168.6.0/24](#) to join RIP network

Configure subnet [192.168.7.0/24](#) to join RIP network

[Enable](#) RIP function on SWB, the default RIP is running [version 2](#).

RIP Configuration

Basic Settings

RIP Mode	☒ Enable ☐ Disable
----------	---

Networks

Network ID	/	Prefix ?	+
192.168.6.0	/	24	×
192.168.7.0	/	24	×

Version

Version	Version 2
---------	-----------

Timers

Update time	30	?
Timeout	180	?
Garbage	120	?

Apply

• [Configurations for SWC](#)

- Configure VLAN for different subnets

Add [VLAN 7](#) with tagged member [port 10](#) and [VLAN 13](#) with untagged member [port 5](#)

Configure PVID to [13](#) on [port 5](#) because the end device (PC) has no ability to deal with the VLAN tag.

VLAN Settings

VLAN Member Settings

VLAN ID ?	Name ?	Untagged Ports	Tagged Ports	+
1	-	8 items selected ▼	Nothing selected ▼	×
7	External_LAN	Nothing selected ▼	P10 ▼	×
13	Internal_LAN	Nothing selected ▼	P5 ▼	×

VLAN PVID

Port	PVID
1	1
2	1
3	1
4	1
5	13
6	1
7	1
8	1
9	1
10	1

Accept Type

Port	Filter
1	All
2	All
3	All
4	All
5	All
6	All
7	All
8	All
9	All
10	All

Apply

- Configure IP Address for different VLANs (Subnets)

The IP Address of [VLAN 7](#) is 192.168.7.166 and the Subnet Mask is 255.255.255.0

The IP Address of [VLAN 13](#) is 192.168.13.166 and the Subnet Mask is 255.255.255.0

IPv4

Basic Settings

DNS Server 1	8.8.8.8
DNS Server 2	

Interface Settings

VLAN ID	IP Address	Subnet Mask
1	192.168.10.1	255.255.255.0
7	192.168.7.166	255.255.255.0
13	192.168.13.166	255.255.255.0

Apply

- Configure RIP rules

Configure subnet [192.168.7.0/24](#) to join RIP network

Configure subnet [192.168.13.0/24](#) to join RIP network

[Enable](#) RIP function on SWC, the default RIP is running [version 2](#).

RIP Configuration

Basic Settings

RIP Mode	☒ Enable ☐ Disable
----------	---

Networks

Network ID	/	Prefix 	
192.168.7.0	/	24	
192.168.13.0	/	24	

Version

Version	Version 2
---------	--

Timers

Update time	30	
Timeout	180	
Garbage	120	

Apply

Note: Remember clicking “Apply” button to make the changes effective in each step.

RIPng

RIP next generation (RIPng) is an extension of RIPv2 to support IPv6. The following are the differences between RIPng and RIPv2. Although RIPng is the next generation of RIPv2, the RIPng does not support RIPv1. The operation of RIPng is to assign a set of route entries into a specific next-hop rather than record next-hops for each route entry on RIPv2. The multicast group of RIPng is FF02::9 but for RIPv2, it uses 224.0.0.9.

The max number of hops that can be transferred between two nodes is also **15** for RIPng. It's a limitation for using on a large-scale network topology.

CONFIGURE RIPNG INFORMATION

RIPng Configuration

Basic Settings

RIPng Mode

☐ Enable
 ☒ Disable

Networks

VLAN ID
+

×

Timers

Update time		?
Timeout		?
Garbage		?

Apply

For more information, hover the mouse over the  icon in the system.

- [RIP Mode](#)

“Enable” or “Disable” RIPng Function. The RIP function is default disabled. Please make sure the status of OSPF is Disabled before Enable RIPng function.

- [Networks](#)

- [VLAN ID](#)

The VLAN ID implies the VLAN interface that will join the RIP routing.

- **Timers**

- Update Time

The Update Time is the interval to send broadcast for updating routing table with other routers in the same RIP Network.

The range of Update Time is **from 5 to 2147483647**.

The default Update Time is **30 seconds**.

- Timeout

The Timeout value is also called **Aging Time**. It will be count down from configured value until 0. If the system received a packet with the same RIP path, the Aging Time will be reset to the initial configured value and count down again. If the Aging Time is counting down to 0, the routing entry will be deleted from the routing table.

The range of Timeout is **from 5 to 2147483647**.

The default Timeout is **180 seconds**.

- Garbage

The **Garbage-Collection Timer** is used for a newly created routing path. When a new routing path is built, the timer creates and counts down. The routing path will be discarded if the timer is 0.

The range of Garbage is **from 5 to 2147483647**.

The default Garbage is **120 seconds**.

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

RIPNG STATUS

RIPng Status

Basic Information

Ripng Status	Enable
--------------	--------

Local IPv6

IPv6 Address	Next Hop	Metric	From
2001:10:10:10::/64	::	1	self

Routing Network Information

IPv6 Address	Next Hop	From	Metric	Time
--------------	----------	------	--------	------

- [RIPng Status](#)
Display the state (“**Enable**” or “**Disable**”) of RIPng function.
- [Local IPv6](#)
Display the information that configured on the localhost for RIPng.
- [Routing Network Information](#)
Display the routing information that exchanges with other routers.

VRRP

Virtual Router Redundancy Protocol (VRRP) is a function to avoid single point of failure in the **static** default routed environment. There are two or more routers in a VRRP group to backup each other. They share the **same virtual IP address** in the Network and one of them called Master provides routing services for other devices. Others in the same VRRP group are Backup routers. When the Master router is broken, the Backup routers will replace the original Master router based on their Priority value. The router with the highest Priority value will be the next Master, so that the routing can be uninterrupted.

CONFIGURE VRRP INFORMATION

VRRP Configuration

VLAN ID	Group ID ?	Adv. Timer ?	Priority ?	Virtual IP Address ?	Preempt	Mode ?	State
1					Disable ▼	Disable ▼	NULL

[Apply](#)

For more information, hover the mouse over the  icon in the system.

- [VLAN ID](#)
Display the current **VLAN ID** that is configured with members and IP Address.
- [Group ID](#)
The **Group ID** is the identity for the VRRP Group. All routers in the same VRRP group **MUST** be configured with the same **Group ID**.
The range of Group ID is **from 1 to 255**
- [Adv. Timer](#)
The timer is the period to send **Advertisement** to make sure the Master is still alive. The Master route will be changed if other Backup routers miss Advertisement message after the timer expired to make sure the continuous services.
The range of Adv. Timer is **from 1 to 60 seconds**
- [Priority](#)
The **Priority** is used to decide the Master in the VRRP group.
The range of Priority is **from 1 to 254**
Note: the higher the value the higher the priority
- [Virtual IP Address](#)


The **Virtual IP Address** is a public IP Address in the Network. All routers in the same VRRP group are configured with the same Virtual IP Address.

Note: The **Virtual IP Address** has to be configured different from VLAN IP Addresses.

- **Preempt**
 “Enable” or “Disable” Preempt Mode. When the Preempt Mode is disabled, other VRRP routers are not allowed to preempt the Master role.
- **Mode**
 “Enable” or “Disable” VRRP function on this VLAN.
Note: Users have to configure **all VRRP parameters** before enable VRRP function.
- **State**
 There are four states for the VRRP
Master: This is a major router that provides services in the VRRP group.
Backup: This is a backup router in the VRRP group. When the VRRP Master is broken, the backup router will provide services.
Init: VRRP function is under initialization.
NULL: VRRP function is disabled.

VRRP EXAMPLE

In the following diagram, we are going to configure a topology with VRRP for router backup.

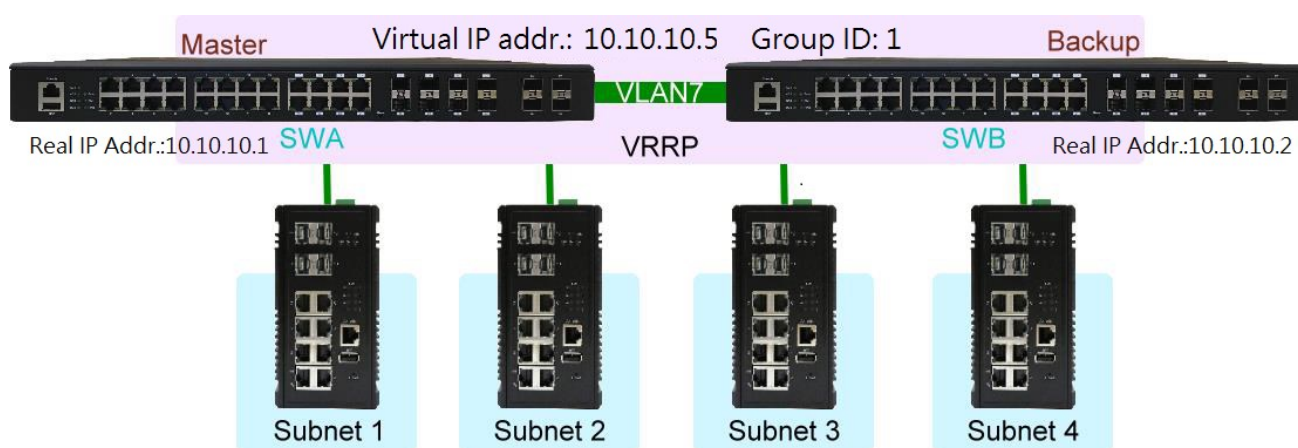

- **Configurations for SWA**
 - Configure **VLAN 7** on SWA for VRRP interface and assign IP Address to the VLAN
 - Configure VRRP information for SWA (Master Router)
 Set **Group ID** to **1**, **Advertisement Timer** to **10** seconds, **Priority** to **100**, and **Virtual IP Address** to **10.10.10.5**. Make sure the **Mode** is configured to “Enable”.

VRRP Configuration

VLAN ID	Group ID	Adv. Timer	Priority	Virtual IP Address	Preempt	Mode	State
1					Disable	Disable	NULL
7	1	10	100	10.10.10.5	Disable	Enable	INIT

Apply

- **Configurations for SWB**

- Configure [VLAN 7](#) on SWB for VRRP interface and assign IP Address to the VLAN
- Configure VRRP information for SWB (Backup Router)

Set **Group ID** to [1](#), **Advertisement Timer** to [10](#) seconds, **Priority** to [50](#), and **Virtual IP Address** to [10.10.10.5](#). Make sure the **Mode** is configured to [“Enable”](#).

Because SWB is the Backup Router, the Priority value must be below the Priority value of SWA.

VRRP Configuration

VLAN ID	Group ID	Adv. Timer	Priority	Virtual IP Address	Preempt	Mode	State
1					Disable	Disable	NULL
7	1	10	50	10.10.10.5	Disable	Enable	INIT

Apply

Note: The [Group ID](#) and [Virtual IP Address](#) should be the same on all VRRP members.

Note: Remember clicking “Apply” button to make the changes effective in each step.

PIM-SM

Protocol Independent Multicast (PIM) provides IP multicast forwarding by leveraging unicast routing tables. PIM-SM (PIM Sparse Mode) assumes most devices do not require to receive multicast traffic. It uses a non-flooding model to forward traffic from the source to the receiver interfaces. In PIM-SM network, L3 switch and router identified as designated routers (DR), rendezvous points (RP), and a bootstrap router (BSR). A DR is required on both the source-side network and receiver-side network. A source-side DR sends register messages to the RP. The receiver-side DR sends join messages to the RP. A BSR acts as the administrative core of a PIM-SM domain.

CONFIGURE PIM-SM

⚙️ PIM-SM Configuration

📍 Basic Settings

PIM-SM Operation	☒ Enable ☐ Disable	
PIM-SM Join-Prune-Interval	60	⚙️
PIM-SM Query-Interval	30	⚙️

📍 BSR Settings

PIM-SM BSR Priority	0	⚙️
PIM-SM BSR VLAN Interface	10	⚙️

📍 RP Settings

PIM-SM RP Priority	255	⚙️
PIM-SM RP VLAN Interface	1	⚙️
PIM-SM RP Interval	60	⚙️

Apply

- [PIM-SM Operation](#)

“Enable” or “Disable” PIM-SM function.

- [Join-Prune-Interval](#)

The Join-Prune-Interval is a time interval to send Join-Prune messages.

The range of the Join-Prune-Interval is from 10 to 600 seconds.

The default interval is 60 seconds.

- [Query-Interval](#)

The Query-Interval is a time interval to send query messages.

The range of the Query-Interval is from 30 to 3600 seconds.

The default interval is 30 seconds.

- [BSR Priority](#)

Configures the priority of L3 switch to announce it is a candidate as a bootstrap router (BSR).

The priority range is from 0 to 255. The BSR C-RP with the highest priority is preferred. If the priority values are the same, the router with the higher IP address is preferred.

The default priority value is 0.

- [BSR VLAN Interface](#)

This command configures the router to send BSR messages to all its PIM neighbors, with the address of the designated VLAN interface as the BSR address.

- [RP Priority](#)

The number to specify the priority of the RP candidate.

The priority range is from 0 to 255. The RP candidate with the highest priority is preferred. If the priority values are the same, the router with the higher IP address is preferred.

The default priority value is 0.

- [RP VLAN Interface](#)

A RP VLAN Interface is an interface to advertise itself as a PIM v2 candidate RP to the BSR.

- [RP Interval](#)

An advertisement message interval between the candidate RP.

The range of the interval is from 10 to 10000 seconds.

The default interval is 60 seconds.

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

PIM-SM STATUS

PIM-SM Status

Operation	Enabled
Elected BSR Address	10.1.1.1
Elected BSR Priority	0
Candidate RP State	Enabled
Candidate RP Address	192.168.60.108
Candidate RP Priority	255
Join-Prune-Interval	60 sec
Query-Interval	30 sec

☐ Auto Refresh

Refresh

Refresh Rate: seconds 

- [Operation](#)
“Enable” or “Disable” PIM-SM function.
- [Elected BSR Address](#)
The IP address of the elected BSR.
- [Elected BSR Priority](#)
The priority of the elected BSR.
- [Candidate RP State](#)
“Enable” or “Disable” state of candidate RP.
- [Candidate RP Address](#)
The IP address of the candidate RP.
- [Candidate RP Priority](#)
The priority of the candidate RP.
- [Join-Prune-Interval](#)
The Join Prune message interval.
- [Query-Interval](#)
The query message interval.

PIM-SM NEIGHBOR

 PIM Neighbor Table

VLAN	Address
30	192.168.30.2

☐ Auto Refresh

Refresh Rate: seconds 

Refresh

- [VLAN](#)
VLAN ID of the neighbor.
- [Address](#)
IP address of the neighbor.

PIM-SM ROUTING TABLE

 PIM Routing Table

Source	Group	RP Address	Flag
ANY	224.1.1.1	192.168.30.1	WG RP
ANY	224.1.1.2	192.168.30.1	WG RP
ANY	224.1.1.3	192.168.30.1	WG RP
ANY	224.1.1.4	192.168.30.1	WG RP
ANY	224.1.1.5	192.168.30.1	WG RP
ANY	224.1.1.6	192.168.30.1	WG RP
ANY	224.1.1.7	192.168.30.1	WG RP
ANY	224.1.1.8	192.168.30.1	WG RP
ANY	224.1.1.9	192.168.30.1	WG RP
ANY	224.1.1.10	192.168.30.1	WG RP
ANY	239.255.102.18	192.168.30.1	WG RP

☒ Auto Refresh

Refresh Rate: seconds 

Refresh

- [Source](#)
Source of the route.
- [Group](#)
Multicast group list.

- [RP Address](#)
RP address.
- [Flag](#)
Flage of the route.

Storm Control

A traffic storm happens when there is excessive packets **flood** to the LAN and decreases the performance. The **Storm Control** function is used to prevent the system from breaking down by the broadcast, multicast, or unknown unicast traffic storm. When the **Storm Control** is enabled on the specific traffic type, the system will monitor the incoming traffic. If the traffic is more than the configured level, the traffic will be dropped to avoid the storm.

CONFIGURE STORM CONTROL INFORMATION

Storm Control

Traffic Type	Mode	Level
Broadcast	☐ Enable ☒ Disable	High (2500fps) ▼
Multicast	☐ Enable ☒ Disable	High (2500fps) ▼
Unknown Unicast	☐ Enable ☒ Disable	High (2500fps) ▼

[Apply](#)

- **Traffic Type**
Three types of traffics are supported in the Storm Control: **Broadcast**, **Multicast**, and **Unknown Unicast**.
- **Mode**
“Enable” or “Disable” Storm Control function in the specific traffic type.
- **Level**
Three frame levels are available: **High**, **Middle**, and **Low**. If the frames of specific traffic type are more than the set level, the system will drop the type of frames to prevent the system from breaking down.
High: More than 2500 frame per second.
Mid: More than 1000 frame per second.

Low: More than 500 frame per second.

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

802.1X Settings

802.1X is an **IEEE** standard defined **Port-based Network Access Control**. It provides a more secured authentication mechanism for the devices, which would like to connect to a LAN or a WAN. The **Port-based** Network Access Control protocol is a convenient method for the users because the authentication is per-port and once the port passes the authentication, it is not required to authenticate again when changing to another device, i.e., without security. Therefore, **MAC-based** access control is provided. It is a more secure, but less convenient method for authentication. Only the device with the MAC Address that has passed the authentication can be added to the networks. These two methods are optional on each port and the users can select one of them on different ports.

CONFIGURE 802.1X BASIC INFORMATION

802.1X Settings

Basic Settings

802.1X Mode	☐ Enable	☒ Disable
Server Type	☐ Local Database	☒ RADIUS Server

For more information, hover the mouse over the  icon in the system.

- Basic Settings
 - 802.1X Mode
"Enable" or "Disable" 802.1X function on the switch.
 - Server Type
Select the 802.1X server type to "Local Database" or "RADIUS Server".
Local Database: The database is maintained in a table stored in the switch. The client has to send the username and password to authenticate with the switch's database.

RADIUS Server: The database is maintained in other devices running RADIUS service. The authentication follows the RADIUS protocol including communication and encryption.

CONFIGURE 802.1X PORT INFORMATION

📍 Port Settings

Port	Enable	Mode	Re-Auth	Re-Auth Period 
1	No ▾	MAC-based ▾	Yes ▾	3600
2	No ▾	MAC-based ▾	Yes ▾	3600
3	No ▾	MAC-based ▾	Yes ▾	3600
4	No ▾	MAC-based ▾	Yes ▾	3600
5	No ▾	MAC-based ▾	Yes ▾	3600
6	No ▾	MAC-based ▾	Yes ▾	3600
7	No ▾	MAC-based ▾	Yes ▾	3600
8	No ▾	MAC-based ▾	Yes ▾	3600
9	No ▾	MAC-based ▾	Yes ▾	3600
10	No ▾	MAC-based ▾	Yes ▾	3600
11	No ▾	MAC-based ▾	Yes ▾	3600
12	No ▾	MAC-based ▾	Yes ▾	3600

For more information, hover the mouse over the  icon in the system.

- **Port Settings**

- **Port**

Port1 to PortN, where N is based on the total port number.

- **Enable**

“Enable” or “Disable” 802.1X function on the port. “Yes” means 802.1X is enabled on the port and the port is locked until it passes the authentication.

- **Mode**

Select the 802.1X mode to “Mac-based” or “Port-based”.

Mac-based: Only the MAC Address, which passed the authentication can connect to the networks.

Port-based: If the port had passed the authentication, every device connected to the port can connect to the networks.

- Re-Auth

“Enable” or “Disable” re-authentication on the port. “Yes” means re-authentication is enabled on the port and the port has to re-authenticate with the server every re-auth period.

- Re-Auth Period


This is a time interval, which is used in re-authenticating the server.

-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE LOCAL DATABASE INFORMATION

Local Database

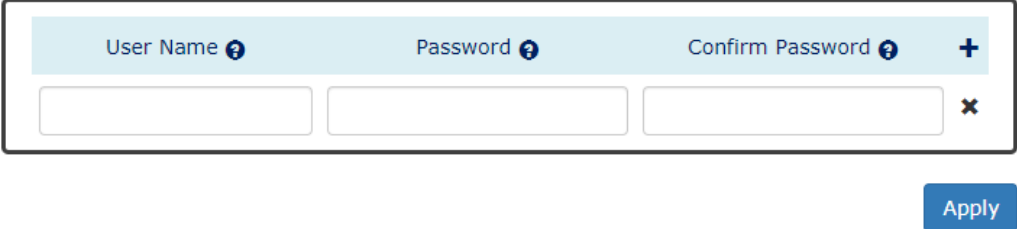

For more information, hover the mouse over the  icon in the system.

- User Name

The User Name is used in authentication.

The **max. length** for the User Name is **32 characters**.

Note: #, \, ', ", ? are **invalid** characters.

- Password

The Password is used in authentication.

The **max. length** for the Password is **20 characters**.

Note: #, \, ', ", ? are **invalid** characters.

- Confirm Password

The Confirm Password field must be the same as Password field.

- : Click the **plus icon** to add a Username/Password row.
- : Click the **remove icon** to delete the Username/Password row.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE RADIUS SERVER INFORMATION

RADIUS Server

RADIUS Server 1

Server IP		
Service Port	1812	
Shared Key		

RADIUS Server 2

Server IP		
Service Port	1812	
Shared Key		

Apply

For more information, hover the mouse over the  icon in the system.

- [Server IP](#)

The Server IP is the IP address of the server.

- [Service Port](#)

The Service Port is the listening port on the RADIUS server.

- [Shared Key](#)

The key is used in establishing the connection between the server and the authenticator before authentication.

- (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

Service Control

We provide 5 types of interface which are **HTTP**, **HTTPS**, **SSH**, **Telnet**, and **Console Port** to access the management interface of the switch. Users can configure the authority for each type of service to be enabled or disabled. **Reset Button** is another method to reboot or reset factory default. We also provide the configuration for the Reset Button to enable or disable its function. All of the services are enabled by default and users can disable unused service to make the system more secure.

CONFIGURE SERVICE CONTROL INFORMATION

Service Control

HTTP	☒ Enable	☐ Disable
HTTPS	☒ Enable	☐ Disable
SSH	☒ Enable	☐ Disable
Telnet	☒ Enable	☐ Disable
Console	☒ Enable	☐ Disable
Reset-Button	☒ Enable	☐ Disable

[Apply](#)

- [HTTP](#)

Enable or Disable to access management interface by **HTTP** which is the foundation of data communication for the **World Wide Web (WWW)**.

- [HTTPS](#)

Enable or Disable to access management interface by **HTTPS** which is an adaptation of HTTP for security. The communication will be **encrypted** in HTTPS.

- [SSH](#)

Enable or Disable to access management interface by **SSH**, which is a **cryptographic network** protocol. SSH provides a **secure channel** over an unsecured network in the client-server architecture. The switch plays the role of SSH server and hosts plays the role of SSH client.

- [Telnet](#)

Enable or Disable to access management interface by **Telnet** which is a **text-oriented** virtual terminal connection. It's less secure than SSH because it doesn't encrypt any data even password when the data is transmitting.

- [Console](#)

Enable or Disable to access management interface by **Serial Console Port**. Disable the Console Port can avoid the misconfiguration by someone who can access the device on-site.

- [Reset Button](#)

Enable or Disable to react when users press the **Reset Button**. The Reset Button provides different functions including reboot and reset factory default. Disable Reset Button is a protection from mistaking the button to reboot the system or restore the system to default state.

- (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

Access Control List

An access control list provides rules to apply all network ports. The inbound traffic checked the entries in the ACL table. Each entry can be the MAC entry for layer 2 address and IP entry for the layer 3 address. And it can check the source address or destination address. User can adjust the address mask to provide the group setting in one entry. Entry have two actions that can permit or deny network packet transmitting to another port.

CONFIGURE ACCESS CONTROL LIST

```
Switch(config)# acl mac
Usage: acl mac [Index] [drop|permit] [SrcMac|DstMac] [Mac] [Mac_Mask]
<1-128> Index range
```

```
Switch(config)# acl ip
Usage: acl ip [Index] [drop|permit] [SrcIp|DstIp] [IP] [IP_Mask]
<1-128> Index range
```

- [Index](#)
Entry number in the ACL table. Traffic packet will be checked with the index sequence.
The range of the [Index](#) is from VLAN **1 to 128**
- [Action](#)
Drop: Packet will discarded if it hit the address rule.
Permit: Packet will forwarded if it hit the address rule.
- [Address Type](#)
Src: Address rule bases on the source address
Dst: Address rule bases on the destination address
- [Address](#)
MAC address with byte colon format. For example: 00:80:C2:01:23:45
IP Address with decimal dot format. For example: 192.168.1.123
- [Address Mask](#)
Bit mask for MAC address with byte colon. Bit 1 is checking in rule. Otherwise bit 0 is exclude in checking rule.
Subnet mask for IP address with decimal dot. To decide the type of network.

ACCESS CONTROL LIST EXAMPLE


Admin's PC

MAC Address: 68:02:35:FF:AB:01

IP Address: 192.168.1.99

Scenario 1

Only allow Admin's PC to access database

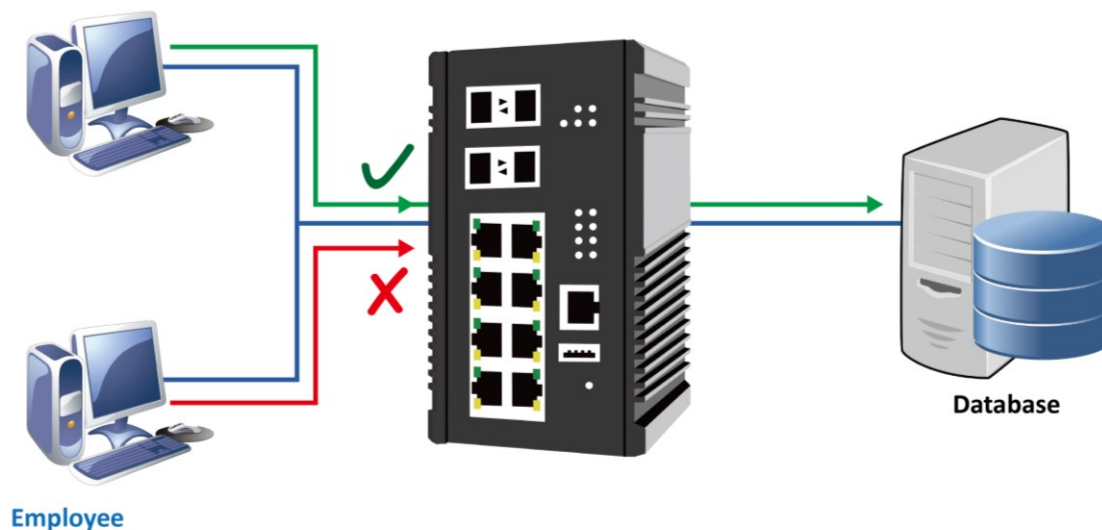

Configure **Permission** by **MAC Address**


1. Login Command Line Interface (CLI) with username and password which are admin/admin by default.
2. Configure ACL rule for the MAC Address of Admin's PC by issuing:
`acl mac 1 permit src 68:02:35:FF:AB:01 ff:ff:ff:ff:ff:ff`
 Note: the index ID is from 1 to 128

Configure **Permission** by **IP Address**

1. Login Command Line Interface (CLI) with username and password which are admin/admin by default.
2. Configure ACL rule for the IP Address of Admin's PC by issuing:
`acl ip 1 permit src 192.168.1.99 255.255.255.0`
 Note: the index ID is from 1 to 128

Scenario 2

Deny Visitor's PC to access database

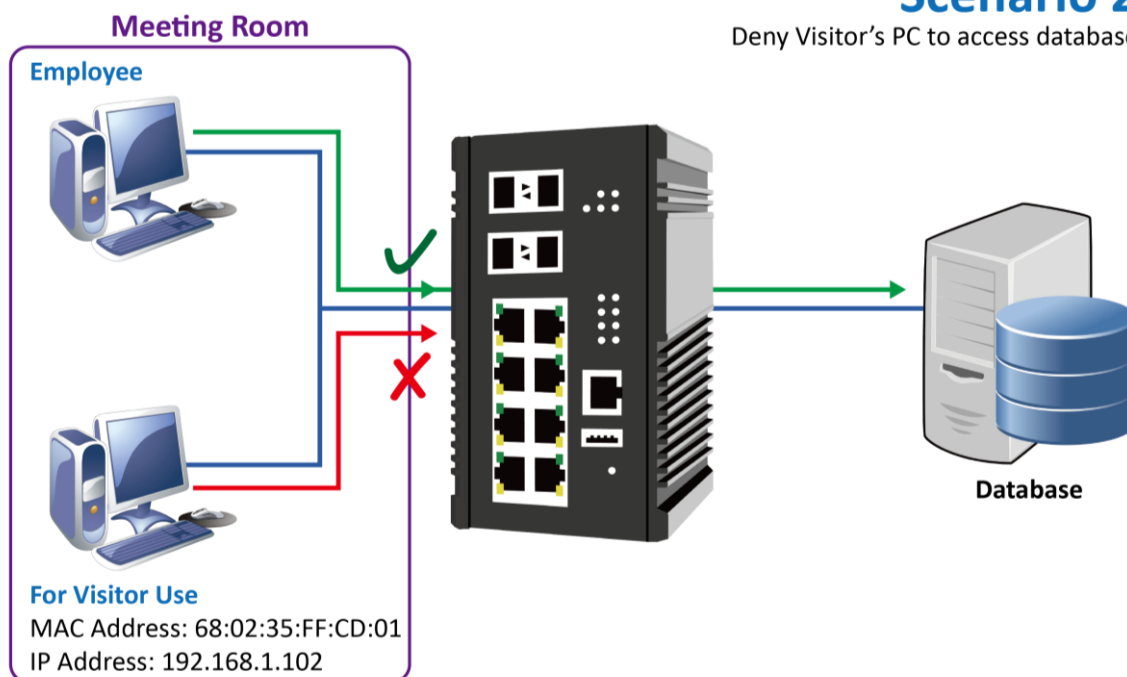

Configure **Deny** by **MAC Address**

3. Login Command Line Interface (CLI) with username and password which are admin/admin by default.
4. Configure ACL rule for the MAC Address of Visitor's PC by issuing:

```
acl mac 1 drop src 68:02:35:FF:CD:01 ff:ff:ff:ff:ff:ff
```

 Note: the index ID is from 1 to 128

Configure **Deny** by **IP Address**

3. Login Command Line Interface (CLI) with username and password which are admin/admin by default.
4. Configure ACL rule for the IP Address of Visitor's PC by issuing:


```
acl ip 1 drop src 192.168.1.102 255.255.255.0
```

 Note: the index ID is from 1 to 128

SSH

To reduce the steps for login the system via **SSH** connection, the **public/private key** pair is a good choice for users. The pair of keys is created on the local device and users have to provide the public key to the target device, for example, the Ethernet switch. When users connect to the target device, the system creates a safe connection by SSH. The localhost and target device **authenticates** each other with the public and private keys to make sure the security.

BACKUP HOST KEY FILE

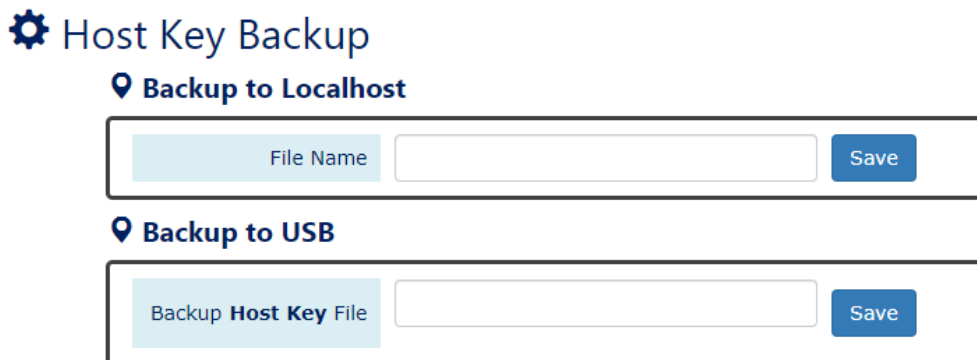

The interface shows a 'Host Key Backup' section with a gear icon. It contains two backup options: 'Backup to Localhost' and 'Backup to USB'. Each option has a location icon, a label, a text input field, and a 'Save' button.

Host Key Backup

Backup to Localhost

File Name Save

Backup to USB

Backup **Host Key** File Save

- [Backup to Localhost](#)
 - File Name
Specify the File Name for the **SSH Host Key** file, which will be saved to the localhost.
 - [Backup to USB](#)
Ensure there is a **USB stick** inserted into the USB port.
 - Backup Host Key File
Specify the File Name for the saved **SSH Host Key** file, which will be saved to the USB.
- Note:** The file system of USB must be FAT32.
-  (Save Button)

Click the "Save" button to save the configuration file to the **Localhost** or **USB**.

RESTORE HOST KEY FILE

Host Key Restore

Restore from Localhost

File Name	 Select File	Restore
-----------	---	---------

Restore from USB

File Name in USB			Restore
------------------	----------------------	---	---------

- [Restore from Localhost](#)

- [File Name](#)

Select the **SSH Host Key** file, which is saved in the Localhost.

- [Restore from USB](#)

Please ensure there is a **USB stick** inserted into the USB port.

- [File Name in USB](#)

The File Name of the saved **SSH Host Key** file, which is saved to the USB. If the configuration file is saved in the directory, please specify the **full path**.

Note: The file system of USB must be FAT32.

- (Restore Button)

Click the "Restore" button to restore the **SSH Host Key** from the **Localhost** or **USB**.

HOST KEY INFORMATION

The current **SSH Host Key** is displayed in the "[SSH Host Key](#)" page. The system only accept one SSH Host Key, once users restore another Host Key, the current Host Key will be replaced.

SSH Host Key


```
AAAAB3NzaC1yc2EAAAADAQABAAQCAQIINLLQMBzd+BcavrgDWypnd3
1h5/lwimsRWAnEMFuLwdP3L0PIIK05HLnoupRQjyWiJjYZmQ9wgucZ1dXUtpne
1yfgxTi8CQayACHMj3gTVzWAAPNhS8Ouq7LRMThucySBQouiQHKPlbi2KZm6+IX
DHAmAG1cOM9vnRuiymDkmWBI/xVki0Vx+q2rAUcUOKBNm2Ydr/rz4MxoAeQRCJ
UhjeH0yIBhCtM8+stM1/3k54Kn4Ivt9OqDCnLGjC3hwKxLDn1UxPDp46+oKbTIs
8OLAc285mTTKMj8g9XTIGsRD259bsajaj65e7GAI6ovnlWqew4f4jGOOOOVdh
```

Port Mirroring

Port Mirroring is a feature that copies the incoming or outgoing packets on one or more ports to another destination port. It is very useful to monitor the network traffic and analyze the copied traffic. **Port Mirroring** helps network management to keep a close eye on the network and debug when some issues arise.

CONFIGURE PORT MIRRORING INFORMATION

Port Mirroring

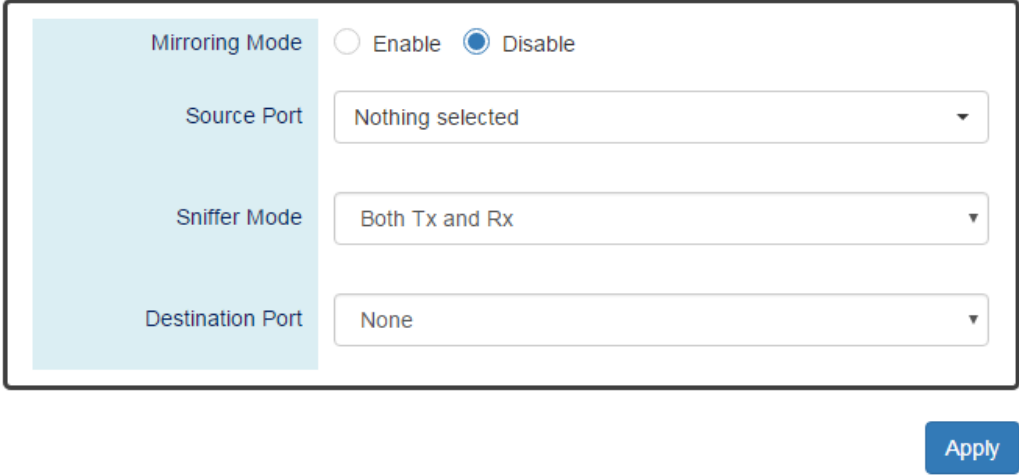

- **Mirroring Mode**
“Enable” or “Disable” the Port Mirroring function. If the user enables Port Mirroring function, the system will transmit the traffic of the specific “Sniffer Mode” from “Source Port” to “Destination Port”.
- **Source Port**
The traffic on the Source Ports will be sniffed to the Destination Port.
- **Sniffer Mode**
Both Tx and Rx: Sniffs both transmitting and receiving traffics.
Tx Only: Sniffs only the transmitting traffic.
Rx Only: Sniffs only the receiving traffic.
- **Destination Port**
The traffic will sniff to the Destination Port. This port is usually connected to a host running the software to observe the packets.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

Ping

Ping is a tool used to test the reachability of a device on the IP network. Ping is enabled by sending **Internet Control Message Protocol (ICMP)** request to the target device and waits for the response packet from the target device to check the connection.

PING ANOTHER DEVICE WITH IPv4/IPv6



Start

Stop

Clear

Reset

Type

☒ IPv4
 ☐ IPv6

IP Address

✓

Count

✓
?

Result

```

----- Start Ping 192.168.10.88 -----
64 bytes from 192.168.10.88: ttl=128 time=6.751 ms (1)
64 bytes from 192.168.10.88: ttl=128 time=11.794 ms (2)
64 bytes from 192.168.10.88: ttl=128 time=10.892 ms (3)
----- Ping Statistics -----
Transmitted: 3 packets,
Received: 3 packets,
Loss: 0.00%
----- End (Count=3) -----
          
```

*For more information, hover the mouse over the **?** icon in the system.*

- **Type**
Ping a connected device with “**IPv4**” or “**IPv6**” protocol.
- **IP Address**
The IP address of the connected device is verified based on the type.
- **Count**
Sets the count times. The system will send “Count” number ICMP packets to the specific IP address and wait for the response.
The range of the **Count** is **from 3 to 50**.
The default **Count** is **3**.
- **Result**
The result of the ping shows the response from the specific IP address. If the specific IP address does not respond, it displays No Response.

barox Kommunikation AG
Im Grund 15
CH-5405 Baden-Dättwil

Tel: +41 56 511 10 30
E-Mail: mail@barox.ch
Web: www.barox.ch

barox Kommunikation GmbH
Weiler Straße 7
D-79540 Lörrach

Tel: +49 7621 1593 100
E-Mail: mail@barox.de
Web: www.barox.de

- **“Start” Button**
Click the “Start” Button to start the ping to the IP address.
- **“Stop” Button**
Click the “Stop” Button to stop the ping to the IP address before the count is completed.
- **“Clear” Button**
Click the “Clear” Button to clear the “Result”.
- **“Reset” Button**
Click the “Reset” Button to clear the “Result” and reset the “IP Address” and “Count” number.

Cable Diagnostic

This command can check the status of copper cables with the time domain reflectometer (TDR) technology. It can detect a cable fault by sending a detect signal and read the reflecting back. With this test, it can help to identify and narrow down the physical level issue.

DISPLAY CABLE DIAGNOSTIC

```
Switch(config-lan3)# show cable-diagnostic
cable (4 pairs, length +/- 10 meters)
    pair A Ok, length 5 meters
    pair B Ok, length 5 meters
    pair C Ok, length 5 meters
    pair D Ok, length 5 meters
```

- [Port Selector](#)

Select the port number to test.

Port 1 to N, where N is based on the total port number.

- [Cable status](#)

The status of cable. It contains the number of pairs in the cable and the error amount.

Usually there are 4 pair in the CAT-5E cable for Gigabit Ethernet link.

- [Pair status](#)

The status of each pair of port. 'Ok' status means cable is connected to another node. 'Open' status means cable does not connect to any device.

- [Length](#)

The length of each pair of port in meters. Please note the error amount is around 10 meters due to the TDR technology. The short cable less than the error amount might be untastable.

LLDP

LLDP is **Link Layer Discovery Protocol** and it is a vendor-neutral layer 2 protocol that is defined by **IEEE 802.1AB**. **LLDP** is used in advertising identity of the devices, capabilities and neighbors on the LAN. The information from the neighbors enables the switch to quickly identify the devices and interoperate with each other more smoothly and efficiently. The neighbor table shows the information about the device that is next to the port. The LLDP can only get information from the device that is close to it. If the users want to know the topology of the LAN, they can collect all information from the device and analysis the neighbor table.

CONFIGURE LLDP INFORMATION

LLDP Settings



The configuration interface for LLDP settings is shown within a light blue bordered box. It contains two main sections: 'LLDP Mode' with radio buttons for 'Enable' (selected) and 'Disable', and 'LLDP Timer' with a text input field containing the value '30' and a help icon (question mark) to its right. Below the configuration box is a blue 'Apply' button.

For more information, hover the mouse over the  icon in the system.

- [LLDP Mode](#)

“Enable” or “Disable” the LLDP function.

- [LLDP Timer](#)

The LLDP Timer is a time interval to send LLDP messages.

The range of the [LLDP Timer](#) is **from 5 to 32767** seconds.

The default [LLDP Timer](#) is **30** seconds.

- (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

LLDP NEIGHBOR TABLE

LLDP Neighbor

Show entries
Search:

Local Port	Remote System Name	Chassis ID	Remote Port	Port ID	Address
3	MT-0804G	00:AA:BB:CC:11:02	Ian8	local 8	192.168.10.11
6	L2GigaBitEthern...	00:03:CE:11:22:33	Sid #2, Po...	local 1017	192.168.10.90

Showing 1 to 2 of 2 entries

First
Previous
Next
Last

☐ Auto Refresh

Refresh Rate: seconds

Refresh


- [Local Port](#)
The port connected to the LLDP neighbor on the local switch.
- [Remote System Name](#)
This is the system name of the LLDP neighbor. This value is set and provided by the remote device.
- [Chassis ID](#)
The Chassis ID defines the **MAC Address** of the LLDP neighbor.
- [Remote Port](#)
This field displays the **port information** received from the LLDP neighbor.
- [Port ID](#)
The Port ID displays the **port identity** of the connected port on the LLDP neighbor.
- [Address](#)
The Address displays the **IP address** of the LLDP neighbor.

System Warning

System Warning contains “System Event Log”, “SMTP Settings”, and “Event Selection” for different types of services such as “Fault Alarm”, “System Log”, “SMTP”, and “SNMP Trap”. These logs are very useful for the administrator to manage and debug the system. When the system is powered off or when someone tries to login the system or the system reboots abnormally, or when some of the interfaces are linked down, the system sends log messages to notify specific users and record the events on the server or assigned platform. Users can also connect an alarm buzzer to the relay alarm pins. When the configured “Fault Alarm” events are triggered, the alarm buzzer will ring to notify the users.

CONFIGURE SYSTEM WARNING INFORMATION

System Log Settings

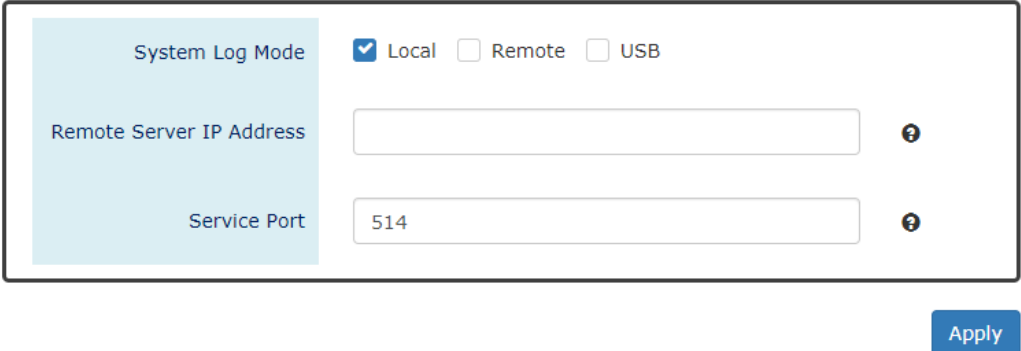

For more information, hover the mouse over the  icon in the system.

- [System Log Mode](#)
- Select the checkbox to send system log to Local (Switch), Remote, or USB when events happened.
- [Remote Server IP Address](#)
The field contains the IP Address of the remote server. If the “**Remote**” mode is enabled, users have to assign this IP Address to receive the system logs. The system supports both **IPv4** and **IPv6** addresses for the remote server.
- [Service Port](#)
The port is used to listen to the system log packets on the remote server.
The range of the Service Port is **from 1 to 65535**.
The default Service Port is **514**.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

SYSTEM EVENT LOG

Sysem Event Log

```

Jan 1 18:36:15 Switch user.info emonitor: [EVENT] Port 3: LINK-UP
Jan 1 18:36:15 Switch user.info emonitor: [EVENT] Port 8: LINK-UP
Jan 1 18:36:22 Switch user.warn emonitor: [EVENT] Port 3: LINK-DOWN
Jan 1 18:36:22 Switch user.warn emonitor: [EVENT] Port 8: LINK-DOWN
Jan 1 18:36:32 Switch user.info emonitor: [EVENT] Port 1: LINK-UP
Jan 1 18:36:32 Switch user.info emonitor: [EVENT] Port 7: LINK-UP
Jan 1 18:36:37 Switch user.warn emonitor: [EVENT] Port 1: LINK-DOWN
Jan 1 18:36:37 Switch user.warn emonitor: [EVENT] Port 7: LINK-DOWN

```

- Log Text Area

The system event information displays if the "**Local**" system log mode is enabled and the configured events are triggered.

- (Clear Button)

Click the "Clear" button to clear the system event log in the text area.

- (Refresh Button)

Click the "Refresh" button to refresh the system event log in the text area.

CONFIGURE SMTP INFORMATION

SMTP Settings

Server Settings

SMTP Status	☐ Enable ☒ Disable
Server Address	
Server Port	25 ?
Sender E-mail	
Mail Subject	Switch Notification ?
SMTP Authentication	☒ Enable ☐ Disable
User Name	?
Password	?

Recipient Settings

E-mail Address 1	
E-mail Address 2	
E-mail Address 3	
E-mail Address 4	

Apply

For more information, hover the mouse over the ? icon in the system.

- Server Settings
 - SMTP Status
“Enable” or “Disable” the SMTP function.
 - Server Address
This is the **IP address** or **URL** of the SMTP Server. For example, the SMTP server address provided by Google is “smtp.gmail.com”.
 - Server Port
This field is the port listening on the server for the SMTP request. For security, we suggest users configure the server port to **465** for **SSL** or **587** for **TLS**.
The range of the Service Port is **from 1 to 65535**.
The default Service Port is **25**. Port 25 is the default port for e-mail server.
 - Sender E-mail

The Sender E-mail is the e-mail address used to send the notifications to Recipients.

- Mail Subject

The Mail Subject is a string that is displayed in the E-mail title.

Note: #, \, ', ", ? are **invalid** characters.

- SMTP Authentication

“Enable” or “Disable” to authenticate the SMTP server with the configured username and password.

- User Name

The username is used in authentication with the SMTP server.

The **max. length** for the User Name is **32 characters**.

Note: #, \, ', ", ? are **invalid** characters.

- Password

The password is used in authentication with the SMTP server.

The **max. length** for the Password is **32 characters**.

Note: #, \, ', ", ? are **invalid** characters.

- Recipient Settings

- E-mail Address 1-4

The configured e-mail address will receive the notifications if the SMTP is enabled and the events set on “Event Selection” are triggered.

- (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE SYSTEM EVENT SELECTIONS

System Event Selections

Event	Fault Alarm	System Log	SMTP	SNMP
Authentication Failure	-	Disable	Disable	Disable
ERPS Change	-	Disable	Disable	Disable
Power 1	Disable	Disable	Disable	Disable
Power 2	Disable	Disable	Disable	Disable
Power 3	Disable	Disable	Disable	Disable
Power 4	Disable	Disable	Disable	Disable
Cold Start	-	Disable	Disable	Disable
Warm Start	-	Disable	Disable	Disable
Digital Input	Disable	Disable	Disable	Disable

- **Event**

There are 5 events on the System Events.

Authentication Failure: Login failed on the web console or CLI. It may be caused due to incorrect username or password.

ERPS Change: The ERPS function is working and the topology is changed.

Power 1 - 4: The power 1 to 4 is powered off.

Cold Start: The system reboots due to interruption of power supply.

Warm Start: The system reboots by issuing "reboot" command on CLI or clicking the "reboot icon" on the web console.

Digital Input: The signal from the digital input is changed from high to low or low to high.

- **Apply** (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE INTERFACE EVENT SELECTIONS

Interface Event Selections

Event	Fault Alarm	System Log	SMTP	SNMP
All Ports Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 1 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 2 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 3 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 4 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 5 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 6 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 7 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 8 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 9 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 10 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 11 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down
Port 12 Link	☐ Down	☐ Up ☐ Down	☐ Up ☐ Down	☐ Up ☐ Down

Apply

- **Event**

The events on the "Interface Events" display the **link status** for each port. Fault Alarm is triggered only during link down and other system log types support both link up and link down.

- **Fault Alarm**

The **Fault LED** will turn on **red** and relay will turn ON, if the configured events are triggered. By default, the Fault LED is **green** and relay is turned OFF in the normal situation,.

- [System Log](#)

When the configured events are triggered, the logs will be displayed in the “System Event Log” page, remote server, or saved to a USB file named “**message**”. This is based on the settings of the “**System Log Mode**” in the “**System Log Settings**” page.

Note: The file system of USB must be FAT32.

- [SMTP](#)

If the SMTP is enabled and the configured events are triggered, the system will send an e-mail notification to the e-mail addresses of the assigned recipient set in the “**SNMP Settings**” page.

- [SNMP](#)

If the SNMP Trap is enabled and the configured events are triggered, the system will send event information to the assigned “**Trap Receiver IP**”, which is set in the “**SNMP Trap**” page.

- (Apply Button)

After configuring above fields, click “**Apply**” button to make the changes effective.

CONFIGURE SFP DDM EVENT SELECTIONS

SFP DDM Event Selections

Port 9
▼

Event	Fault Alarm	System Log	SMTP	SNMP
Current	Disable ▼	Disable ▼	Disable ▼	Disable ▼
Rx Power	Disable ▼	Disable ▼	Disable ▼	Disable ▼
Tx Power	Disable ▼	Disable ▼	Disable ▼	Disable ▼
Temperature	Disable ▼	Disable ▼	Disable ▼	Disable ▼
Voltage	Disable ▼	Disable ▼	Disable ▼	Disable ▼



- [Event](#)

There are 5 events on the “SFP DDM Events”: **Current**, **Rx Power**, **Tx Power**, **Temperature**, and **Voltage**. Enable or Disable the event fault alarm or system warning when the value is

higher than the high alarm/warning threshold or the value is lower than the low alarm/warning threshold.

Data Collection

The health of switch system is very important in the real application. For most switches, they provide basic real-time traffic and PoE status but users need the long time records to analyze and statistic for the system. For this purpose, we implement the Data Collection function to collect traffic and PoE status periodically and save the collected data to the USB device. In addition to this, we also provide charts to display the collected data. Users can easily recognize the situation of the switch system and find the unusual points from the charts.

To ensure the accuracy of the data, the NTP service must be turned on before enable Data Collect function, so that when users find an abnormal record, they can trace it by the recording time. And there is no worry for the size of system storage because the data is saved in the USB. The data even can be move to other devices to display or users can use the collected raw data to do other application.

CONFIGURE DATA COLLECTION SETTINGS

USB and **NTP** are essential before users enable the Data Collection functions. Please check if there is an USB inserted and the NTP service is also enabled. The file system of USB must be FAT32.

Collection Settings

Detect USB ... **Fail**
Check NTP Service ... **Disabled**

Please insert USB device and **config NTP service** to enable data collection function.

Please enable Collection function before enabling Traffic and PoE Data Collection.
The system will collect data only when the Collection function is enabled.

Collection	☐ Enable	☒ Disable
PoE Data Collection	☐ Enable	☒ Disable
Traffic Data Collection	☐ Enable	☒ Disable

Apply

- [Collection](#)

“Enable” or “Disable” Data Collection Function on the switch. The Traffic and PoE Data Collection can be enabled only when the Collection is enabled.

- [PoE Data Collection \(PoE Models Only\)](#)
“Enable” or “Disable” PoE Data Collection function on the switch.
- [Traffic Data Collection](#)
“Enable” or “Disable” Traffic Data Collection function on the switch.

RESET COLLECTED DATA

Collected Data Reset


Port	Traffic		PoE	
	Sel. All	Desel. All	Sel. All	Desel. All
1	☐		☐	
2	☐		☐	
3	☐		☐	
4	☐		☐	
5	☐		☐	
6	☐		☐	
7	☐		☐	
8	☐		☐	
9	☐			
10	☐			
11	☐			
12	☐			

Reset

- [Port](#)
Port 1 to Port N, N is based on the total port number.
- [Traffic](#)
Check the checkbox to reset the data for the designated port. After reset, the collected data will be removed from the USB.
Note: It cannot undo after reset, please make sure you want to reset the file.
- [PoE \(PoE Models Only\)](#)
Port 1 to Port N, N is based on the total port number.

POE STATUS CHARTS (PoE Models Only)

PoE Status Charts

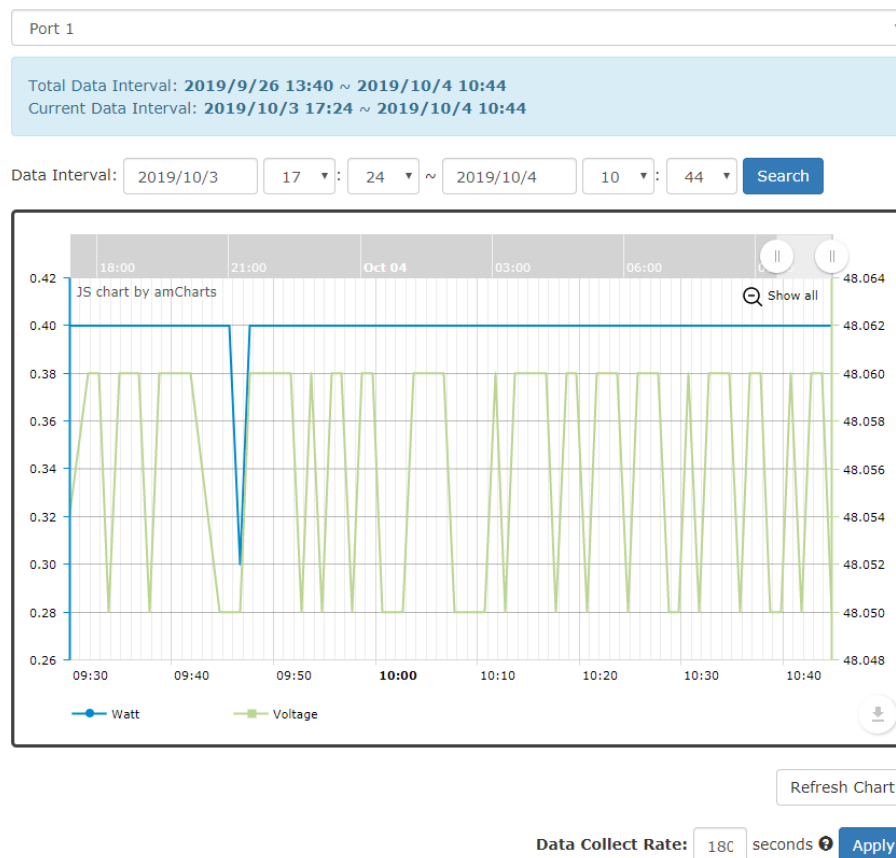

For more information, hover the mouse over the  icon in the system.

- **Port (Drop-down Selector)**
Port1 to PortN, where N is based on the total PoE port number. The PoE Status Chart is displayed by port.
- **Total Data Interval**
The interval is the date time from first data to last data that collected in the USB.
- **Current Data Interval**
The interval is the date time from first data to last data that displayed on the current chart.
- **Data Interval (Drop-down Selector)**
Select an interval to search data. The returned data will be displayed on the chart. The number of data is limited by the system, if the selected interval is larger than the limitation, the system will return an acceptable interval (Shown as the following screenshot).

Max Search Interval from 2019/09/26 17:52 is to 2019/9/30 05:21

Total Data Interval: **2019/9/26 13:41 ~ 2019/10/4 10:44**
Current Data Interval:

Search Interval: : ~ :

Search Range Error

Note: After configuring “Data Interval”, click "**Search**" button to get data in the interval.

- [Chart](#)

The chart displays both watts (blue line) and voltage (green line) data.

- [Refresh Chart \(Button\)](#)

Press the Refresh Chart button to refresh the chart and get the updated data.

- [Data Collect Rate](#)

The field is the period to collect data. The system will get the real-time data periodically according to the configured Data Collect Rate.

Note: PoE Status Charts and Interface Traffic Charts are shared the same Data Collect Rate.


The range of the Data Collect Rate is **from 60 to 600** seconds.

The default Data Collect Rate is **180** seconds.

Note: After configuring “Data Collect Rate”, click "**Apply**" button to make the changes effective.

INTERFACE TRAFFIC CHARTS

Interface Traffic Charts

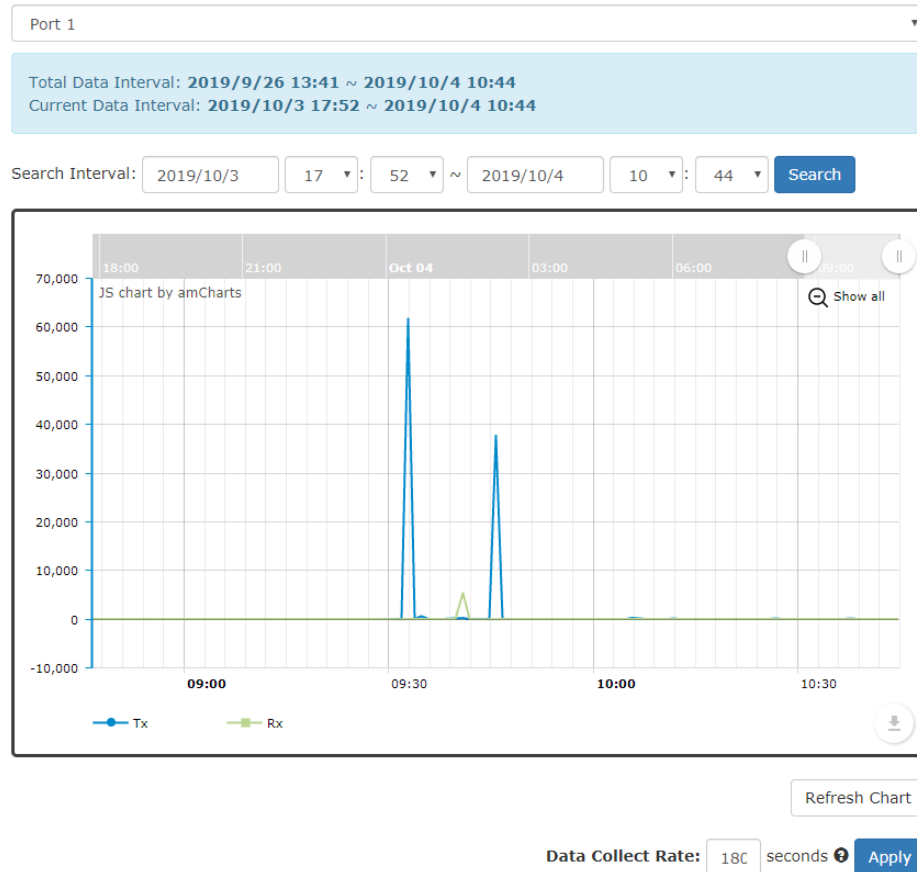

For more information, hover the mouse over the  icon in the system.

- [Port \(Drop-down Selector\)](#)

Port1 to PortN, where N is based on the total switch port number. The Interface Traffic Chart is displayed by port.

- [Total Data Interval](#)

The interval is the date time from first data to last data that collected in the USB.

- [Current Data Interval](#)

The interval is the date time from first data to last data that displayed on the current chart.

- [Data Interval \(Drop-down Selector\)](#)

Select an interval to search data. The returned data will be displayed on the chart. The number of data is limited by the system, if the selected interval is larger than the limitation, the system will return an acceptable interval (Shown as the following screenshot).

Max Search Interval from 2019/09/26 17:52 is to 2019/9/30 05:21

Total Data Interval: 2019/9/26 13:41 ~ 2019/10/4 10:44
Current Data Interval:

Search Interval: 2019/09/26 17 : 52 ~ 2019/10/4 10 : 44 **Search**

Search Range Error

Note: After configuring “Data Interval”, click "**Search**" button to get data in the interval.

- [Chart](#)

The chart displays transmitted bytes (blue line) and received bytes (green line) data.

- [Refresh Chart \(Button\)](#)

Press the Refresh Chart button to refresh the chart and get the updated data.

- [Data Collect Rate](#)

The field is the period to collect data. The system will get the real-time data periodically according to the configured Data Collect Rate.

Note: Interface Traffic Charts and PoE Status Charts are shared the same Data Collect Rate.

The range of the [Data Collect Rate](#) is **from 60 to 600** seconds.

The default [Data Collect Rate](#) is **180** seconds.

Note: After configuring “Data Collect Rate”, click "**Apply**" button to make the changes effective.

MAC Table

MAC address is **Media Access Control** address, which is used in layer 2 switching. A **MAC Address table** is maintained by the switch to transmit frames more efficiently. When the switch receives a frame, the system will check the MAC table and forward the frame to the corresponding port. The MAC Address table is built dynamically by the received frames and when the system receives a frame with an unknown MAC address, it **floods** the frame to all LAN ports in the same VLAN. When the destination device replies the system identifies the MAC Address and the target port.

The MAC Address for the switch is designed as per-port-per-MAC, which implies each port has its own MAC Address. This is for MAC sensitive protocols such as Spanning-tree protocol. The MAC Address display on the right side of WEB GUI is the MAC Address for whole system and the MAC Addresses for the ports are increasing by 1 from port 1 to last port.

For example, the MAC Address of the system is 68:02:35:FF:FF:05, and there are 8-port on the switch. The MAC Address for each port will be:

Port	MAC Address	Port	MAC Address
Port 1	68:02:35:FF:FF:06	Port 5	68:02:35:FF:FF:0A
Port 2	68:02:35:FF:FF:07	Port 6	68:02:35:FF:FF:0B
Port 3	68:02:35:FF:FF:08	Port 7	68:02:35:FF:FF:0C
Port 4	68:02:35:FF:FF:09	Port 8	68:02:35:FF:FF:0D

Note: The MAC Address is hex format, so the number after "09" is "0A".

CONFIGURE STATIC MAC ADDRESS INFORMATION

Static MAC Address Settings

VID 	MAC Address	Group Member	
		Nothing selected	

Apply

For more information, hover the mouse over the  icon in the system.

- VID**

The VID is the VLAN group ID, which contains the configured MAC Address .

 
The range of the VID is **from 1 to 4094**.

- [MAC Address](#)

This field is the static MAC Address of the configured member ports in the VLAN group.

- [Group Member](#)

The Group Member is the port(s) in the VLAN group, to which the configured MAC Address belongs.

- : Click the **plus icon** to add a static MAC Address row.
- : Click the **remove icon** to delete the static MAC Address row.
-  (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

MAC ADDRESS TABLE

MAC Address Table

Show entries
Search:

VID	MAC Address	Type	Source
VLAN 1	EC:08:6B:06:96:53	Learning	2
VLAN 1	1C:49:7B:6A:F3:41	Learning	5
VLAN 1	1C:1B:0D:66:75:EB	Learning	5
VLAN 1	01:00:5E:7F:FF:FA	Static	2
VLAN 1	40:8D:5C:EA:92:02	Learning	5
VLAN 1	9C:EB:E8:3A:54:E7	Learning	5
VLAN 1	40:8D:5C:EA:8D:C3	Learning	5
VLAN 1	1C:1B:0D:66:F7:F8	Learning	5
VLAN 1	FC:3F:DB:53:19:8E	Learning	5
VLAN 1	A4:02:B9:80:7D:66	Learning	5

Showing 1 to 10 of 10 entries

First Previous Next Last

☐ Auto Refresh

Refresh

Refresh Rate: seconds

- [VID](#)

The VID is the VLAN group ID, which contains the configured MAC Address.

- [MAC Address](#)

The MAC Address column displays the learnt or configured MAC Addresses.

- [Type](#)

The Type column displays the type (Learning or Static) of the MAC Address.

Learning: The MAC address is learnt from the transmitting frames.

Static: The MAC Address is configured by the users or the system.

- [Source](#)

The Source column displays the port(s) to which the MAC Address belong.

Authorization


The "**Username**" and "**Password**" are very important information both in the "**Command Line Interface**" or "**Web Console**". Users have to login into the system before doing any configuration. We strongly suggest the users to change at least the password **for security** when they are going to use this device.

We also provide authentication with **RADIUS/TACACS+** server from software **version 1.0.3**. Users can maintain the login information in their own RADIUS/TACACS+ database and allow several usernames/passwords to login the system.

CONFIGURE LOGIN INFORMATION

Update Authorization

Basic Settings

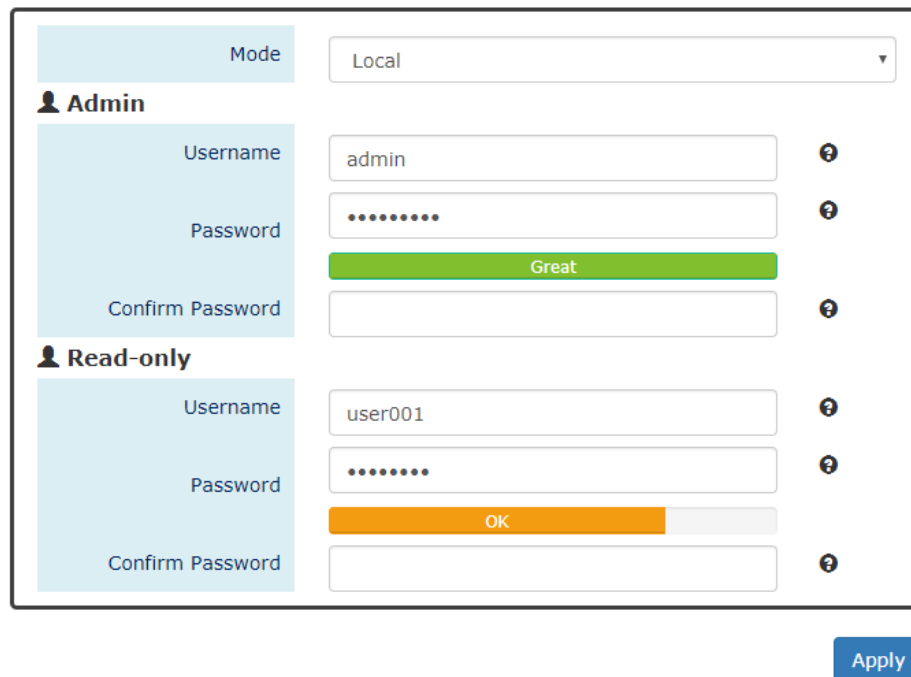

The screenshot shows a web interface for configuring login information. It is titled 'Update Authorization' and 'Basic Settings'. The 'Mode' is set to 'Local'. There are two user profiles: 'Admin' and 'Read-only'. Each profile has fields for 'Username', 'Password', and 'Confirm Password'. The 'Admin' user has a password strength indicator showing 'Great' (green bar). The 'Read-only' user has a password strength indicator showing 'OK' (orange bar). There are help icons (?) next to the password and confirm password fields. An 'Apply' button is at the bottom right.

For more information, hover the mouse over the  icon in the system.

- Mode

There are three modes for login authentication.

Local: The username and password are defined in the system. Currently we support two-level users – **Admin** and **Read-only** user. The Admin can access any page and configure the system but the read-only user can only access status pages.

Radius: The username and password are defined in the **RADIUS server** and when users login the system, the system will authenticate with the RADIUS server to get the login permission. The password will be encrypted during the transmitting.

Tacacs+: The username and password are defined in the **TACACS+ server** and when users login the system, the system will authenticate with the TACACS+ server to get the login permission. The whole payload and password will be encrypted during the transmitting.

- **Username**

The account used to login to the system.

The maximum length of the Username is **32** characters

Only **alphabet** (A-Z, a-z) and **numbers** (0-9) are allowed.

The default Username is **admin**.

- **Password**

The password used to login to the system. We provide **password strength** bar for reference. There are 3 levels - **Weak**, **OK**, and **Great**. We strongly recommend users configuring the password to "**Great**" level for security.

The maximum length of the Password is **32** characters.

Only **alphabet** (A-Z, a-z), **numbers** (0-9), and **chars** (!,@,%^,*,(,)) are allowed.

The default Password is **admin**.

- **Confirm Password**

It is used to confirm the value specified by the users in the "Password" field. The value of the field must be the same as "Password".

- **Apply** (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE RADIUS SERVER INFORMATION

This section only display when the mode in the Basic Settings is set to "Radius".

📍 RADIUS Server

Server IP		
Server Port	1812	?
Shared Key		?
Retransmit Times		?
Timeout	5	?

Apply

For more information, hover the mouse over the  icon in the system.

- [Server IP](#)
The IP address of the RADIUS server must in the same subnet as the IP address of the switch.
- [Server Port](#)
The port is listening to the RADIUS service on the RADIUS server.
The range of the [Server Port](#) is **from 1 to 65535**.
The default [Server Port](#) is **1812**.
- [Shared Key](#)
The Shared Key is a string that used to build the connection with the RADIUS server. It must be the same as the string/secret set in the RADIUS server.
The maximum length of the [Shared Key](#) is **32** characters.
- [Retransmit Times](#)
The password used to login to the system.
The range of the [Retransmit Times](#) is **from 1 to 1000**.
- [Timeout](#)
The time interval is used to waiting for the response from the RADIUS server.
The range of the [Timeout](#) is **from 1 to 1000** seconds.
The default [Timeout](#) is **5** seconds.
-  (Apply Button)
After configuring above fields, click "**Apply**" button to make the changes effective.

CONFIGURE TACACS+ SERVER INFORMATION

This section only display when the mode in the Basic Settings is set to "Tacacs+".

TACACS+ Server

Server IP		
Server Port	49	
Shared Key		
Timeout	30	



For more information, hover the mouse over the  icon in the system.

- [Server IP](#)

The IP address of the TACSCS+ server must be in the same subnet as the IP address of the switch. The system supports both **IPv4** and **IPv6** addresses for the TACACS+ server.

- **Server Port**

The port is listening to the TACSCS+ service on the TACSCS+ server.

The range of the Server Port is **from 1 to 65535**.

The default Server Port is **49**.

- **Shared Key**

The Shared Key is a string that is used to build the connection with the TACSCS+ server. It must be the same as the string/secret set in the TACSCS+ server.

The maximum length of the Shared Key is **32** characters.

- **Timeout**

The time interval is used for waiting for the response from the TACSCS+ server.

The range of the Timeout is **from 1 to 1000** seconds.

The default Timeout is **30** seconds.

- (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

Firmware Upgrade


For a better performance and wider industrial applications, we constantly develop new features and revise the issues from the users. We suggest the users to upgrade the system to the newest firmware version to have a better user experience.

We provide 2 ways to upgrade the firmware from the Web Console, - one is saving the firmware file in the USB stick and another one is save the firmware file on the PC. If the firmware file is on the PC, the users will have to only **select the file** and click **Apply** button, for the system to upgrade it automatically.

UPGRADE FIRMWARE VERSION - UPLOAD FIRMWARE FILE

Firmware Upgrade

Upload Firmware File

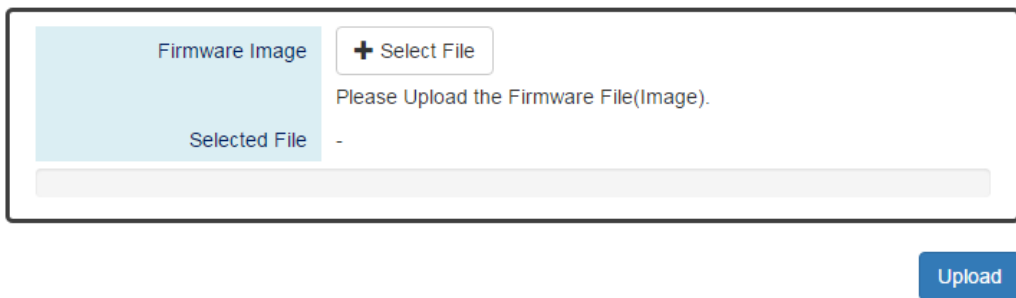

- [Firmware Image](#)
Click the "**Select File**" button to select the firmware image provided by the sales or support. The **Firmware Version** displayed on the system can be customized by the **file name**. For example, if you want the version to be called as 1.2.3, you only need to modify the file name to **XXX-v1.2.3** (XXX is the original file name).
- [Selected File](#)
After selecting a firmware image to be uploaded, the **selected file name** will be displayed in this field.
-  (Upload Button)

After selecting the firmware image, click "Upload" button to upload it.

UPGRADE FIRMWARE PROCESS - UPLOADING FIRMWARE FILE

The following steps are performed when the system starts to upgrade after the "Apply" button is clicked:

1. **Uploading** the firmware image

The progress bar displays the uploading percentage.

📍 Upload Firmware File

Uploading... Please Wait.

The screenshot shows a web interface for uploading a firmware file. It features a light blue box with the text 'Firmware Image' and a '+ Select File' button. Below this, it says 'Please Upload the Firmware File(Image)'. The 'Selected File' is 'WEBFULL-v0.0.14.1214'. A green progress bar is at the bottom, showing 56% completion. To the right of the box is a blue 'Upload' button.

2. **Verifying** the uploaded file

When the file is **100%** uploaded, the system starts to **verify** the uploaded file to make sure it is **valid**. By default, the firmware image is encrypted to prevent the attack on man-in-the-middle. Optionally, higher encryption methodology is also provided.

📍 Upload Firmware File

Uploading Finished, Verifying Uploading File...

This screenshot is similar to the previous one, but the green progress bar now shows 100% completion. The 'Selected File' remains 'WEBFULL-v0.0.14.1214'. The blue 'Upload' button is still present to the right.

3. **Installing** the uploaded firmware image

The new firmware will install after the system validates it.

📍 Upload Firmware File

Verifying Finished, Installing Firmware...

Firmware Image

+ Select File

Please Upload the Firmware File(Image).

Selected File

WEBFULL-v0.0.14.1214

100%

Upload

4. **Rebooting** the system

The system will reboot automatically if the firmware is upgraded without any issue.
The progress bar displays the rebooting progress.

Device Rebooting... Please Wait...

The Web Page Will Refresh Automatically.



UPGRADE FIRMWARE VERSION - COPY FIRMWARE FILE FROM USB

📍 Copy Firmware File from USB

Image File Name

Please Enter the File(Image) Name Which is Saved in the USB.

Upload

- Image File Name

Enter the name of the firmware image in the USB. The system will try to identify the file with specified file name to upload it to the system.

Note: The file system of USB must be FAT32.

- Upload

 (Upload Button)

After entering the firmware image name, click "Upload" button to copy it from the USB to the system.

UPGRADE FIRMWARE PROCESS - COPY FIRMWARE FILE FROM USB

1. **Copying** the firmware image from USB to switch

The system will also check if the USB is inserted and file exists.

Copy Firmware File from USB

Copying Image to System...

Image File Name	WEBFULL-v0.0.14.1214 
Please Enter the File(Image) Name Which is Saved in the USB.	

Upload

2. **Verifying** the uploaded file

After copying the firmware file to switch, the system starts to **verify** the uploaded file to make sure it is **valid**. By default, the firmware image is encrypted to prevent the attack on man-in-the-middle. Optionally, higher encryption methodology is also provided.

📍 **Copy Firmware File from USB**

🌀 **Copying File Finished, Verifying Uploading File...**

Image File Name

WEBFULL-v0.0.14.1214 ✓

Please Enter the File(Image) Name Which is Saved in the USB.

Upload

3. **Installing** the uploaded firmware image

The new firmware will install after the system makes sure it is valid.

📍 **Copy Firmware File from USB**

🌀 **Verifying Finished, Installing Firmware...**

Image File Name

WEBFULL-v0.0.14.1214 ✓

Please Enter the File(Image) Name Which is Saved in the USB.

Upload

4. **Rebooting** the system

The system will reboot automatically if the firmware is upgraded without any issue.
The progress bar displays the rebooting progress.

Device Rebooting... Please Wait...

The Web Page Will Refresh Automatically.



Config Backup

In the normal application, there are several switches in the Network and they might be configured to the same features. To facilitate this, the users can configure one of the switches and save the configuration file to localhost (for example: users' PC) or USB sticks and then restore the configurations on another switch via "**Config Restore**" function. Configuration file in the USB can also have a way to fast replace the device when it is damage.

BACKUP CONFIGURATION FILE

Config Backup

Backup to Localhost

File Name		Save
-----------	----------------------	-------------------------------------

Backup to USB

Backup Running-config File		Save
Backup Startup-config File		Save

- [Backup to Localhost](#)

- [File Name](#)

Specify the File Name for the **Startup-config** file, which will be saved to the localhost.

- [Backup to USB](#)

Ensure there is a **USB stick** inserted into the USB port.

- [Backup Running-config File](#)

Specify the File Name for the saved **Running-config** file, which will be saved to the USB.

- [Backup Startup-config File](#)

Specify the File Name for the saved **Startup-config** file, which will be saved to the USB.

Note: The file system of USB must be [FAT32](#).

The "space" is not allowed in the File Name.

- (Save Button)

Click the "Save" button to save the configuration file to the **Localhost** or **USB**.

NOTE: If the **File Name** field is empty, the system assigns the default name: ***config-[datetime].cfg***

Config Restore

We suggest users to save/backup the configurations after a series of settings. If another device needs the same configurations, users can use the **Config Restore** function to restore it.

RESTORE CONFIGURATION FILE

Config Restore

Restore from Localhost

Restore from USB

- [Restore from Localhost](#)

- [File Name](#)

Select the configuration file, which is saved in the Localhost.

- [Restore from USB](#)

Please ensure there is a **USB stick** inserted into the USB port.

- [File Name in USB](#)

The File Name of the saved configuration file, which is saved to the USB. If the configuration file is saved in the directory, please specify the **full path**.

Note: The file system of USB must be FAT32.

The "space" is not allowed in the File Name.

- (Restore Button)

Click the "Restore" button to restore the configurations from the **Localhost** or **USB**.

USB Auto-Load & Auto-Backup

CONFIGURE USB AUTO-LOAD AND AUTO-BACKUP

Auto Load & Backup

USB Auto-Load

☒ Enable
 ☐ Disable

USB Auto-Backup

☐ Enable
 ☒ Disable

Apply

- [USB Auto-Load](#)

“Enable” or “Disable” the USB Auto-Load function. If “USB Auto-Load” is **enabled**, the system will search the configuration file named “**startup-config**” in the USB and load it when rebooting.

Note: The file system of USB must be FAT32.

- [USB Auto-Backup](#)

“Enable” or “Disable” USB Auto-Backup function. If “USB-Auto-Backup” is **enabled**, the system will save the configurations to a file named “**running-config**” in the USB when users modify the configurations.

Note: The file system of USB must be FAT32.

- Apply

 (Apply Button)

After configuring above fields, click "**Apply**" button to make the changes effective.

SFTP File Access

CONFIGURE SFTP CONFIGURATION UPLOAD

```
Switch(config)# upload server sftp
  account          Set uploading server account
  password         Set uploading server password

Switch(config)# upload sftp
Usage: upload sftp [<cr>]
```

1. Config IP address of SFTP server

```
Switch(config)# upload server ip [SERVER_IP]
```

2. Config login account name of SFTP server

```
Switch(config)# upload sftp server account [SERVER_ACCOUNT]
```

3. Config login account password of SFTP server

```
Switch(config)# upload sftp server password [SERVER_PASSWORD]
```

4. Action to do the SFTP upload

```
Switch(config)# upload sftp
```

CONFIGURE SFTP CONFIGURATION DOWNLOAD

```
Switch(config)# copy sftp
  account          set sftp server account
  file             Set uploading file
  ip              set sftp server ip
  password        set sftp server password
  startup-config   Destination
  usb             Destination
```

1. Config IP address of SFTP server

```
Switch(config)# copy sftp ip [SERVER_IP]
```

2. Config login account name for SFTP server

```
Switch(config)# copy sftp account [SERVER_ACCOUNT]
```

3. Config login account password for SFTP server

```
Switch(config)# copy sftp password [SERVER_PASSWORD]
```

4. Config login account password for SFTP server

```
Switch(config)# copy sftp file name [FILE_NAME]
```

5. Action to do the SFTP download to the startup configuration

```
Switch(config)# copy sftp startup-config
```

Note: After copy to the startup configuration, system will reboot automatically.

6. Action to do the SFTP download to the USB storage

Switch(config)# **copy sftp USB**

Note: The file system of USB must be FAT32.

 
Command Line Interface

Command Line Interface is usually called **CLI**. It allows the users to configure, monitor, and maintain the switch by executing commands directly.

CONNECT TO CLI VIA CONSOLE PORT


Before starting the connection to the Console Port, ensure that you have a utility (such as “Putty”, “Tera Term”, “HyperTerminal”, “SecureCRT”, etc.) to do that. The following example is operating on **Windows 7** and connected by “**Putty**”.

1. Connect the Console Port to your PC or Laptop and check the port number in the “Device Manager” on the PC.



2. Configure the Serial Information with the COM port number and Speed (Baud Rate: **115200**). By default, the Data bits and Parity are **8** and **1**. Then click “Open” to connect to the CLI.

Note: The complete parameters are **COMX/115200/8/1**.

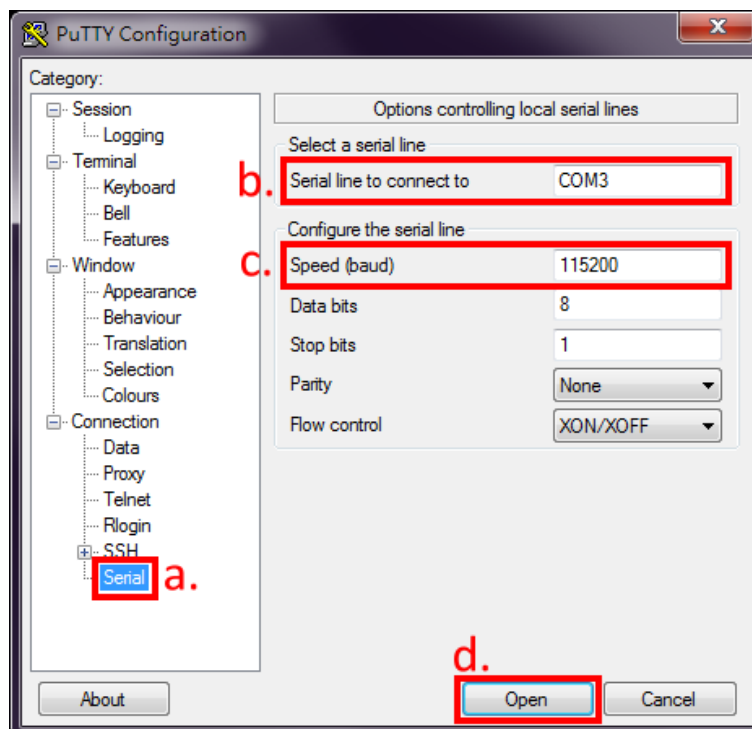

barox Kommunikation AG
Im Grund 15
CH-5405 Baden-Dättwil

Tel: +41 56 511 10 30
E-Mail: mail@barox.ch
Web: www.barox.ch

barox Kommunikation GmbH
Weiler Straße 7
D-79540 Lörrach

Tel: +49 7621 1593 100
E-Mail: mail@barox.de
Web: www.barox.de

3. Enter the username and password to login to the system. The default username and password is **admin/admin**.



 
```
COM3 - PuTTY
User Access Verification

Username: admin
Password:
Switch>
```

4. When you see **"Switch>"**, it refers that you have logged in to the system. You can then start to configure the system on the CLI mode.


CONNECT TO CLI VIA TELNET

The following example is operating on **Windows 7**. If the system shows the information as the picture below, please enable the "Telnet Client" before using telnet function.



```
C:\>telnet
'telnet' is not recognized as an internal or external command,
operable program or batch file.
```

1. Click Windows "Start" button and enter "cmd" on the search box to open the "Command Prompt".
2. Enter **"telnet [IP_ADDRESS]"** on the CMD window. For example, the IP address of the switch is "192.168.10.166", so enter "telnet 192.168.10.166" and then press the "Enter" key.

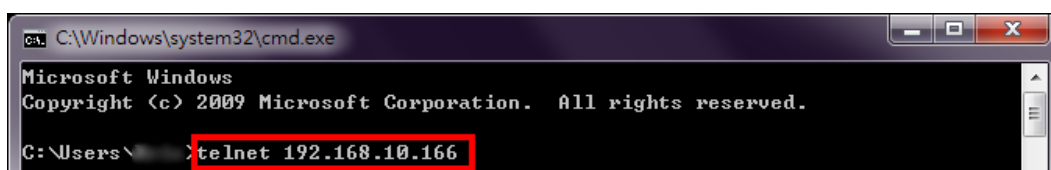

```
C:\Windows\system32\cmd.exe
Microsoft Windows
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\>telnet 192.168.10.166
```

3. Enter the username and password to login the system. The default username and password is **admin/admin**.



```
C:\ Telnet 192.168.10.166
User Access Verification

Username: admin
Password:
Switch>
```

4. When **"Switch>"** is displayed, it refers that you have logged in to the system. You can then start to configure the system on the CLI mode.

CONFIGURE SYSTEM UNDER DIFFERENT MODES

After login to CLI, users have to enter the Privileged Mode for "show" commands. If users want to configure the system via CLI, they have to enter Configuration Mode.

The command to enter Privileged Mode is **"enable"**. After enter Privileged Mode, issue **"configure terminal"** to enter Configuration Mode. When **"Switch(config)#"** is displayed, users can

start configuring the system with all commands under Configuration Mode. In the Command Group section, the mode of each command will be marked in the last column of the commands table.

```


Telnet 192.168.10.147
Welcome to Switch.
Username: admin
Password:
Switch> enable Enter Privileged Mode
Switch# configure terminal Enter Configuration Mode
Switch(config)#
  
```

There are different modes under Configuration Mode, such as **Interface** Mode, **VLAN** Mode, **ERPS** Mode, and **MRP** Mode. If the command that users are preparing to issue is under these modes, they have to enter the designated mode first. Users can issue “**exit**” to leave current mode. In the following table, we list the commands to enter different modes.


Mode	Command	Description
Interface	interface lanX	X implies the port number
VLAN	vlan X	X implies the VLAN ID
ERPS	ethernet redundancy erps-ring X	X implies the Ring number, from 1 to 3
MRP	ethernet redundancy mrp instance-mode 1	Only support single ring currently

ENABLE TELNET CLIENT ON WIDOWS 7


1. Click the Windows “Start” button and click “Control Panel” item.

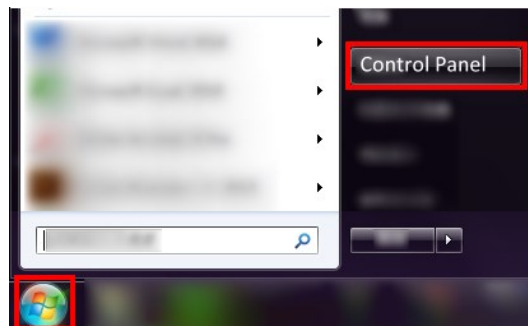


2. Click the “Programs” item.

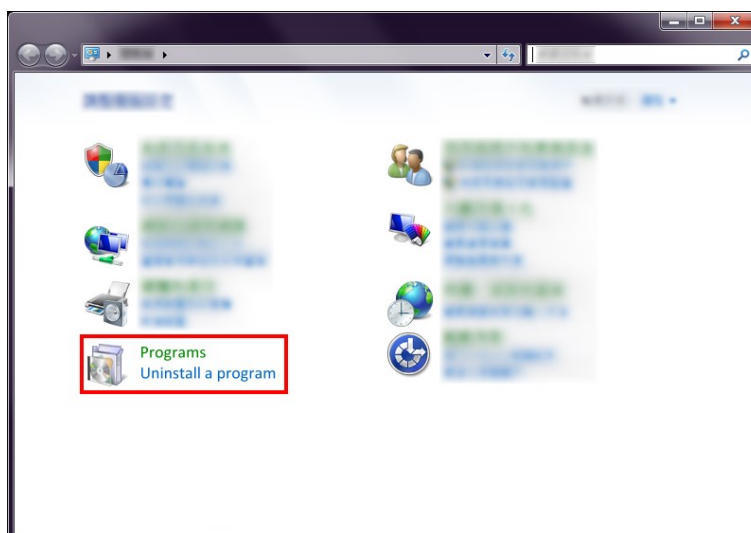

 3. Click the “Turn Windows features on or off” item.



4. Select the checkbox of “Telnet Client” and then click “OK” to enable telnet function.

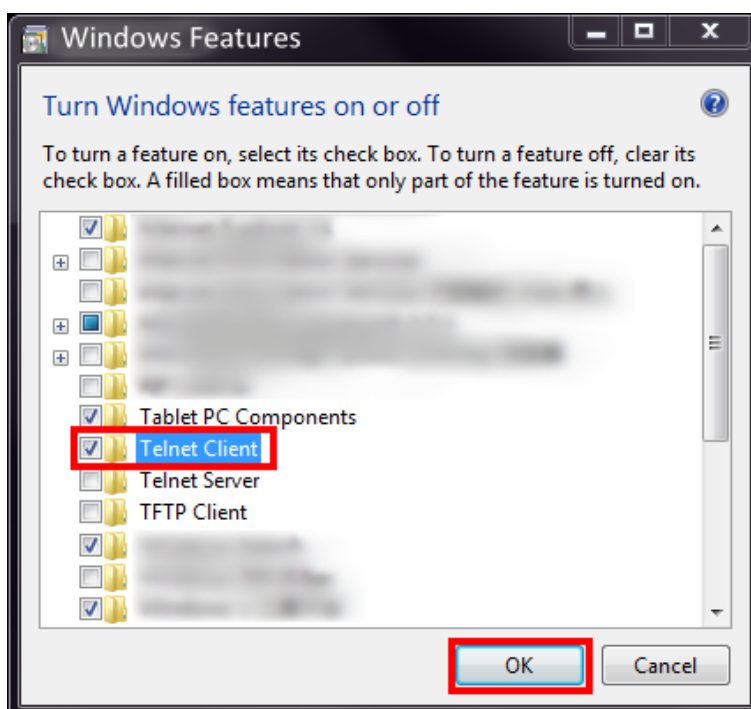

5. Click Windows “Start” button and enter “cmd” on the search box to open the “Command Prompt” to test the telnet function.

```

C:\Windows\system32\cmd.exe
Microsoft Windows
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\ >telnet /?

telnet [-a][-e escape char][-f log file][-l user][-t term][host [port]]
-a      Attempt automatic logon. Same as -l option except uses
        the currently logged on user's name.
-e      Escape character to enter telnet client prompt.
-f      File name for client side logging
-l      Specifies the user name to log in with on the remote system.
        Requires that the remote system support the TELNET ENVIRON option.
-t      Specifies terminal type.
        Supported term types are vt100, vt52, ansi and vtnt only.
host    Specifies the hostname or IP address of the remote computer
        to connect to.
port    Specifies a port number or service name.

C:\Users\ >

```


FIRMWARE UPGRADE VIA CLI

Users can upgrade the system with a new firmware on both the web console and CLI mode. To upgrade on the web console, a high interactivity web GUI is provided for the users. Please refer to [Firmware Upgrade](#) section. To upgrade on the CLI mode, there are 3 methods: TFTP, wget (HTTP), and USB. The following sections explain how to upgrade the firmware using the 3 methods.

FIRMWARE UPGRADE VIA CLI – TFTP

If the users are planning to upgrade the firmware via CLI mode with TFTP, a **TFTP server** is needed before upgrading. You can download the free TFTP server from [tftpd official website](#).

1. Open the TFTP Server and browser the file directory path. For example, if the firmware file is saved on the desktop, the path to the desktop should be specified in the “**Current Directory**” field.

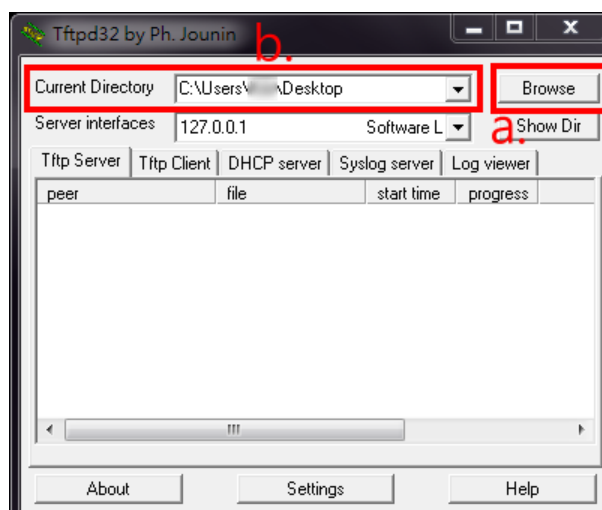


2. Make sure the link between the switch and the host (PC or laptop) is connected. To verify it, ping the IP address of the switch IP address from the host to check it.

3. Assign the **firmware file name** by issuing the “**upload file name [FILE_NAME]**”. The default file name is “WEBFULL”.
4. Assign the TFTP Server IP address by issuing “**upload server ip [SERVER_IP]**”. The server IP address is the IP address of the host, which is running the TFTP server.

The commands for assigning the filename and server IP are in the **Configure mode**, so before configuring, specify “configure terminal” to enter the **Configure mode**.

If the command is completely configured, the system will display “OK”.

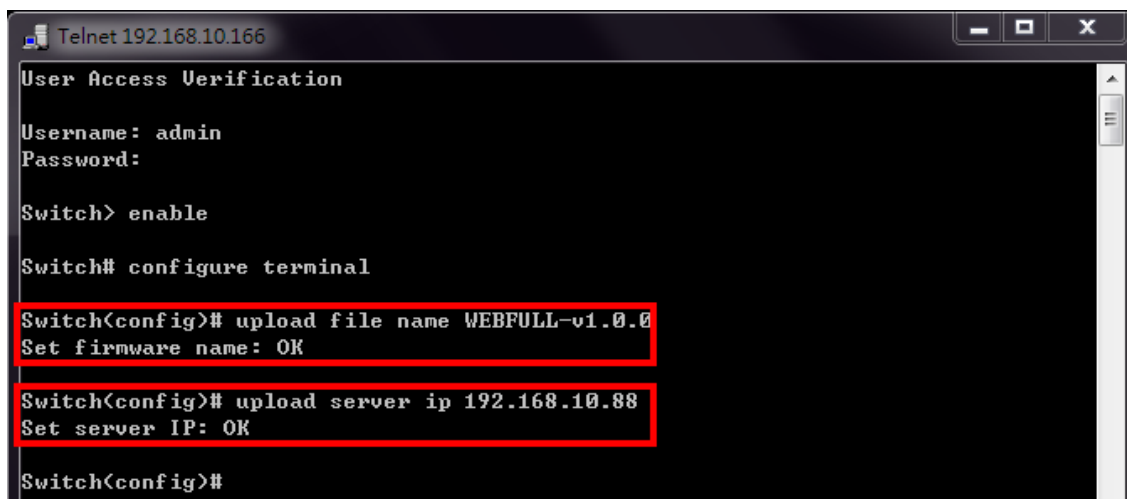

```

Telnet 192.168.10.166
User Access Verification

Username: admin
Password:

Switch> enable


Switch# configure terminal

Switch(config)# upload file name WEBFULL-v1.0.0
Set firmware name: OK

Switch(config)# upload server ip 192.168.10.88
Set server IP: OK

Switch(config)#
  
```

5. Start to upgrade the firmware file by specifying “upload tftp”. The system starts to upload the assigned file by the TFTP. This takes a few minutes.

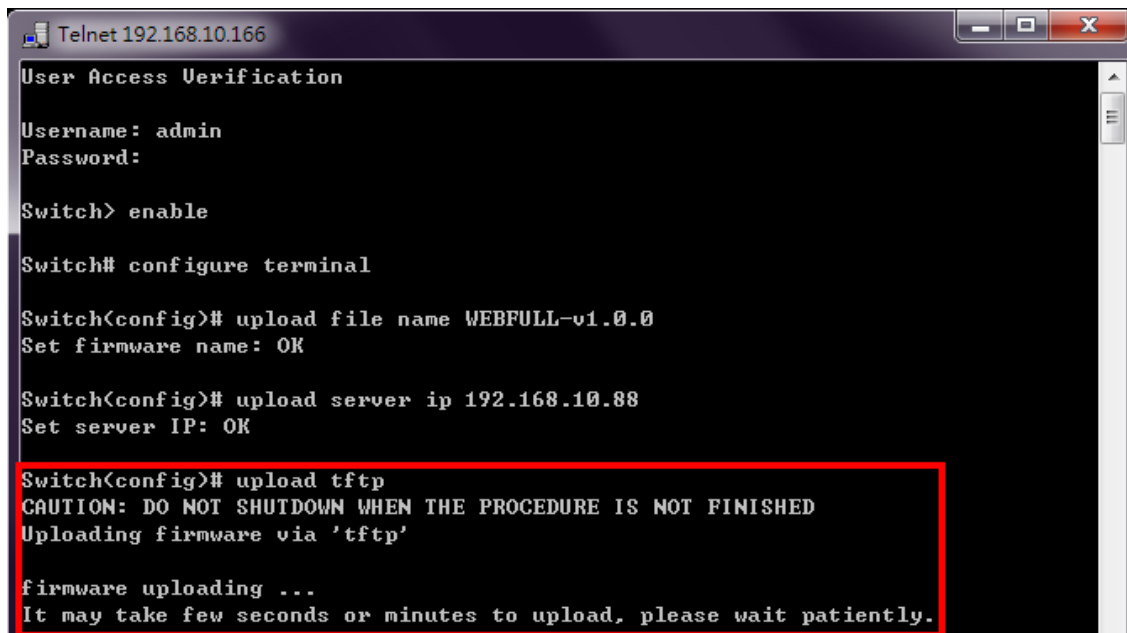

```

Telnet 192.168.10.166
User Access Verification

Username: admin
Password:

Switch> enable

Switch# configure terminal

Switch(config)# upload file name WEBFULL-v1.0.0
Set firmware name: OK

Switch(config)# upload server ip 192.168.10.88
Set server IP: OK

Switch(config)# upload tftp
CAUTION: DO NOT SHUTDOWN WHEN THE PROCEDURE IS NOT FINISHED
Uploading firmware via 'tftp'

firmware uploading ...
It may take few seconds or minutes to upload, please wait patiently.
  
```

6. After uploading, the system will **verify** the uploaded file. If the verification passes, the new firmware file will be installed. Ensure the system is **powered on** and the system will **reboot** automatically after the firmware is completely installed.

```

Telnet 192.168.10.166
verifying firmware ...
It may take 5 - 6 seconds to complete, please wait patiently.
verified OK!

decompressing and extracting ...
It may take 10 - 20 seconds to complete, please wait patiently.
decompression OK!

Start Upgrading Kernel ...
Erasing blocks: 97/97 <100%>
Writing data: 6145k/0k <100%>
Verifying data: 6145k/0k <100%>

Start Upgrading Rootfs ...
libscan: scanning eraseblock 839 -- 100 % complete
ubiformat: 839 eraseblocks have valid erase counter, mean value is 58
ubiformat: 1 bad eraseblocks found, numbers: 170
ubiformat: flashing eraseblock 274 -- 100 % complete
9 -- 100 % complete   eraseblock 838 -- 99 % complete

finished!
System is going to reboot ...


```

FIRMWARE UPGRADE VIA CLI – WGET

“Wget” uses the **HTTP** to transmit the file to the switch. Users have to establish a **HTTP Server** such as “[Apache](#)” and upload the firmware file to the HTTP Server.

1. Assume there is a HTTP Server existed whose IP address is “**192.168.1.9**” and the firmware file named **WEBFULL-v1.0.0** is uploaded.
2. Make sure the link between the switch and the server is connected. We can ping the IP address of the server from the switch by using the command “**ip ping [IP_ADDRESS]**”.
3. Assign the **firmware file name** by using “**upload file name WEBFULL-v1.0.0**”.
4. Assign the **Wget Server IP address** by using “**upload server ip 192.168.1.9**”.

If the command is completely configured, the system will display “**OK**”.

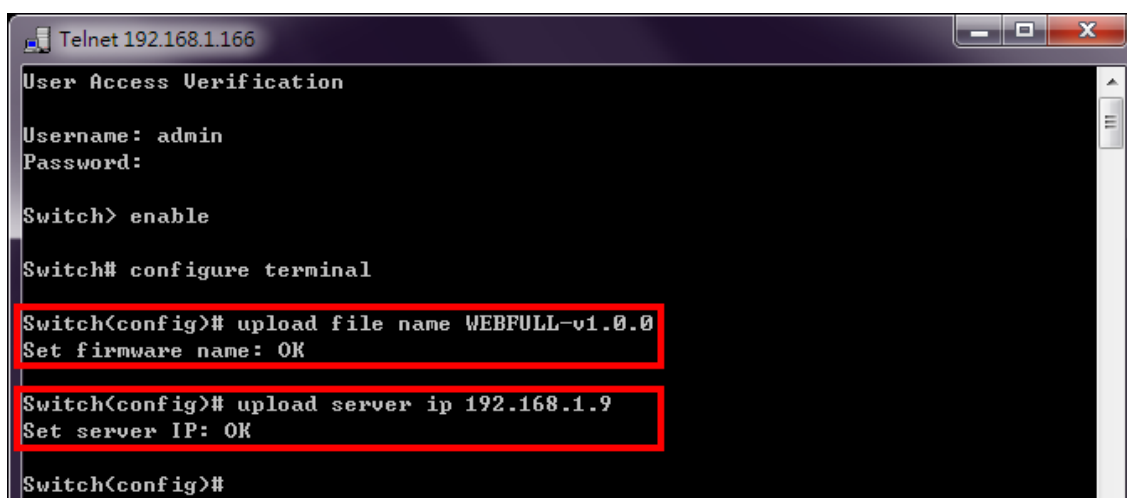


```

Telnet 192.168.1.166
User Access Verification
Username: admin
Password:

Switch> enable
Switch# configure terminal
Switch(config)# upload file name WEBFULL-v1.0.0
Set firmware name: OK
Switch(config)# upload server ip 192.168.1.9
Set server IP: OK
Switch(config)#
  
```

5. Start to upgrade the firmware file by using “**upload wget**”. The system starts to upload the assigned file by HTTP. This takes a few seconds or minutes.

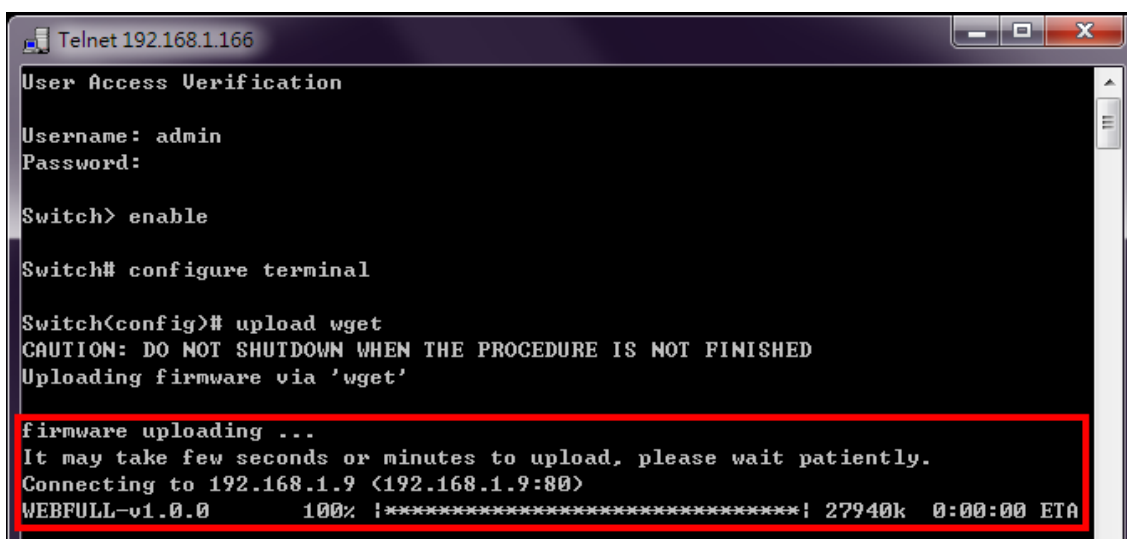

```

Telnet 192.168.1.166
User Access Verification
Username: admin
Password:

Switch> enable
Switch# configure terminal
Switch(config)# upload wget
CAUTION: DO NOT SHUTDOWN WHEN THE PROCEDURE IS NOT FINISHED
Uploading firmware via 'wget'

firmware uploading ...
It may take few seconds or minutes to upload, please wait patiently.
Connecting to 192.168.1.9 (192.168.1.9:80)
WEBFULL-v1.0.0      100% !*****! 27940k  0:00:00 ETA
  
```

6. Once the uploading is complete, the system will **verify** the uploaded file. If the verification passes, the new firmware file will be installed. Ensure to keep the system **powered on** and the system will **reboot** automatically after the firmware is completely installed.

```

Telnet 192.168.1.166
verifying firmware ...
It may take 5 - 6 seconds to complete, please wait patiently.
verified OK!

decompressing and extracting ...
It may take 10 - 20 seconds to complete, please wait patiently.
decompression OK!

Start Upgrading Kernel ...
Erasing blocks: 97/97 <100%>
Writing data: 6145k/0k <100%>
Verifying data: 6145k/0k <100%>

Start Upgrading Rootfs ...
libscan: scanning eraseblock 839 -- 100 % complete
ubiformat: 839 eraseblocks have valid erase counter, mean value is 58
ubiformat: 1 bad eraseblocks found, numbers: 170
ubiformat: flashing eraseblock 274 -- 100 % complete
9 -- 100 % complete   eraseblock 838 -- 99 % complete

finished!
System is going to reboot ...

```

FIRMWARE UPGRADE VIA CLI – USB

Check if the firmware file is saved in the USB and the USB stick is inserted in the USB part of the switch before upgrading the firmware file.

1. Save the firmware file to the USB device and insert the USB stick to the USB port.
2. Use “copy usb firmware [FILE_NAME]” to upgrade the system via USB.

```

Telnet 192.168.10.166
User Access Verification

Username: admin
Password:

Switch> enable

Switch# configure terminal

Switch(config)# copy usb firmware WEBFULL-v1.0.0
Start FW Install.....?

```

3. After the installation is complete, the system will reboot automatically.

Note: The file system of USB must be FAT32.

COMMAND GROUPS

The following are the commands that the users can use in the CLI mode. Please check if the **mode** is correct before issuing the command.

AUTHENTICATION GROUP

Command	Explanation	Mode
login authentication [tacacs+ radius]	Set login authentication method	Configure
logout	Disconnect	Configure
radius-server host [IP_ADDR]	Set IP address of RADIUS server	Configure
radius-server key [SHARED_KEY]	Set specific characters for authentication verification	Configure
radius-server port [1-65535]	Set communication port of RADIUS server	Configure
radius-server retransmit [1-1000]	Set the number of times a request re-sending to RADIUS server	Configure
radius-server timeout [1-1000]	Set the timeout period to wait for RADIUS server response	Configure
tacacs-server host [IP_ADDR]	Set IP address of TACASC+ server	Configure
tacacs-server key [SHARED_KEY]	Set specific characters for authentication verification	Configure
tacacs-server port [1-65535]	Set communication port of TACASC+ server	Configure
tacacs-server timeout [1-1000]	Set the timeout period to wait for TACASC+ server response	Configure
username [USER_ID] [PASSWORD]	Configure username and password	Configure
username-ro [USER_ID] [PASSWORD]	Configure read only username and password	Configure
show login authentication	Display login authentication method	Configure
show radius-server host	Display IP address of RADIUS server	Configure
show radius-server key	Display specific characters for authentication verification	Configure
show radius-server port	Display communication port of RADIUS server	Configure
show radius-server retransmit	Display the number of times a request is resent	Configure
show radius-server timeout	Display the timeout period to wait for RADIUS server response	Configure
show tacacs-server host	Display IP address of the server	Configure
show tacacs-server key	Display specific characters for authentication verification	Configure
show tacacs-server port	Display communication port of the server	Configure
show tacacs-server timeout	Display the timeout period to wait for the server response	Configure
show username	Display admin ID	Configure
show username-ro	Display read only user ID	Configure

no login authentication	Default Login authentication method	Configure
no radius-server host	Default IP address of the server	Configure
no radius-server key	Default specific characters for authentication verification	Configure
no radius-server port	Default communication port of the server	Configure
no radius-server retransmit	Default the number of times a request is resent	Configure
no radius-server timeout	Default the timeout period to wait for the server response	Configure
no tacacs-server host	Default IP address of TACACS+ server	Configure
no tacacs-server key	Default specific characters for authentication verification	Configure
no tacacs-server port	Default communication port of TACACS+ server	Configure
no tacacs-server timeout	Default the timeout period to wait for TACACS+ server response	Configure
no username	Default username and password	Configure
no username-ro	Default read only username and password	Configure

SSH GROUP

Command	Explanation	Mode
copy host-key-config usb [FILE_NAME]	Backup SSH host key to USB	Configure
copy usb host-key-config [file]	Upload SSH host key config from USB	Configure
download file name [FILE_NAME]	Set downloading file name, default name is host_key.cfg	Configure
download host-key-config	Download current SSH host key config	Configure
download server account [SERVER_ACCOUNT]	Set downloading server account	Configure
download server ip [SERVER_IP]	Set downloading server IP Address	Configure
download server password [SERVER_PASSWORD]	Set downloading server password	Configure
upload host-key-config wget [file]	Upload SSH host key config from Localhost	Configure
show ssh host-key	Display SSH host key	Configure

SYSTEM GROUP

Command	Explanation	Mode
erase startup-config	Reset to factory default and reboot	Configure
erase startup-config keep-ip	Reset to factory default except IP	Configure
erase startup-config keep-ip-user	Reset to factory default except IP and USER	Configure
erase startup-config keep-user	Reset to factory default except USER ID/PASS	Configure
exec-timeout [MINUTE] [SECOND]	Set idle timeout [MINUTE] [SECOND]	Configure
hostname [HOSTNAME]	Set Switch Host Name	Configure

reboot	Reboot the switch	Configure
system contact [CONTACT]	Set system contact	Configure
system description [SYS_DESCRIPTION]	Set device description	Configure
system location [LOCATION]	Set device location	Configure
show exec-timeout	Display idle timeout	Configure
show hostname	Display Switch Host Name	Configure
show environment power [1 2]	Display power 1/2 status	Configure
show event status relay	Display relay status	Configure
show system contact	Display system contact	Configure
show system description	Display system description	Configure
show system firmware-date	Display system release time	Configure
show system location	Display system location	Configure
show system mac	Display system MAC address	Configure
show system uptime	Display system uptime	Configure
show system version firmware	Display system version	Configure
show transceiver ddm	Display transceiver DDM information	Interface
show transceiver info	Display transceiver information	Interface
show transceiver raw	Display transceiver raw data	Interface
show username	Display admin ID	Configure
no exec-timeout	Default idle timeout	Configure
no hostname	Default Switch Host Name	Configure
no system contact	Clear system contact	Configure
no system description	Clear device description	Configure
no system location	Clear device location	Configure
no username	Default username and password	Configure

SERVICE CONTROL GROUP

Command	Explanation	Mode
service [http https ssh telnet console reset-button] enable	Enable service http, https, ssh, telnet, console port, or reset button	Configure
show service [http https ssh telnet console reset-button]	Display service http, https, ssh, telnet, console port, or reset button state	Configure
no service [http https ssh telnet console reset-button]	Disable service http, https, ssh, telnet, console port, or reset button	Configure

IPv4 GROUP

Command	Explanation	Mode
ip address [IP_ADDR] [MASK]	Set IPv4 address and netmask	VLAN
ip loopback-address [IP_ADDR] [NETMASK]	Set Loopback Address	Configure

ip name-server [NAME_SERVER_IP]	Set Domain Name-Server	Configure
ip ping [IPV4_ADDR] [<size PKG_SIZ> <repeat PKG_CNT>]	Issue an IPv4 ping command	Configure
show ip address	Display Host address of IPv4	VLAN
show ip loopback-address	Display Loopback address of IPv4	Configure
show ip name-server	Display Domain Name-Server	Configure
no ip address	Delete IPv4 address	VLAN
no ip loopback-address	Delete Loopback Address	Configure
no ip name-server	Clear the domain name-server	Configure

IPv6 GROUP

Command	Explanation	Mode
ipv6 address [X:X::X:X/<PREFIX_LEN>]	Set VLAN IPv6 Address	VLAN
ipv6 enable	Enable IPv6 protocol	Configure
ipv6 ping [IPV6_ADDR] [<size PKG_SIZ> <repeat PKG_CNT>]	Issue an IPv6 ping command	Configure
show ipv6	Display IPv6 protocol state	Configure
show vlan ipv6	Display VLAN IPv4 Address Table	Configure
no ipv6	Disable IPv6 protocol	Configure
no ipv6 address [IPV6_ADDR/PREFIX_LEN]	Delete IPv6 address	VLAN

TIME GROUP

Command	Explanation	Mode
clock time [hh:mm:ss] [day] [month] [year]	Configure time	Configure
clock timezone [AREA] [CITY]	Configure time zone	Configure
ntp client sync [minute hour day month year] [NUMBER]	Configure NTP client sync	Configure
ntp client timeserver1 [SERVER_IP/URL]	Configure NTP client time server 1	Configure
ntp client timeserver2 [SERVER_IP/URL]	Configure NTP client time server 2	Configure
ntp time update	Configure NTP time update	Configure
show clock time	Show time	Configure
show clock timezone	Show timezone	Configure
show ntp client sync	Show sync time	Configure
show ntp client timeserver1	Show NTP server 1 configuration	Configure
show ntp client timeserver2	Show NTP server 2 configuration	Configure
no clock timezone	Remove timezone	Configure
no ntp client sync	Remove NTP sync time	Configure
no ntp client timeserver1	Remove NTP time server 1 configuration	Configure
no ntp client timeserver2	Remove NTP time server 2 configuration	Configure

PTP GROUP

Command	Explanation	Mode
ptp announce interval [-1 to 7]	Set PTP announce interval, the interval is expressed as log 2 . i.e. -1 is 0.5s, 0 is 1s.	Configure
ptp announce timeout [2-255]	Set PTP announce timeout	Configure
ptp disable	Disable PTP	Configure
ptp domain [0-127]	Set PTP domain number	Configure
ptp enable	Enable PTP	Configure
ptp interface1	Set the interface to master of boundary clock mode	Configure
ptp interface2	Set the interface to slave of boundary clock mode	Configure
ptp mode [m(master) s(slave) b(boundary clock)]	Set PTP mode	
ptp period [0-20]	Set PTP timeout periods	Configure
ptp priority1 [0-248]	Set PTP priority1	Configure
ptp priority2 [0-248]	Set PTP priority2	Configure
ptp sync interval [-7 to 7]	Set PTP sync interval, the interval is expressed as log 2 . i.e. -1 is 0.5s, 0 is 1s.	Configure
show ptp announce interval	Display PTP announce interval	Configure
show ptp announce timeout	Display PTP announce timeout	Configure
show ptp clock	Display PTP sync information	Configure
show ptp domain	Display PTP domain number	Configure
show ptp enable	Display PTP status	Configure
show ptp interface1	Display PTP interface1	Configure
show ptp interface2	Display PTP interface2	Configure
show ptp mode	Display PTP mode	Configure
show ptp period	Display PTP timeout periods	Configure
show ptp priority1	Display PTP priority1	Configure
show ptp priority2	Display PTP priority2	Configure
show ptp sync interval	Display PTP sync interval	Configure
no ptp announce interval	Default PTP announce interval	Configure
no ptp announce timeout	Default PTP announce timeout	Configure
no ptp domain	Default PTP domain number	Configure
no ptp interface1	Default PTP interface1	Configure
no ptp interface2	Default PTP interface2	Configure
no ptp mode	Default PTP mode	Configure
no ptp period	Default PTP timeout periods	Configure

no ptp priority1	Default PTP priority1	Configure
no ptp priority2	Default PTP priority2	Configure
no ptp sync interval	Default PTP sync interval	Configure

STP GROUP

Command	Explanation	Mode
spanning-tree forward-time [4-30]	Set STP forward time	Configure
spanning-tree hello-time [1-10]	Set STP hello time	Configure
spanning-tree max-age [6-40]	Set max age	Configure
spanning-tree mode [rstp]	Set STP mode as [RSTP]	Configure
spanning-tree mst instance [1-15] vlan [VLAN_LIST]	Set vlan group for specific MSTP instance	Configure
spanning-tree mst name [NAME]	Set MSTP name	Configure
spanning-tree mst revision [0-65535]	Set MSTP revision	Configure
spanning-tree mst [1-15] priority [0-61440]	Set priority for specific MSTP instance	Configure
spanning-tree priority [0-61440]	Set STP priority	Configure
spanning-tree cost [0-200000000]	Configure STP cost	Interface
spanning-tree edge [admin-edge admin-non-edge]	Configure STP edge	Interface
spanning-tree link-type [point-to-multiple point-to-point]	Configure STP link type on port	Interface
spanning-tree mst [1-15] cost [0-200000000]	Configure port cost for specific MSTP instance	Interface
spanning-tree mst [1-15] port-priority [0-200000000]	Configure port priority for specific MSTP instance	Interface
spanning-tree port-priority [0-240]	Configure STP port priority	Interface
spanning-tree stp disable	Disable Spanning Tree Protocol (STP) on port	Interface
show spanning-tree forward-time	Show STP forward time	Configure
show spanning-tree hello-time	Show STP hello time	Configure
show spanning-tree max-age	Show STP max age	Configure
show spanning-tree mode	Show Spanning Tree mode (RSTP or disable)	Configure
show spanning-tree mst instance [1-15] vlan	Show vlan group for specific MSTP instance	Configure
show spanning-tree mst name	Show MSTP name	Configure
show spanning-tree mst revision	Show MSTP revision	Configure
show spanning-tree mst [1-15] priority	Show priority for specific MSTP instance	Configure
show spanning-tree mst [1-15] status	Show bridge status for specific MSTP instance	Configure
show spanning-tree priority	Show STP priority	Configure
show spanning-tree rstp-status	Show Spanning Tree rstp status	Configure
show spanning-tree cost	Show STP cost	Interface

show spanning-tree edge	Show STP auto edge	Interface
show spanning-tree link-type	Show STP link type	Interface
show spanning-tree mst [1-15] cost	Show port cost for specific MSTP instance	Interface
show spanning-tree mst [1-15] port-priority	Show port priority for specific MSTP instance	Interface
show spanning-tree port-priority	Show STP port priority	Interface
show spanning-tree stp	Show STP activated status on port	Interface
no spanning-tree forward-time	Remove STP forward time configuration	Configure
no spanning-tree hello-time	Remove STP hello time configuration	Configure
no spanning-tree max-age	Remove STP max age configuration	Configure
no spanning-tree mode	Disable STP configuration	Configure
no spanning-tree priority	Remove STP priority configuration	Configure
no spanning-tree cost	Remove STP cost configuration	Interface
no spanning-tree edge	Remove auto edge configuration	Interface
no spanning-tree link-type	Remove link type configuration	Interface
no spanning-tree mst [1-15] cost	Remove port cost for specific MSTP instance	Interface
no spanning-tree mst [1-15] port-priority	Remove port priority for specific MSTP instance	Interface
no spanning-tree port-priority	Remove STP port priority configuration	Interface
no spanning-tree stp	Enable STP on port	Interface

ERPS GROUP

Command	Explanation	Mode
ethernet redundancy erps-ring [1 2 3]	Ethernet Ring Protection Switching (ERPS) mode	Configure
aps-channel [1 - 4094]	Set APS channel	ERPS
disable	Disable ERPS function	ERPS
enable	Enable ERPS function	ERPS
erps-ring [1 2 3]	Change to Other ERPS Ring	ERPS
ext-command clear	Extended ERPS command - Clear	ERPS
ext-command fs	Extended ERPS command – Forced Switch	ERPS
ext-command ms	Extended ERPS command – Manual Switch	ERPS
id [1 - 239]	Set Ring ID	ERPS
mel [0 - 7]	ERPS mel	ERPS
revertive	Set as revertive mode	ERPS
ring-port 0 [1(lan1) - N(lanN)]	Mapping ERPS ring port0 to switch port	ERPS
ring-port 1 [1(lan1) - N(lanN)]	Mapping ERPS ring port1 to switch port	ERPS
role port0 [o(owner) n(neigh) i(interconn)]	Set role on ring port0	ERPS
role port1 [o(owner) n(neigh) i(interconn)]	Set role on ring port1	ERPS
timer guard [10 - 2000]	Set guard timer interval	ERPS

timer hold-off [0 - 10000]	Set hold-off timer interval	ERPS
timer wtr [1 - 12]	Set WTR timer interval	ERPS
type [m(major-ring) s(sub-ring)]	Set type as Major-Ring or Sub-Ring	ERPS
virtual-channel major-ring channel-id [1-4094]	Set virtual channel for ERPS Ring	ERPS
virtual-channel sub-ring set	Set virtual channel for ERPS Sub-ring	ERPS
show config	Displays ERPS configuration	ERPS
show port status	Displays ERPS ring port status	ERPS
show status	Displays ERPS status	ERPS
no aps-channel	Default ERPS aps-channel	ERPS
no id	Default Ring ID as default	ERPS
no revertive	Default mode non-revertive	ERPS
no ring-port 0	Default ring port0 as lan1	ERPS
no ring-port 1	Default ring port1 as lan2	ERPS
no role port0	Default role of ring port0 as none	ERPS
no role port1	Default role of ring port1 as none	ERPS
no timer guard	Default guard timer	ERPS
no timer hold-off	Default hold-off timer	ERPS
no timer wtr	Default wtr timer	ERPS
no type	Default ring type as Major-Ring	ERPS
no virtual-channel major-ring channel-id	Default virtual channel as ERPS Major Ring's aps-channell	ERPS
no virtual-channel sub-ring set	Default virtual channel for ERPS Sub-ring as None	ERPS

MRP GROUP

Command	Explanation	Mode
ethernet redundancy mrp instance-mode [1]	Media Redundancy Protocol (MRP) mode	Configure
advanced-mode [enable disable]	Enable/Disable MRP Advanced Mode	MRP
domain-id [DOMAIN_ID]	Set MRP Domain-id, the format is 16 bytes in decimal notaion	MRP
name [DOMAIN_NAME]	Set MRP Domain Name	MRP
operation [enable disable]	Enable/Disable MRP Protocol	MRP
port 1 [1(lan1) - N(lanN)]	Set MRP ring-port 1 ID	MRP
port 2 [1(lan1) - N(lanN)]	Set MRP ring-port 2 ID	MRP
recovery-delay [500 200]	Set MRP Recovery Delay (unit: ms)	MRP
role [m(manager) c(client)]	Set MRP Role to MRM(manager) or MRC(client)	MRP
show advanced-mode	Display MRP Advanced-mode	MRP
show config	Display MRP Domain Config	MRP
show domain-id	Display MRP Domain ID	MRP

show name	Display MRP Domain Name	MRP
show operation	Display MRP Operation Status	MRP
show port [1 2]	Display MRP ring-port [1 2] ID	MRP
show recovery-delay	Display MRP Recovery Delay	MRP
show role	Display MRP Domain Expected Role	MRP
show summary	Display MRP Domain Summary	MRP
no domain-id	Default MRP Domain ID	MRP
no name	Clear MRP Domain Name	MRP
no port [1 2]	Default MRP ring-port [1 2] ID	MRP
no recovery-delay	Default MRP Recovery Delay	MRP
no role	Default MRP Domain role	MRP

SNMP GROUP

Command	Explanation	Mode
snmp server community ro [COMMUNITY]	Set v1, v2c snmp server read-only community	Configure
snmp server community rw [COMMUNITY]	Set v1, v2c snmp server read-write community	Configure
snmp server enable	Enable snmp server	Configure
snmp server enable v1-v2c-only	Enable snmp v1 and v2c	Configure
snmp server enable v3-only	Enable snmp v3 command only	Configure
snmp server v3 auth admin [md5 sha] [PASSWORD]	Set SNMPv3 admin authentication type	Configure
snmp server v3 auth user [md5 sha] [PASSWORD]	Set SNMPv3 user authentication type	Configure
snmp server v3 encryption admin [des aes] [PASSWORD]	Set SNMPv3 admin encryption type	Configure
snmp server v3 encryption user [des aes] [PASSWORD]	Set SNMPv3 user encryption type	Configure
snmp server v3 level admin [auth noauth priv]	Set SNMPv3 admin security level	Configure
snmp server v3 level user [auth noauth priv]	Set SNMPv3 user security level	Configure
snmp trap community [COMMUNITY]	Set v1, v2c snmp trap community	Configure
snmp trap host1 [TRAP_HOST_IP]	Set snmp trap host 1 IP address	Configure
snmp trap host2 [TRAP_HOST_IP]	Set snmp trap host 2 IP address	Configure
snmp trap inform retry [1-100]	Set snmp inform retry times	Configure
snmp trap inform timeout [1-300]	Set snmp inform timeout	Configure
snmp trap v3 auth [sha md5] [PASSWORD]	Set SNMPv3 authentication type: md5 or sha	Configure
snmp trap v3 encryption [des aes]	Set SNMPv3 encryption type: des or aes	Configure

[PASSWORD]		
snmp trap v3 engine-ID [ENGINE_ID]	Set snmp trap engine ID	Configure
snmp trap v3 level [auth noauth priv]	Set SNMPv3 trap security level	Configure
snmp trap v3 user [USER_ID]	Set SNMPv3 trap user	Configure
snmp trap version [1 2c trap 2c inform 3 trap 3 inform]	Set snmp trap version and type	Configure
show snmp server	Display snmp server status	Configure
show snmp server community ro	Display snmp server read only community	Configure
show snmp server community rw	Display snmp server writable community	Configure
show snmp server v3 auth admin	Display SNMPv3 admin authentication type and passphrase	Configure
show snmp server v3 auth user	Display SNMPv3 user authentication type and passphrase	Configure
show snmp server v3 encryption admin	Display SNMPv3 admin encryption type and passphrase	Configure
show snmp server v3 encryption user	Display SNMPv3 user encryption type and passphrase	Configure
show snmp server v3 level admin	Display SNMPv3 admin security level	Configure
show snmp server v3 level user	Display SNMPv3 user security level	Configure
show snmp trap community	Display snmp trap community	Configure
show snmp trap host1	Display snmp trap host 1	Configure
show snmp trap host2	Display snmp trap host 2	Configure
show snmp trap inform retry	Display snmp inform retry times	Configure
show snmp trap inform timeout	Display snmp inform timeout	Configure
show snmp trap v3 auth	Display SNMPv3 authentication type and passphrase	Configure
show snmp trap v3 encryption	Display SNMPv3 encryption type and passphrase	Configure
show snmp trap v3 engine-ID	Display snmp trap engine ID	Configure
show snmp trap v3 level	Display SNMPv3 trap security level	Configure
show snmp trap v3 user	Display SNMPv3 trap user	Configure
show snmp trap version	Display snmp trap version and type	Configure
no snmp server	Disable snmp server	Configure
no snmp server community ro	Default ro-community name	Configure
no snmp server community rw	Default rw-community name	Configure
no snmp server v3 auth admin	Default SNMPv3 admin authentication type	Configure
no snmp server v3 auth user	Default SNMPv3 user authentication type	Configure
no snmp server v3 encryption admin	Default SNMPv3 admin encryption type	Configure
no snmp server v3 encryption user	Default SNMPv3 user encryption type	Configure
no snmp server v3 level admin	Default SNMPv3 admin security level	Configure

no snmp server v3 level user	Default SNMPv3 user security level	Configure
no snmp trap community	Default snmp trap community	Configure
no snmp trap host1	Default snmp trap host 1	Configure
no snmp trap host2	Default snmp trap host 2	Configure
no snmp trap inform retry	Default snmp inform retry times	Configure
no snmp trap inform timeout	Default snmp inform timeout	Configure
no snmp trap v3 auth	Default SNMPv3 authentication type and passphrase	Configure
no snmp trap v3 encryption	Default SNMPv3 encryption type and passphrase	Configure
no snmp trap v3 engine-ID	Default snmp trap engine ID	Configure
no snmp trap v3 level	Default SNMPv3 trap security level	Configure
no snmp trap v3 user	Default SNMPv3 trap user	Configure
no snmp trap version	Default snmp trap version	Configure

DHCP GROUP

Command	Explanation	Mode
boot host dhcp	Directs the system to get an IP address	Configure
dhcp relay information option	Set DHCP-relay option	Configure
dhcp relay server [server_number: 1-4] [server_IP]	Set DHCP-relay server [1-4] IP	Configure
dhcp relay untrust	Set DHCP-relay untrusted port	Interface
dhcp server binding [bind_ID: 1 - 32] [MAC] [IP_TO_BIND]	Set binding IP and MAC of DHCP	Configure
dhcp server default-gateway [IP_ADDR]	Set default-gateway IP for DHCP client	Configure
dhcp server included-address [START_OF_IP] [END_OF_IP]	Set IP range for its client	Configure
dhcp server lease-time [60-2592000]	Set DHCP server lease time	Configure
dhcp server name-server [IP_ADDR]	Set name-server address for DHCP client	Configure
dhcp service relay enable	Enable DHCP relay	Configure
dhcp service server enable	Enable DHCP server	Configure
show boot host dhcp	Display DHCP client state	Configure
show dhcp relay information option	Display DHCP relay option	Configure
show dhcp relay server [server_number: 1-4]	Display DHCP relay address	Configure
show dhcp relay untrust	Display DHCP untrusted port status	Interface
show dhcp server binding	Display all DHCP bounding entries	Configure
show dhcp server default-gateway	Display DHCP default-gateway IP	Configure

show dhcp server included-address	Display DHCP included IP range	Configure
show dhcp server lease	Display DHCP lease entries	Configure
show dhcp server lease-time	Display DHCP server lease time	Configure
show dhcp server name-server	Display DHCP name-server	Configure
show dhcp server status	Display DHCP server status	Configure
show dhcp service relay	Display DHCP relay agent status	Configure
show dhcp service server	Display DHCP server status	Configure
no boot host dhcp	Disable DHCP client	Configure
no dhcp relay information option	Disable DHCP relay option	Configure
no dhcp relay server [server_number: 1-4]	Remove DHCP relay server [1-4] IP	Configure
no dhcp relay untrust	Default port as trusted	Interface
no dhcp server binding [bind_ID: 1-32]	Remove DHCP bounding IP and MAC	Configure
no dhcp server default-gateway	Remove DHCP default-gateway IP	Configure
no dhcp server included-address	Remove DHCP included IP range	Configure
no dhcp server lease-time	Remove DHCP lease time	Configure
no dhcp server name-server	Remove DHCP name-server	Configure
no dhcp service relay	Disable DHCP relay	Configure
no dhcp service server	Disable DHCP server	Configure

INDUSTRIAL PROTOCOLS GROUP

Command	Explanation	Mode
ethernet-ip enable	Enable EtherNet/IP Protocol	Configure
modbus tcp enable	Enable Modbus/TCP Protocol	Configure
profinet enable	Enable PROFINET Protocol	Configure
show ethernet-ip	Show EtherNet/IP status	Configure
show modbus tcp	Show Modbus/TCP status	Configure
show profinet	Show PROFINET status	Configure
no ethernet-ip	Disable EtherNet/IP Protocol	Configure
no modbus tcp	Disable Modbus/TCP Protocol	Configure
no profinet	Disable PROFINET Protocol	Configure

UPnP GROUP

Command	Explanation	Mode
upnp advertisement interval [300-86400]	Set UPnP advertisement interval	Configure
upnp enable	Enable Universal Plug and Play (UPnP)	Configure
show upnp	Display Universal Plug and Play (UPnP) state	Configure

show upnp advertisement interval	Display UPnP advertisement interval	Configure
no upnp	Disable Universal Plug and Play (UPnP)	Configure
no upnp advertisement interval	Default UPnP advertisement interval	Configure

PORT GROUP

Command	Explanation	Mode
eee port-enable	802.3az (EEE) port enable	Interface
flowcontrol [on off]	Configure port's flow-control to response a pause frame	Interface
name [PORT_NAME]	Set interface name	Interface
shutdown	Disable port	Interface
speed_duplex [10 100] [full half]	Configure port's speed and duplex	Interface
show interface all link summary	To display interface link status globally	Configure
show administrate	To display port's admin state	Interface
show eee port-all	Display EEE port-all status	Configure
show eee-info	Display Port EEE statistic information	Interface
show flowcontrol	Display port's flow-control state	Interface
show link duplex	To display port's duplex	Interface
show link rx	To display port's Rx_Bytes	Interface
show link speed	To display port's speed	Interface
show link state	To display port's link state	Interface
show link summary	To display port's link summary	Interface
show link tx	To display port's Tx_Bytes	Interface
show name	To display port's name	Interface
show speed_duplex	To display port's speed and duplex	Interface
show transceiver	Transceiver information	Interface
no eee port-enable	802.3az (EEE) port disable	Interface
no flowcontrol	Default flow-control as Auto mode	Interface
no name	Remove port's name	Interface
no shutdown	Enable port	Interface
no speed_duplex	Default port speed-duplex as Auto mode	Interface

POE GROUP (PoE Model Only)

Command	Explanation	Mode
power inline budget [1-240]	Power PoE budget	Configure
power inline mode-config disable	Disable PoE on port	Interface

power inline mode-config enable	Enable PoE on port	Interface
power inline mode-config force	Force PoE powered on port	Interface
power inline priority [1-3]	Set PoE port priority on port; 1:high, 2:middle, 3:low	Interface
keepalive enable	Enable PoE keepalive	Interface
keepalive hold-time	Configure PoE keepalive power cycle hold-time	Interface
keepalive ip	Configure IP for PoE keepalive	Interface
keepalive time	Configure PoE keepalive cycle time	Interface
schedule enable	Enable one port PoE schedule	Interface
schedule [Sunday-Saturday] open-time [time]	Configure PoE schedule open time on one day	Interface
show power inline budget	Display PoE power budget	Configure
show power inline detail-code	Display PoE status code, refer to “PoE Debug Code” for more explanation	Interface
show power inline operation	Display All PoE ports operation status	Configure
show power inline status	Display All PoE ports detail status	Configure
show power inline status	Display PoE status for specific port	Interface
show power inline temperature	Display temperature of PoE controller	Configure
show keepalive table	Display All PoE keepalive info	Configure
show power inline status	Display PoE status	Interface
show keepalive	Show PoE keepalive status	Interface
show keepalive hold-time	Show PoE keepalive hold-time	Interface
show keepalive ip	Show IP for PoE keepalive	Interface
show keepalive time	Show PoE keepalive cycle time	Interface
show schedule	Disable Universal Plug and Play (UPnP)	Interface
show schedule [Sunday-Saturday] open-time	Show open time of POE schedule on one day	Interface
show schedule table	Show one port PoE schedule table	Interface
no power inline budget	Default PoE power budget	Configure
no power inline mode-config	Default PoE powered config on port	Interface
no power inline priority	Disable PoE port priority on port	Interface
no keepalive	Disable PoE keepalive	Interface
no keepalive hold-time	Default PoE keepalive power cycle hold-time	Interface
no keepalive ip	Remove IP for PoE keepalive	Interface
no keepalive time	Remove PoE keepalive cycle time	Interface

no schedule	Remove one port PoE schedule	Interface
no schedule [Sunday-Saturday] open-time	Remove PoE schedule on one day	Interface

IGMP SNOOPING GROUP

Command	Explanation	Mode
igmp snooping enable	Enable IGMP snooping	Configure
igmp snooping last-member count [2-10]	Set IGMP last-member-count	Configure
igmp snooping last-member interval [1-25]	Set IGMP last-member-interval	Configure
igmp snooping querier enable	Enable IGMP snooping querier	Configure
igmp snooping query interval [1-3600]	Set IGMP query interval	Configure
igmp snooping query max-respond-time [1-12]	Set IGMP max-query-respond time	Configure
igmp snooping query version [VLAN_ID] [STATE:0 1] [VERSION:1 2 3]	Add IGMP query version entry by VLAN ID. STATE 0: disable; STATE 1: enable	Configure
igmp snooping router-port [PORT_LIST]	Set router port list for multicast	Configure
igmp snooping unknown-multicast [f d r]	Set unknown-multicast action	Configure
show igmp snooping all	Display IGMP settings (summary)	Configure
show igmp snooping mdb	Display IGMP multicast database	Configure
show igmp snooping query-version	Display IGMP Query version by VLAN ID	Configure
show igmp snooping router-port	Display IGMP router port list	Configure
show igmp snooping unknown-multicast	Display unknown-multicast action	Configure
no igmp snooping	Disable IGMP snooping	Configure
no igmp snooping last-member count	Default IGMP Last-Member-Count	Configure
no igmp snooping last-member interval	Default IGMP Last-Member-Interval	Configure
no igmp snooping querier	Disable IGMP querier	Configure
no igmp snooping query interval	Default IGMP query interval	Configure
no igmp snooping query max-respond-time	Default IGMP max-respond-time	Configure
no igmp snooping router-port	Default IGMP router port	Configure
no igmp snooping unknown-multicast	Default unknown-multicast action	Configure

VLAN GROUP

Command	Explanation	Mode
provider ethertype [VALUE_IN_HEX (i.e., 0x88A8)]	Setup EtherType in S-TAG for provider port	Configure
member [untag PORT_LIST] [tag PORT_LIST]	Set VLAN member	VLAN
name [VLAN_NAME]	Set VLAN Name	VLAN
switchport accept [tagged untagged]	Set VLAN acceptance of frame	Interface

switchport mode [d(dot1q-tunnel) c(customer) p(provider) s(specific-provider)]	Configure port type as dot1q-tunnel, Customer, or Service Provider	Interface
switchport pvid [PVID: 1-4094]	Set port VLAN-Id	Interface
show provider ethertype	Display Service Provider EtherType	Configure
show vlan global	Display VLAN Global information	Configure
show member	Display port VLAN member	VLAN
show name	Display VLAN name	VLAN
show switchport accept	Display acceptance of VLAN frame	Interface
show switchport mode	Display VLAN interface port type	Interface
show switchport pvid	Display port VLAN-Id	Interface
no provider ethertype	Default EtherType as 0x88A8 in S-TAG for provider port	Configure
no member	Default VLAN member	VLAN
no name	Default VLAN name	VLAN
no switchport accept	Default acceptance of VLAN frame	Interface
no switchport mode	Default port type as Customer	Interface
no switchport pvid	Default port VLAN-Id	Interface

QoS GROUP

Command	Explanation	Mode
qos fair-queue weight [W0] [W1] [W2] [W3] [W4] [W5] [W6] [W7]	Set WRR Queue Weight	Configure
qos map cos [priority:0-7] to tx-queue [0-7]	Set Cos queue mapping of priority [0-7]	Configure
qos map dscp [0-63] to tx-queue [0-7]	Set DSCP mapping queue	Configure
qos queue-schedule [strict wrr]	Set QoS scheduling type	Configure
qos default cos [0-7]	Set Default Class of Service (COS) value	Interface
qos trust [cos dscp]	Set trust of cos or dscp	Interface
show qos fair-queue weight	Display WRR Queue Weight	Configure
show qos map cos	Display global QoS queue mapping status	Configure
show qos map cos [0-7]	Display QoS queue mapping status of Priority [0-7]	Configure
show qos map dscp	Display global DSCP queue mapping status	Configure
show qos map dscp [0-63]	Display DSCP queue mapping status of class [0-63]	Configure
show qos queue-schedule	Display queue scheduling type	Configure
show qos default cos	Display CoS default value	Interface

show qos trust	Display QoS trust	Interface
no qos fair-queue weight	Default WRR Queue Weight	Configure
no qos map cos [0-7]	Reset Cos queue mapping of priority [0-7]	Configure
no qos map dscp [0-63]	Reset DSCP mapping queue to default	Configure
no qos queue-schedule	Default scheduling type as WRR	Configure
no qos default cos	Reset default CoS to initial value	Interface
no qos trust	Default trust as CoS	Interface

PORT TRUNK GROUP

Command	Explanation	Mode
trunk group [1-8] [static lacp] INTERFACES_LIST	Configure port aggregation group	Configure
show trunk group	Show all trunk groups	Configure
show trunk group [1-8]	Show trunk group [1-8]	Configure
no trunk group [1-8]	Remove trunk group [1-8]	Configure

STORM CONTROL GROUP

Command	Explanation	Mode
storm-control broadcast enable	Enable the broadcast storm control	Configure
storm-control broadcast level [low mid high]	Set the broadcast storm control level	Configure
storm-control multicast enable	Enable the multicast storm control	Configure
storm-control multicast level [low mid high]	Set the multicast storm control level	Configure
storm-control unknown-unicast enable	Enable the unknown-unicast storm control	Configure
storm-control unknown-unicast level [low mid high]	Set the unknown-unicast storm control level	Configure
show storm-control broadcast	Display the broadcast storm control status	Configure
show storm-control broadcast level	Display the broadcast storm control level	Configure
show storm-control multicast	Display the multicast storm control status	Configure
show storm-control multicast level	Display the multicast storm control level	Configure
show storm-control unknown-unicast	Display the unknown-unicast storm control status	Configure
show storm-control unknown-unicast level	Display the unknown-unicast storm control level	Configure
no storm-control broadcast	Disable the broadcast storm control	Configure
no storm-control broadcast level	Default the broadcast storm control to	Configure

	level high	
no storm-control multicast	Disable the multicast storm control	Configure
no storm-control multicast level	Default the multicast storm control to level high	Configure
no storm-control unknown-unicast	Disable the unknown-unicast storm control	Configure
no storm-control unknown-unicast level	Default the unknown-unicast storm control to level high	Configure

STATIC ROUTE GROUP

Command	Explanation	Mode
ip route [IP_ADDR] [NETMASK:0-32] [NEXT_HOP]	Add static routing entry	Configure
ipv6 route [X:X::X:X/M] [X:X::X:X]	Set IPv6 Static Route	Configure
show ip route static	Display static routing entries	Configure
show ipv6 route	Display IPv6 Routing Table	Configure
show ipv6 route static	Display IPv6 Static Routing Table	Configure
no ip route [IP_ADDR] [NETMASK:0-32]	Delete an static routing entry	Configure
no ipv6 route [X:X::X:X/M] [X:X::X:X]	Remove an IPv6 Static Route entry	Configure

OSPFv2 GROUP

Command	Explanation	Mode
ip ospf authentication	Enable OSPF Authentication on this VLAN	VLAN
ip ospf authentication message-digest	Enable OSPF Authentication with MD5 on this VLAN	VLAN
ip ospf authentication-key [AUTH_KEY]	Set OSPF Authentication Password (Key)	VLAN
ip ospf dead-interval [1-65535]	Set OSPF Dead Interval; The default OSPF Dead Interval is 4 times hello interval	VLAN
ip ospf hello-interval [1-65535]	Set OSPF Hello Interval	VLAN
ip ospf message-digest-key [1-8] md5 [AUTH_KEY]	Set OSPF MD5 Authentication Password for KEY ID [1-8]	VLAN
ip ospf metric [1-65535]	Set OSPF Metric	VLAN
router ospf authentication area [AREA_ID]	Enable OSPF Authentication	Configure
router ospf authentication message-digest area [AREA_ID]	Enable MD5 Authentication on specific OSPF Area	Configure
router ospf enable	Enable Global OSPF function	Configure
router ospf network [IP_ADDR]	Set OSPF Network Interface and Area	Configure

[NETMASK:0-32] [AREA_ID]		
router ospf router-id [ROUTER_ID]	Set OSPF Router-ID	Configure
show ip ospf authentication	Display OSPF Authentication on this VLAN	VLAN
show ip ospf authentication-key	Display OSPF Authentication Password (Key)	VLAN
show ip ospf dead-interval	Display OSPF Dead Interval	VLAN
show ip ospf hello-interval	Display OSPF Hello Interval	VLAN
show ip ospf message-digest-key	Display OSPF MD5 Authentication Password (Key)	VLAN
show ip ospf metric	Display OSPF Metric	VLAN
show router ospf	Display OSPF Routing Status	Configure
show router ospf authentication	Display OSPF Authentication Status	Configure
show router ospf mode	Display OSPF Enable/Disable	Configure
show router ospf neighbor	Display OSPF Routing Neighbor	Configure
show router ospf network	Display OSPF Network Interface and Area	Configure
show router ospf router-id	Display OSPF Router-ID	Configure
show router ospf vlan	Display OSPF Vlan Table	Configure
no ip ospf authentication	Disable OSPF Authentication on this VLAN	VLAN
no ip ospf authentication-key	Clear OSPF Authentication Password (Key)	VLAN
no ip ospf dead-interval	Clear OSPF Dead Interval	VLAN
no ip ospf hello-interval	Clear OSPF Hello Interval	VLAN
no ip ospf message-digest-key [1-8]	Remove OSPF MD5 Authentication Password for KEY ID [1-8]	VLAN
no ip ospf metric	Clear OSPF Metric	VLAN
no router ospf	Remove OSPF Routing Protocol Configuration	Configure
no router ospf authentication area [AREA_ID]	Disable OSPF Authentication on specific Area	Configure
no router ospf network [IP_ADDR] [NETMASK:0-32]	Clear OSPF Network Interface	Configure
no router ospf router-id	Clear OSPF Router-ID	Configure

OSPFv3 GROUP

Command	Explanation	Mode
ipv6 ospf6 dead-interval [1-65535]	Set OSPFv3 Dead Interval; The default OSPF Dead Interval is 4 times hello interval	VLAN
ipv6 ospf6 hello-interval [1-65535]	Set OSPFv3 Hello Interval	VLAN
ipv6 ospf6 metric [1-65535]	Set OSPFv3 Metric	VLAN

ipv6 ospf6 network [broadcast point-to-point]	Set OSPFv3 Network-type	VLAN
ipv6 ospf6 priority [0-255]	Set OSPFv3 Priority	VLAN
router ospf6 area [AREA_ID] [X:X::X:X/M]	Set OSPFv3 Area	Configure
router ospf6 enable	Global OSPFv3 On	Configure
router ospf6 router-id [ROUTER_ID]	Set OSPFv3 Router-ID; OSPFv3 router-id is in IP address format: A.B.C.D	Configure
router ospf6 vlan [VLAN_id] [AREA_ID]	Set OSPFv3 interface/Area	Configure
show ipv6 ospf6 interface	Display OSPFv3 Information	Configure
show ipv6 ospf6 dead-interval	Display OSPFv3 Dead Interval	VLAN
show ipv6 ospf6 hello-interval	Display OSPFv3 Hello Interval	VLAN
show ipv6 ospf6 metric	Display OSPFv3 Metric	VLAN
show router ospf6	Display OSPFv3 Routing Status	Configure
show router ospf6 mode	Display OSPFv3 Enable/Disable	Configure
show router ospf6 neighbor	Display OSPFv3 neighbor	Configure
show router ospf6 router-id	Display OSPFv3 Router-ID	Configure
show router ospf6 vlan	Display OSPFv3 VLAN Table	Configure
no router ospf6	Remove OSPFv3 Routing Protocol Configuration	Configure
no router ospf6 vlan [VLAN_id] [AREA_ID]	Remove OSPFv3 interface/area	Configure

RIPv1/V2 GROUP

Command	Explanation	Mode
router rip enable	Enable Global RIP function	Configure
router rip neighbor [IP_ADDR]	Set RIP Neighbors	Configure
router rip network [IP_ADDR] [NETMASK:0-32]	Set RIP Network	Configure
router rip timers [Update] [Time-out] [Garbage]	Set Routing-Table Update, Time-Out, and Garbage Collection Timers Default timer - update timer: 30s, time-out: 180s , garbage: 120s	Configure
router rip version [1 2]	Set RIP Version	Configure
show router rip mode	Display RIP Enable/Disable	Configure
show router rip network	Show RIP Network Interface and Area	Configure
show router rip state	Show RIP Routing Table	Configure
show router rip status	Show RIP Status	Configure
no router rip	Remove RIP Configurations	Configure
no router rip neighbor	Clear RIP Router-ID	Configure

no router rip network [IP_ADDR] [NETMASK:0-32]	Remove RIP Network Interface and Area	Configure
no router rip timers	Clear RIP Timers	Configure
no router rip version	Reset RIP Version	Configure

RIPNG GROUP

Command	Explanation	Mode
router ripng enable	Enable Global RIP function	Configure
router ripng timers [Update] [Time-out] [Garbage]	Set Routing-Table Update, Time-Out, and Garbage Collection Timers Default timer - update timer: 30s, time-out: 180s , garbage: 120s	Configure
Router ripng vlan	Set RIPng Network	Configure
show router ripng mode	Display RIPng Enable/Disable	Configure
show router ripng state	Show RIPng Routing Table	Configure
show router ripng status	Show RIPng Status	Configure
no router ripng	Remove RIPng Routing Protocol Configurations	Configure
no router ripng vlan	Remove RIPng network-interface	Configure

VRRP GROUP

Command	Explanation	Mode
vrrp adv-timer [1-60]	Set Advertise Interval Timer of VRRP	VLAN
vrrp enable	Enable VRRP	VLAN
vrrp group-id [1-255]	Set Virtual Group ID of VRRP	VLAN
vrrp ip-address [Virtual IP address]	Set Virtual Server IP of VRRP	VLAN
vrrp preempt	Enable Preemption Mode of VRRP	VLAN
vrrp priority [1-254]	Set Priority of VRRP	VLAN
show vrrp-config		Configure
show vrrp adv-timer	Display Advertise Interval Timer of VRRP	VLAN
show vrrp all	Display All VRRP Configuration	VLAN
show vrrp group-id	Display Virtual Group ID of VRRP	VLAN
show vrrp ip-address	Display Virtual IP of VRRP	VLAN
show vrrp preempt	Display Preemption Mode of VRRP	VLAN
show vrrp priority	Display Priority of VRRP	VLAN

show vrrp state	Display State of VRRP	VLAN
no vrrp adv-timer	Disable VRRP and Remove Advertise Interval Timer of VRRP	VLAN
no vrrp all	Disable VRRP and Remove All VRRP Configuration	VLAN
no vrrp group-id	Disable VRRP and Remove Virtual Group ID of VRRP	VLAN
no vrrp ip-address	Disable VRRP and Remove Virtual IP of VRRP	VLAN
no vrrp preempt	Disable Preemption Mode of VRRP	VLAN
no vrrp priority	Disable VRRP and Remove Priority of VRRP	VLAN
no vrrp state	Disable VRRP	VLAN

PIM-SM GROUP

Command	Explanation	Mode
ip pim sm enable/disable	Enable PIM-SM function	Configure
ip pim sm join-prune-interval [10-600]	Set PIM join/prune interval	Configure
ip pim sm query interval [30-3600]	Set PIM query interval	Configure
ip pim sm bsr-candidate [VLAN] [priority]	Set BSR-Candidate	Configure
ip pim sm rp-candidate [VLAN] [interval] [priority]	Set RP-Candidate	Configure
show ip pim sm enable/disable	Disable PIM-SM Enable	Configure
show ip pim sm join-prune-interval [10-600]	Disable PIM join/prune interval	Configure
show ip pim sm query interval [30-3600]	Disable PIM query interval	Configure
show ip pim sm bsr-candidate [VLAN] [priority]	Disable BSR-Candidate	Configure
show ip pim sm rp-candidate [VLAN] [interval] [priority]	Disable RP-Candidate	Configure
show ip pim sm status	Disable PIM-SM status	Configure
show ip pim sm neighbor	Disable PIM-SM neighbor	Configure
show ip pim sm route	Disable PIM Multicast Routing Table	Configure

802.1X GROUP

Command	Explanation	Mode
dot1x authentication server [1 2] ip [IP]	Set 802.1X authentication server 1 or 2	Configure

	address	
dot1x authentication server [1 2] port [PORT]	Set 802.1X authentication server 1 or 2 port	Configure
dot1x authentication server [1 2] share-key [KEY]	Set 802.1X authentication server 1 or 2 share-key	Configure
dot1x authentication server type [local radius]	Set 802.1X authentication server type	Configure
dot1x enable	Enable 802.1X protocol	Configure
dot1x local-db [USER] [PASSWORD]	Set 802.1X local user database	Configure
dot1x authenticator enable	Set 802.1X authenticator	Interface
dot1x mode [mac-based port-based]	Set 802.1X mode as 1. MAC-based, 2.Port-based	Interface
dot1x reauthentication enable	Set 802.1X reauthentication	Interface
dot1x reauthentication period [60-65535]	Set 802.1X reauthentication period	Interface
show dot1x	Display 802.1X protocol state	Configure
show dot1x authentication server [1 2] ip	Display 802.1X authentication server 1 or 2 address	Configure
show dot1x authentication server [1 2] port	Display 802.1X authentication server 1 or 2 port	Configure
show dot1x authentication server [1 2] share-key	Display 802.1X authentication server 1 or 2 key	Configure
show dot1x authentication server type	Display 802.1X authentication server type	Configure
show dot1x brief	Display 802.1X information	Configure
show dot1x local-db	Display 802.1X users and password in database	Configure
show dot1x server brief	Display 802.1X RADIUS server	Configure
show dot1x authenticator	Display 802.1X authenticator state	Interface
show dot1x mode	Display 802.1X mode config	Interface
show dot1x reauthentication	Display 802.1X reauthentication state	Interface
show dot1x reauthentication period	Display 802.1X reauthentication period (in sec.)	Interface
no dot1x	Disable 802.1X protocol	Configure
no dot1x authentication server [1 2] ip	Default 802.1X authentication server 1 or 2 address	Configure
no dot1x authentication server [1 2] port	Default 802.1X authentication server 1 or 2 port	Configure
no dot1x authentication server [1 2]	Default 802.1X authentication server 1 or	Configure

share-key	2 share-key	
no dot1x authentication server type	Default 802.1X authentication server type	Configure
no dot1x local-db [USER]	Remove an entry in 802.1X local database	Configure
no dot1x authenticator	Disable 802.1X authenticator	Interface
no dot1x mode	Default 802.1X mode as MAC-based	Interface
no dot1x reauthentication	Disable 802.1X reauthentication	Interface
no dot1x reauthentication period	Default 802.1X reauthentication period	Interface

PORT MIRROR GROUP

Command	Explanation	Mode
mirror destination [DEST_PORT]	Set mirror interface of destination	Configure
mirror enable	Enable port mirror	Configure
mirror source [rx tx both] [PORT_LIST]	Set mirror interface of source	Configure
show mirror	Show port mirror enable/disable state	Configure
show mirror destination	Show port mirror destination configuration	Configure
show mirror source	Show port mirror source configuration	Configure
no mirror	Disable port mirror	Configure
no mirror destination	Delete port mirror Destination configuration	Configure
no mirror source	Delete port mirror Source configuration	Configure

LLDP GROUP

Command	Explanation	Mode
lldp enable	Enable LLDP protocol	Configure
lldp timer [5-32767]	Set LLDP timer	Configure
show lldp neighbor	Display LLDP neighbor	Configure
show lldp neighbor detail	Display LLDP neighbors in detail	Configure
show lldp state	Display LLDP status	Configure
show lldp timer	Display LLDP timer	Configure
no lldp	Disable LLDP protocol	Configure
no lldp timer	Default LLDP timer	Configure

SYSLOG GROUP

Command	Explanation	Mode
syslog local enable	Enable logging to local	Configure
syslog log clear	Clear syslog log	Configure
syslog remote enable	Enable logging to remote	Configure

syslog remote port [PORT]	Set syslog remote server port	Configure
syslog remote server [ADDRESS]	Set syslog remote server address	Configure
syslog usb enable	Enable log to USB device	Configure
show syslog local	Display local logging state	Configure
show syslog log	Display syslog messages	Configure
show syslog remote	Display remote logging state	Configure
show syslog remote port	Display remote server port	Configure
show syslog remote server	Display remote server IP	Configure
show syslog usb	Display USB logging state	Configure
no syslog local	Disable logging to local	Configure
no syslog remote	Disable logging to remote	Configure
no syslog remote port	Default syslog remote server port	Configure
no syslog remote server	Clear syslog remote server address	Configure
no syslog usb	Disable logging to USB	Configure

SMTP GROUP

Command	Explanation	Mode
smtp authentication enable	Enable SMTP authentication	Configure
smtp authentication password [PASSWORD]	Set SMTP password	Configure
smtp authentication username [USER_NAME]	Set SMTP username	Configure
smtp enable	Enable SMTP	Configure
smtp receive [1-4] [RECEIVER_ADDRESS]	Set SMTP receiver [1-4] address	Configure
smtp sender [SMTP_SENDER_ADDRESS]	Set SMTP sender	Configure
smtp server address [SMTP_SERVER_ADDRESS]	Set SMTP server address	Configure
smtp server port [SMTP_SERVER_PORT]	Set SMTP server port	Configure
smtp subject [SUBJECT]	Set SMTP subject	Configure
show smtp authentication state	Display SMTP authentication status	Configure
show smtp authentication username	Display SMTP user name	Configure
show smtp receive [1-4]	Display SMTP receiver [1-4]	Configure
show smtp sender	Display SMTP sender	Configure
show smtp server address	Display SMTP server address	Configure
show smtp server port	Display SMTP server port	Configure
show smtp state	Display SMTP service	Configure
show smtp subject	Display SMTP subject	Configure
no smtp authentication	Disable SMTP authentication	Configure
no smtp authentication password	Clear SMTP password	Configure

no smtp authentication username	Clear SMTP user name	Configure
no smtp	Disable SMTP	Configure
no smtp receive [1-4]	Clear SMTP receiver [1-4]	Configure
no smtp sender	Clear SMTP sender	Configure
no smtp server address	Clear SMTP server	Configure
no smtp server port	Clear SMTP server port	Configure
no smtp subject	Clear SMTP subject	Configure

EVENT GROUP

Command	Explanation	Mode
event alarm ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Register a DDM event of current, Rx power, temperature, Tx power, or voltage	Configure
event alarm digital-input [high low]	Register an event of digital-input	Configure
event alarm interface [lan1-lanN] down	Register an event of Interface DOWN	Configure
event alarm [power1 power2]	Register an event of power 1 or 2 failure	Configure
event smtp auth-failure	Register an event of authentication failure	Configure
event smtp cold-start	Register an event of cold-start	Configure
event smtp ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Register a DDM event of current, Rx power, temperature, Tx power, or voltage	Configure
event smtp digital-input [high low]	Register an event of digital-input	Configure
event smtp interface [lan1-lanN] down	Register an event of Interface DOWN	Configure
event smtp interface [lan1-lanN] up	Register an event of Interface UP	Configure
event smtp [power1 power2]	Register an event of power 1 or 2 failure	Configure
event smtp warm-start	Register an event of warm-start	Configure
event snmptrap auth-failure	Register an event of authentication failure	Configure
event snmptrap cold-start	Register an event of cold-start	Configure
event snmptrap ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Register a DDM event of current, Rx power, temperature, Tx power, or voltage	Configure
event snmptrap digital-input [high low]	Register an event of digital-input	Configure
event snmptrap interface [lan1-lanN] down	Register an event of Interface DOWN	Configure
event snmptrap interface [lan1-lanN] up	Register an event of Interface UP	Configure
event snmptrap [power1 power2]	Register an event of power 1 or 2 failure	Configure
event snmptrap warm-start	Register an event of warm-start	Configure
event syslog auth-failure	Register an event of authentication failure	Configure
event syslog cold-start	Register an event of cold-start	Configure

event syslog ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Register a DDM event of current, Rx power, temperature, Tx power, or voltage	Configure
event syslog digital-input [high low]	Register an event of digital-input	Configure
event syslog interface [lan1-lanN] down	Register an event of Interface DOWN	Configure
event syslog interface [lan1-lanN] up	Register an event of Interface UP	Configure
event syslog [power1 power2]	Register an event of power 1 or 2 failure	Configure
event syslog warm-start	Register an event of warm-start	Configure
show event alarm ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Display current, Rx power, temperature, Tx power, or voltage event registration	Configure
show event alarm digital-input	Display digital-input event registration	Configure
show event alarm interface [lan1-lanN] down	Display interface DOWN event registration	Configure
show event alarm [power1 power2]	Display power 1 or 2 event registration	Configure
show event smtp auth-failure	Display authentication failure event registration	Configure
show event smtp cold-start	Display cold-start event registration	Configure
show event smtp ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Display current, Rx power, temperature, Tx power, or voltage event registration	Configure
show event smtp digital-input	Display digital-input event registration	Configure
show event smtp interface [lan1-lanN] down	Display interface DOWN event registration	Configure
show event smtp interface [lan1-lanN] up	Display interface UP event registration	Configure
show event smtp [power1 power2]	Display power 1 or 2 event registration	Configure
show event smtp warm-start	Display warm-start event registration	Configure
show event snmptrap auth-failure	Display authentication failure event registration	Configure
show event snmptrap cold-start	Display cold-start event registration	Configure
show event snmptrap ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Display current, Rx power, temperature, Tx power, or voltage event registration	Configure
show event snmptrap digital-input	Display digital-input event registration	Configure
show event snmptrap interface [lan1-lanN] down	Display interface DOWN event registration	Configure
show event snmptrap interface [lan1-lanN] up	Display interface UP event registration	Configure
show event snmptrap [power1 power2]	Display power 1 or 2 event registration	Configure
show event snmptrap warm-start	Display warm-start event registration	Configure
show event syslog auth-failure	Display authentication failure event registration	Configure

show event syslog cold-start	Display cold-start event registration	Configure
show event syslog ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Display current, Rx power, temperature, Tx power, or voltage event registration	Configure
show event syslog digital-input	Display digital-input event registration	Configure
show event syslog interface [lan1-lanN] down	Display interface DOWN event registration	Configure
show event syslog interface [lan1-lanN] up	Display interface UP event registration	Configure
show event syslog [power1 power2]	Display power 1 or 2 event registration	Configure
show event syslog warm-start	Display warm-start event registration	Configure
no event alarm ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Unregister a DDM event of current, Rx power, temperature, Tx power, or voltage	Configure
no event alarm digital-input	Unregister an event of digital-input	Configure
no event alarm interface [lan1-lanN] down	Unregister an event of Interface DOWN	Configure
no event alarm [power1 power2]	Unregister an event of power 1 or 2 failure	Configure
no event smtp auth-failure	Unregister an event of authentication failure	Configure
no event smtp cold-start	Unregister an event of cold-start	Configure
no event smtp ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Unregister a DDM event of current, Rx power, temperature, Tx power, or voltage	Configure
no event smtp digital-input	Unregister an event of digital-input	Configure
no event smtp interface [lan1-lanN] down	Unregister an event of Interface DOWN	Configure
no event smtp interface [lan1-lanN] up	Unregister an event of Interface UP	Configure
no event smtp [power1 power2]	Unregister an event of power 1 or 2 failure	Configure
no event smtp warm-start	Unregister an event of warm-start	Configure
no event snmptrap auth-failure	Unregister an event of authentication failure	Configure
no event snmptrap cold-start	Unregister an event of cold-start	Configure
no event snmptrap ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Unregister a DDM event of current, Rx power, temperature, Tx power, or voltage	Configure
no event snmptrap digital-input	Unregister an event of digital-input	Configure
no event snmptrap interface [lan1-lanN] down	Unregister an event of Interface DOWN	Configure
no event snmptrap interface [lan1-lanN] up	Unregister an event of Interface UP	Configure
no event snmptrap [power1 power2]	Unregister an event of power 1 or 2 failure	Configure
no event snmptrap warm-start	Unregister an event of warm-start	Configure
no event syslog auth-failure	Unregister an event of authentication	Configure

	failure	
no event syslog cold-start	Unregister an event of cold-start	Configure
no event syslog ddm [lanX-lanY] [current rx_power temperature tx_power voltage]	Unregister a DDM event of current, Rx power, temperature, Tx power, or voltage	Configure
no event syslog digital-input	Unregister an event of digital-input	Configure
no event syslog interface [lan1-lanN] down	Unregister an event of Interface DOWN	Configure
no event syslog interface [lan1-lanN] up	Unregister an event of Interface UP	Configure
no event syslog [power1 power2]	Unregister an event of power 1 or 2 failure	Configure
no event syslog warm-start	Unregister an event of warm-start	Configure

MAC ADDRESS TABLE GROUP

Command	Explanation	Mode
clear mac address-table dynamic	Flush dynamic MAC addresses in MAC table	Configure
mac address add [VID: 1-4094] [MAC_ADDR] [PORT]	Set a MAC address to MAC table	Configure
show mac address	Display MAC table	Configure
no mac address [VID: 1-4094] [MAC_ADDR]	Remove a MAC address from FDB	Configure

USB GROUP

Command	Explanation	Mode
usb auto-backup	Auto save to USB if running config is changed	Configure
usb auto-load	Auto load config from USB to switch	Configure
show usb auto-backup	Display USB auto backup activated status	Configure
show usb auto-load	Display USB auto load activated status	Configure
no usb auto-backup	Disable auto save	Configure
no usb auto-load	Disable auto load	Configure

FILE GROUP

Command	Explanation	Mode
copy running-config startup-config	Save running-config to startup-config	Configure
copy running-config usb [file]	Save running-config to USB	Configure
copy startup-config running-config	Restore from startup-config	Configure
copy usb firmware [file]	Upgrade firmware from USB	Configure
copy startup-config usb [file]	Save startup-config to USB	Configure

copy usb startup-config [file]	Restore startup-config from USB	Configure
upload file name [FILE_NAME]	Set uploading file name	Configure
upload server ip [SERVER_IP]	Set uploading server IP	Configure
upload tftp	Upload and update firmware via TFTP (slower)	Configure
upload wget	Upload and update firmware via HTTP (faster)	Configure
show upload file name	Display uploading file name	Configure
show upload server ip	Display uploading server IP	Configure
no upload file name	Default uploading file name	Configure
no upload server ip	Clear uploading server IP	Configure